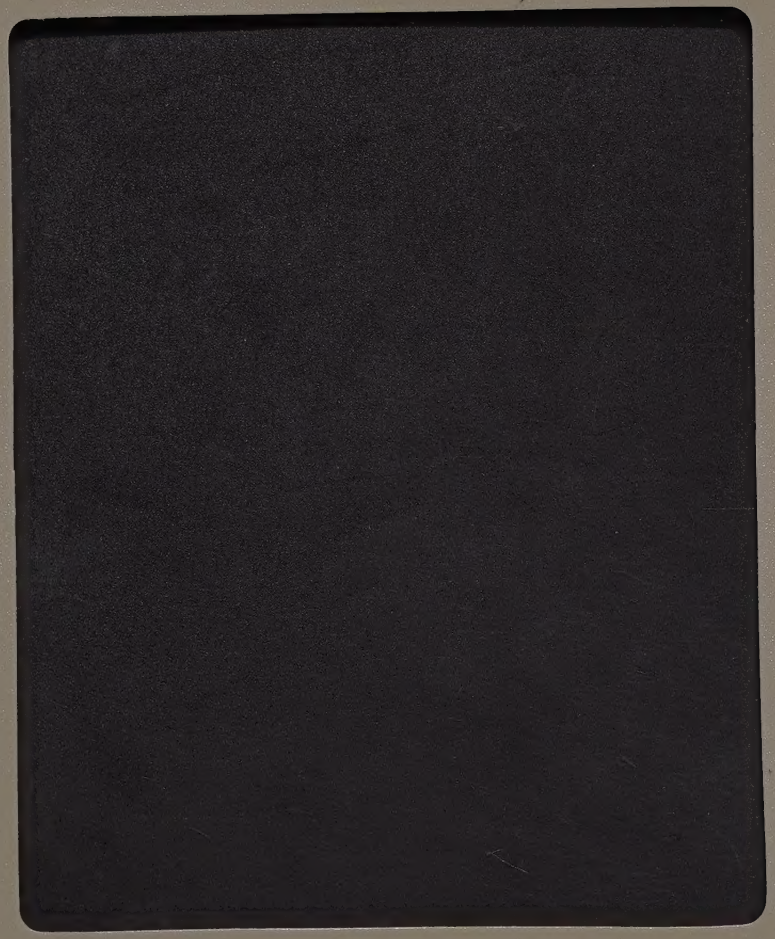

2175A
Digital Thermometer

Instruction Manual

P/N 445478
April 1976
Rev. 1 2/77

FLUKE®

©1981, John Fluke Mfg. Co., Inc., all rights reserved Litho in U.S.A.

WARRANTY

Notwithstanding any provision of any agreement the following warranty is exclusive:

The JOHN FLUKE MFG. CO., INC., warrants each instrument it manufactures to be free from defects in material and workmanship under normal use and service for the period of 1-year from date of purchase. This warranty extends only to the original purchaser. This warranty shall not apply to fuses, disposable batteries (rechargeable type batteries are warranted for 90-days), or any product or parts which have been subject to misuse, neglect, accident, or abnormal conditions of operations.

In the event of failure of a product covered by this warranty, John Fluke Mfg. Co., Inc., will repair and calibrate an instrument returned to an authorized Service Facility within 1 year of the original purchase; provided the warrantor's examination discloses to its satisfaction that the product was defective. The warrantor may, at its option, replace the product in lieu of repair. With regard to any instrument returned within 1 year of the original purchase, said repairs or replacement will be made without charge. If the failure has been caused by misuse, neglect, accident, or abnormal conditions of operations, repairs will be billed at a nominal cost. In such case, an estimate will be submitted before work is started, if requested.

THE FOREGOING WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS, OR ADEQUACY FOR ANY PARTICULAR PURPOSE OR USE. JOHN FLUKE MFG. CO., INC., SHALL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER IN CONTRACT, TORT, OR OTHERWISE.

If any failure occurs, the following steps should be taken:

1. Notify the JOHN FLUKE MFG. CO., INC., or nearest Service facility, giving full details of the difficulty, and include the model number, type number, and serial number. On receipt of this information, service data, or shipping instructions will be forwarded to you.

2. On receipt of the shipping instructions, forward the instrument, transportation prepaid. Repairs will be made at the Service Facility and the instrument returned, transportation prepaid.

SHIPPING TO MANUFACTURER FOR REPAIR OR ADJUSTMENT

All shipments of JOHN FLUKE MFG. CO., INC., instruments should be made via United Parcel Service or "Best Way"* prepaid. The instrument should be shipped in the original packing carton; or if it is not available, use any suitable container that is rigid and of adequate size. If a substitute container is used, the instrument should be wrapped in paper and surrounded with at least four inches of excelsior or similar shock-absorbing material.

CLAIM FOR DAMAGE IN SHIPMENT TO ORIGINAL PURCHASER

The instrument should be thoroughly inspected immediately upon original delivery to purchaser. All material in the container should be checked against the enclosed packing list. The manufacturer will not be responsible for shortages against the packing sheet unless notified immediately. If the instrument is damaged in any way, a claim should be filed with the carrier immediately. (To obtain a quotation to repair shipment damage, contact the nearest Fluke Technical Center.) Final claim and negotiations with the carrier must be completed by the customer.

The JOHN FLUKE MFG. CO., INC, will be happy to answer all applications or use questions, which will enhance your use of this instrument. Please address your requests or correspondence to: JOHN FLUKE MFG. CO., INC., P.O. BOX C9090, EVERETT, WASHINGTON 98206, ATTN: Sales Dept. For European Customers: Fluke (Holland) B.V., P.O. Box 5053, 5004 EB, Tilburg, The Netherlands.

*For European customers, Air Freight prepaid.

John Fluke Mfg. Co., Inc., P.O. Box C9090, Everett, Washington 98206

Rev. 6/81

Table of Contents

SECTION	TITLE	PAGE
1	**INTRODUCTION AND SPECIFICATIONS**	**1-1**
	1-1. INTRODUCTION	1-1
	1-9. SPECIFICATIONS	1-2
2	**OPERATING INSTRUCTIONS**	**2-1**
	2-1. INTRODUCTION	2-1
	2-3. SHIPPING INFORMATION	2-1
	2-6. INPUT POWER	2-1
	2-9. RACK INSTALLATION	2-1
	2-11. OPERATING FEATURES	2-1
	2-13. OPERATING NOTES	2-1
	2-15. Option Information	2-1
	2-17. Fuse Replacement	2-1
	2-19. Overload and Open Thermocouple Indication	2-3
	2-21. Thermocouple Compatibility	2-3
	2-23. CHARGE Switch	2-4
	2-25. OPERATION	2-4
3	**THEORY OF OPERATION**	**3-1**
	3-1. INTRODUCTION	3-1
	3-3. OVERALL FUNCTIONAL DESCRIPTION	3-1
	3-7. CIRCUIT ANALYSIS	3-2
	3-9. Digital Section	3-2
	3-14. Analog Section	3-3
4	**MAINTENANCE**	**4-1**
	4-1. INTRODUCTION	4-1
	4-3. SERVICE INFORMATION	4-1
	4-6. GENERAL MAINTENANCE	4-1
	4-7. Access Information	4-1
	4-9. Cleaning	4-1
	4-11. Fuse Replacement	4-1
	4-13. Service Tools	4-2
	4-15. PERFORMANCE TEST	4-2

(continued on page ii)

TABLE OF CONTENTS, *continued*

SECTION	TITLE	PAGE
	4-17. Set-Up Procedure	4-2
	4-19. Overload and Open Input	4-4
	4-21. Line Voltage Regulation	4-4
	4-23. Accuracy Test	4-4
	4-25. Internal Temperature Rise	4-6
	4-27. CALIBRATION	4-6
	4-31. Calibration Procedure	4-6
	4-39. CALIBRATION TECHNIQUES	4-8
	4-41. Thermocouple Accuracy Relating to the Reference-Junction Calibration Technique	4-8
	4-43. Over-All Accuracy	4-9
	4-45. TROUBLESHOOTING	4-9
5	**LISTS OF REPLACEABLE PARTS**	5-1
	5-1. INTRODUCTION	5-2
	5-4. HOW TO OBTAIN PARTS	5-2
	5-7. USE CODE EFFECTIVITY LIST	5-2
6	**OPTION AND ACCESSORY INFORMATION**	6-1
	6-1. INTRODUCTION	6-1
	6-3. CARRYING CASE (C80)	6-1
	6-5. CARRYING CASE (C86)	6-2
	6-7. THERMOCOUPLE PROBES	6-2
	6-9. FRONT PANEL DUST COVER (M00-100-714)	6-2
	6-11. RACK MOUNTING KITS	6-2
	6-13. TYPE SELECT PCB's	6-2
	6-15. BATTERY PACK, OPTION –01	6-2
	6-17. Installation	6-2
	6-19. Charging Ni-Cad Batteries	6-3
	6-23. DIGITAL OUTPUT UNIT, OPTION –02	6-3
	6-26. ANALOG OUTPUT UNIT, OPTION –04	6-3
7	**GENERAL INFORMATION**	7-1
8	**SCHEMATIC DIAGRAMS**	8-1

List of Illustrations

FIGURE	TITLE	PAGE
1-1.	Outline Drawing	1-4
2-1.	Controls, Indicators and Connectors	2-2
2-2.	Type Select PCB, Location and Installation Details	2-4
3-1.	2175A Simplified Block Diagram	3-1
3-2.	Measurement Cycle Waveforms	3-2
3-3.	Analog Section, Simplified Circuit Diagram	3-3
4-1.	Test Point and Adjustment Locations	4-3
4-2.	Voltage Divider-Calibrator Connection	4-4
4-3.	Room Temperature Lag Bath	4-5
4-4.	Reference-Junction Compensation Circuitry	4-9
6-1.	C80 Carrying Case	6-1
6-2.	C86 Carrying Case	6-2
6-3.	P20 Series Probe	6-2
8-1.	A1A1 Thermometer PCB Assembly Component Layout (2175A-1601)	8-2
8-2.	A1A1 Thermometer PCB Assembly Schematic (2175A-1001)	8-3
8-3.	A2 Display PCB Assembly Component Layout (2165A-1603)	8-4
8-4.	A2 Display PCB Assembly Schematic (2165A-1003)	8-5
8-5.	A3 Type Select PCB Assembly Component Layout (2160A-1612)	8-6
8-6.	A3 Type Select PCB Assembly Schematic (2160A-1012)	8-6

List of Tables

TABLE	TITLE	PAGE
1-1.	2175A Accessories	1-1
1-2.	2175A Options	1-2
1-3.	Specifications	1-2
4-1.	Test Equipment Requirements	4-2
4-2.	Performance Test Description	4-2
4-3.	Temperature Accuracy	4-5
4-4.	Reference-Junction Accuracy Limits	4-6
4-5.	Full Scale Calibration	4-7
4-6.	Bias Resistor Values	4-8
4-7.	Troubleshooting Guide	4-10
6-1.	Options, Accessories and Documentation Sources	6-1

Section 1

Introduction & Specifications

1-1. INTRODUCTION

1-2. The Model 2175A Digital Thermometer is a portable, four-digit, thermocouple thermometer capable of resolving 0.2°C or 0.2°F over a temperature range of –99.8 to 999.8°C or –99.8 to 999.8°F. It features push-button selection of °C or °F, a four digit LED display, reference junction compensation (to eliminate the need for an ice-bath reference junction), the choice of using any one of four thermocouple types (J, K, E or T) as the input device, dual-slope measurement techniques and digital linearization of the thermocouple inputs. Several options and accessories are also available for use with the 2175A.

1-3. Push button controls include a power switch (ON/OFF), a temperature scale switch (°C/°F) and a charge switch (ON/OFF). When the unit is equipped with Ni-Cad batteries and is connected to line power, the charge switch (OFF) selects a trickle charge rate and simultaneous use of the instrument, or (ON) selects a fast charge rate but deactivates the instrument.

1-4. The front-panel display consists of five, seven-segment high-intensity LED's, and features leading-zero suppression. Four of the LED's are used to display numeric data, including a minus sign for negative temperature indications. The fifth LED displays the selected °C or °F scale character. An open-thermocouple detector causes the display to blink when an open circuit is sensed at the thermocouple input terminals.

1-5. Rear-panel, screw-type input connectors are provided for attaching the selected thermocouple. These terminals are an integral part of an isothermal block and serve as the reference junction for the reference-junction compensator. (The reference-junction compensator provides the physical and electrical equivalent of, and eliminates the need for, an ice bath reference junction at 0°C or 32°F.)

1-6. The actual measurement range of the 2175A is determined by the type of thermocouple being used as the input device. Any one of four thermocouple types can be used; J, K, E or T. To ensure the proper linearization of the selected thermocouple input, a corresponding linearization program must be selected on the interior of the unit. Selection is accomplished by installing a type-select pcb which corresponds to the input thermocouple. A single type-select pcb is supplied with the unit to match the thermocouple type specified at the time of purchase. The remaining pcb's are individually available as accessories and are described in Table 1-1.

Table 1-1. 2175A ACCESSORIES

MODEL NO.	DESCRIPTION
C80	Carrying Case
C86	Carrying Case
P20J	J-Type Thermocouple Probe
P20K	K-Type Thermocouple Probe
P20T	T-Type Thermocouple Probe
M00-100-714	Front Panel Dust Cover
M00-200-611	Rack Mounting Kit, Offset
M00-200-612	Rack Mounting Kit, Center
M00-200-613	Rack Mounting Kit, Side-by-Side
2160A-7016	J-Type Select PCB
2160A-7017	K-Type Select PCB
2160A-7019	E-Type Select PCB
2160A-7018	T-Type Select PCB
2160A-7022	Interface Cable

1-7. Accessories and Options available for use with the 2175A are listed and described in Table 1-1 and 1-2, respectively. Detailed information concerning each option and accessory is given in Section 6 of this manual, Option and Accessory Information.

Table 1-2. 2175A OPTIONS

OPTION NO.	DESCRIPTION	COMPATIBILITY		
		–01	–02	–04
–01	Rechargeable Batteries	–	YES	YES
–02	Digital Output Unit	YES	–	NO
–04	Analog Output Unit	YES	NO	–

1-8. The 2175A is available in any one of three line power configurations: 100V ac, 50 to 440 Hz; 115V ac, 50 to 440 Hz; and 230V ac, 50 to 440 Hz. Specify the required configuraiton at the time of purchase.

1-9. SPECIFICATIONS

1-10. Specifications for the 2175A are given in Table 1-3.

Table 1-3. SPECIFICATIONS

ELECTRICAL

Compatible Thermocouple Types . . . . Unit can be calibrated to operate with any one of the following thermocouple types: J, K, T, E

Measurement Method . . . . . Dual-slope integration over a 100 ms period

Zero Drift . . . . . None. Automatic zero correction

Reading Rate . . . . . 2.5 readings per second

°C to °F Conversion . . . . . Switch selectable

Input Characteristics

Input Connections . . . . . Screw terminals on isothermal connector

Input Circuit . . . . . Two-wire, isolated

Input Impedance . . . . . $> 100\ M\Omega$

Input Current . . . . . < 500 pA

Source Impedance . . . . . $\leq 5k\Omega$. $5k\Omega$ causes $<0.2°C$ (.36°F) error with k thermocouple

Overload . . . . . Display flashes when input voltage exceeds full-scale temperature range

Open Input . . . . . Display flashes to indicate open at input terminals

Maximum Input Voltage (without damage) . . . . . 400V dc or ac peak continuously between inputs or between either input and ground

Maximum Common Mode Voltage (without damage) . . 400V dc or ac peak

Common Mode Rejection . . . . . $\geqslant 120$ dB @ 50, 60, 400 Hz $\pm 0.1\%$ with $1k\Omega$ source impedance unbalance

Normal Mode Rejection . . . . . $\geqslant 60$ dB @ 50, 60, 400 Hz $\pm 0.1\%$

Accuracy . . . . . See Table 1 for °C specifications and Table 2 for °F specifications

Response Time to Rated Accuracy . . . . < 2.0 seconds

Linearization . . . . . Digital with four selectable programs in LSI ROM

Linearization Programs

J, K, T and E . . . . . 32 straight line segments for positive inputs and 16 for negative inputs

Table 1-3. SPECIFICATIONS (Cont.)

Reference Junction Compensation

20 to 30°C (68 to 86°F)

J, K, T, E . . . . . 0.025 degrees per degree

0 to 20°C, 30 to 50°C (32 to 68°F, 86 to 122°F)

J, K . . . . . 0.032 degrees per degree

T, E . . . . . 0.045 degrees per degree

Temperature Coefficient . . . . . 0.005% of reading per °C

Internal Temperature Rise . . . . . ≤8°C (14.4°F)

Table 1. ACCURACY SPECIFICATIONS °C

THERMOCOUPLE TYPE	TEMPERATURE RANGE °C	RESOLUTION AND REPEATABILITY (±°C)	APPLICABLE TEMPERATURE RANGE °C	MAXIMUM ERROR INCLUDING NBS CONFORMITY (±°C)*				NBS CONFORMITY (±°C)
				CALIBRATION ACCURACY	20 min. to 24 hrs. 23 to 27°C	90 Days 20 to 30°C	1 Year 15 to 35°C	
J	–99.8 to 777.8	0.2	–99.8 to 0	0.5	0.7	1	1.2	0.19
			0 to 777.8	0.4	0.5	0.7	1.1	0.15
K	–99.8 to 999.8	0.2	–99.8 to 0	0.7	0.8	1.2	1.5	0.2
			0 to 999.8	0.5	0.6	1.1	1.4	0.18
T	–99.8 to 400	0.2	–99.8 to 0	0.6	0.6	1	1.6	0.19
			0 to 400	0.4	0.5	0.6	0.9	0.15
E	–99.8 to 999.8	0.2	–99.8 to 0	0.6	0.7	1	1.7	0.17
			0 to 999.8	0.5	0.6	1	1.4	0.18

*Includes reference junction and conformity errors. Excludes thermocouple errors.

Table 2. ACCURACY SPECIFICATIONS °F

THERMOCOUPLE TYPE	TEMPERATURE RANGE °F	RESOLUTION AND REPEATABILITY (±°F)	APPLICABLE TEMPERATURE RANGE °F	MAXIMUM ERROR INCLUDING NBS CONFORMITY (±°F)*				NBS CONFORMITY (±°F)
				CALIBRATION ACCURACY	20 min. to 24 hrs. 72 to 81°F	90 Days 68 to 86°F	1 Year 59 to 95°F	
J	–99.8 to 999.8	0.2	–99.8 to 32	0.9	1	1.6	2.1	0.27
			32 to 999.8	0.7	0.8	1.2	1.6	0.2
K	–99.8 to 999.8	0.2	–99.8 to 32	1.1	1.2	2.0	2.6	0.28
			32 to 999.8	1	1	1.4	1.8	0.26
T	–99.8 to 752	0.2	–99.8 to 32	0.9	0.9	1.7	2.9	0.3
			32 to 752	0.6	0.8	1	1.5	0.2
E	–99.8 to 999.8	0.2	–99.8 to 32	0.9	0.9	1.7	3.0	0.25
			32 to 999.8	0.8	0.9	1.3	1.8	0.25

*Includes reference junction and conformity errors. Excludes thermocouple errors.

Table 1-3. SPECIFICATIONS (Cont.)

GENERAL

Type of Display	LED, 0.56 in high.
Power Requirements	
Line Operation	115V ac ±10%, 50 to 440 Hz, 8W. 100V ac and 230V ac versions are also available.
Battery Operation	4.8V dc @ 350 mA (Four internal, D-size, Ni-Cad batteries, –01 option). Eight hours of operation on a full charge.
Size	2.52 in (H) x 8.55 in (W) x 9.9 in (D) (6,40 cm x 21,72 cm x 25,25 cm). See Figure 1-1.
Weight	
Without Batteries	2 lbs. 10 oz. (1.19 kg)
With Batteries	3 lbs. 15 oz. (1.79 kg)

ENVIRONMENTAL

Operating	0 to 50°C (32 to +122°F)
Storage	
With Batteries	–40 to 60°C (–40 to 140°F)
Without Batteries	–40 to 75°C (–40 to 167°F)
Humidity	
0 to 50°C (32 to 122°F)	80% non-condensing
0 to 35°C (32 to 95°F)	90% non-condensing
Shock and Vibration	Meets requirements of MIL Standard 810

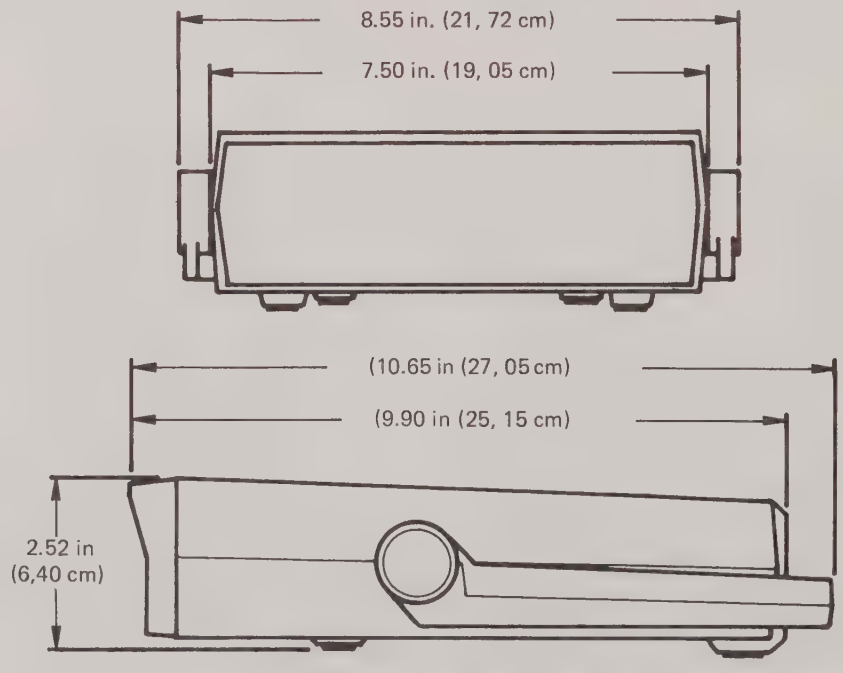

Figure 1-1. OUTLINE DRAWING

static awareness

A Message From

John Fluke Mfg. Co., Inc.

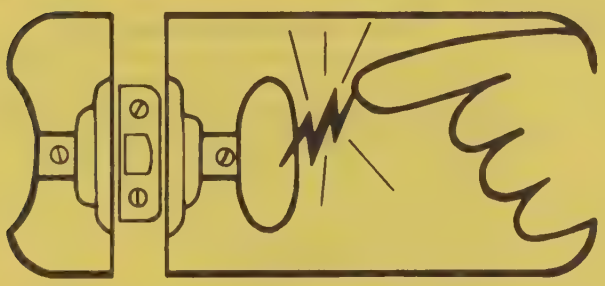

Some semiconductors and custom IC's can be damaged by electrostatic discharge during handling. This notice explains how you can minimize the chances of destroying such devices by:

1. Knowing that there is a problem.
2. Learning the guidelines for handling them.
3. Using the procedures, and packaging and bench techniques that are recommended.

The Static Sensitive (S.S.) devices are identified in the Fluke technical manual parts list with the symbol "⊗"

The following practices should be followed to minimize damage to S.S. devices.

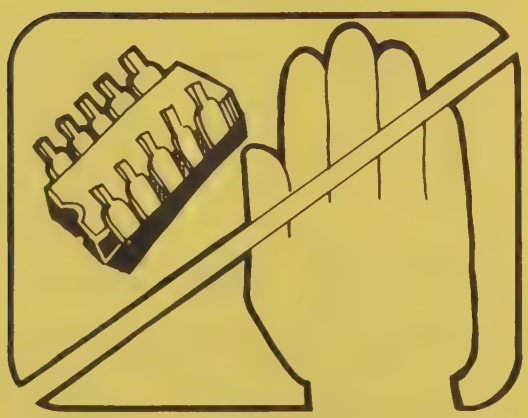

1. MINIMIZE HANDLING

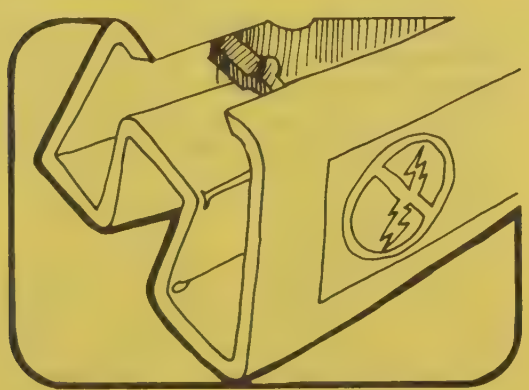

2. KEEP PARTS IN ORIGINAL CONTAINERS UNTIL READY FOR USE.

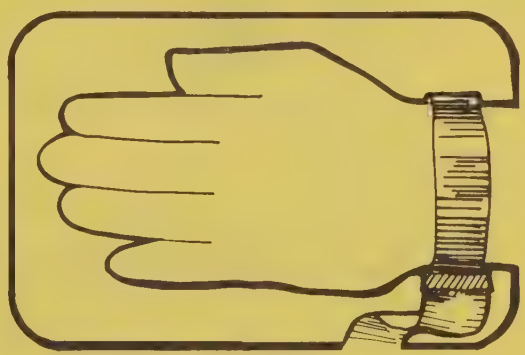

3. DISCHARGE PERSONAL STATIC BEFORE HANDLING DEVICES

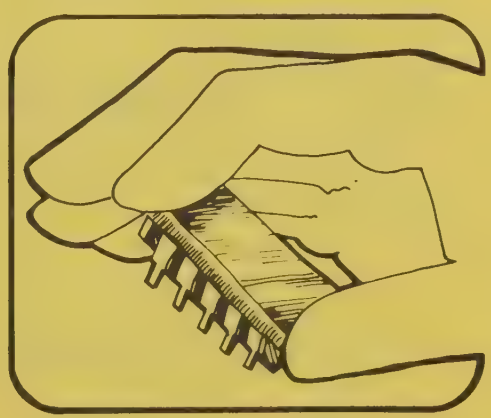

4. HANDLE S.S. DEVICES BY THE BODY

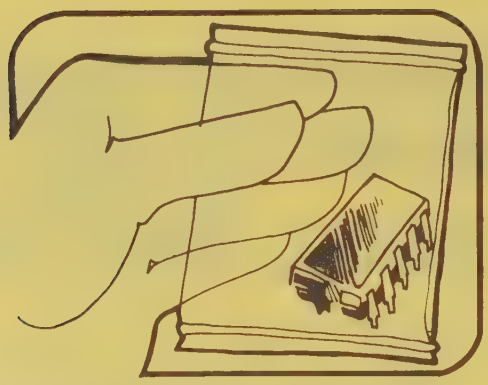

5. USE ANTI-STATIC CONTAINERS FOR HANDLING AND TRANSPORT

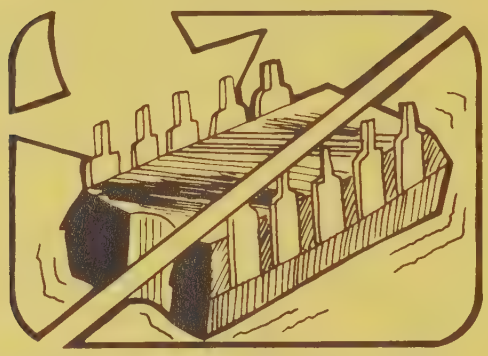

6. DO NOT SLIDE S.S. DEVICES OVER ANY SURFACE

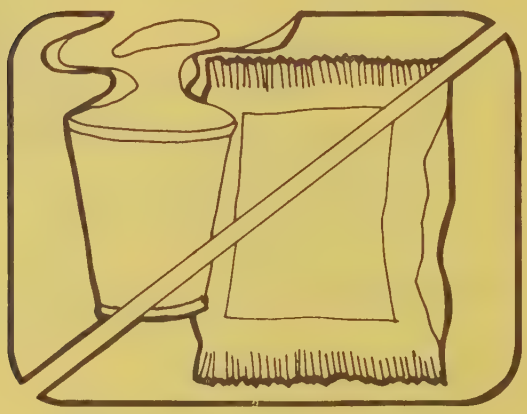

7. AVOID PLASTIC, VINYL AND STYROFOAM® IN WORK AREA

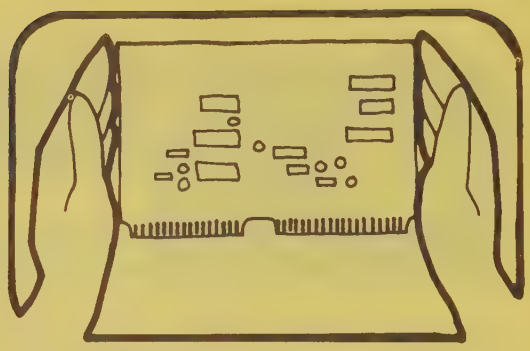

8. WHEN REMOVING PLUG-IN ASSEMBLIES, HANDLE ONLY BY NON-CONDUCTIVE EDGES AND NEVER TOUCH OPEN EDGE CONNECTOR EXCEPT AT STATIC-FREE WORK STATION. PLACING SHORTING STRIPS ON EDGE CONNECTOR USUALLY PROVIDES COMPLETE PROTECTION TO INSTALLED SS DEVICES.

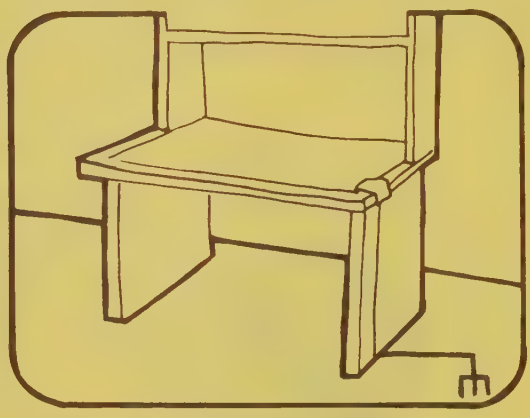

9. HANDLE S.S. DEVICES ONLY AT A STATIC-FREE WORK STATION
10. ONLY ANTI-STATIC TYPE SOLDER-SUCKERS SHOULD BE USED.
11. ONLY GROUNDED TIP SOLDERING IRONS SHOULD BE USED.

Anti-static bags, for storing S.S. devices or pcbs with these devices on them, can be ordered from the John Fluke Mfg. Co., Inc.. See section 5 in any Fluke technical manual for ordering instructions. Use the following part numbers when ordering these special bags.

John Fluke Part No.	Description
680892	5" x 8" Bag
680934	8" x 10" Bag
680942	8" x 12" Bag
680983	12" x 16" Bag
681023	18" x 18" Bag
Pink Poly Sheet 30" x 60" x 60 Mil P/N RC-AS-1200 $20.00	Wrist Strap P/N TL6-60 $7.00

PORTIONS REPRINTED
WITH PERMISSION FROM TEKTRONIX, INC.
AND GENERAL DYNAMICS, POMONA DIV.

® Dow Chemical

J0089C-07U8412/SE EN Litho in U.S.A.

Section 2
Operating Instructions

WARNING!

Due to the possible presence of lethal voltages, the procedures in paragraphs 2-17 and 2-21 should be performed by qualified personnel only.

2-1. INTRODUCTION

2-2. This section of the manual contains information about installation and operation of the Model 2175A Digital Thermometer. It is recommended that the contents of this section be read and understood before any attempt is made to operate the instrument. Should any difficulties arise during operation, please contact your nearest Fluke Technical Service Center, or the John Fluke Mfg. Co., Inc., P.O. Box 43210, Mountlake Terrace, WA 98043, Tel. (206) 774-2211. A list of Technical Service Centers is located in Section 7 of this manual.

2-3. SHIPPING INFORMATION

2-4. The 2175A is packaged and shipped in a foam-packed container. Upon receipt of the instrument, a thorough inspection should be made to reveal any possible shipping damage. Special instructions for inspection and claims are included in the shipping carton.

2-5. If reshipment of the instrument is necessary, the original container should be used. If the original container is not available, a new one can be obtained from the John Fluke Mfg. Co., Inc. Please reference the instrument model number when requesting a new shipping container.

2-6. INPUT POWER

2-7. The 2175A is factory wired to operate from one of three ac line voltages. These are: 100V ac, 50 to 440 Hz; 115V ac, 50 to 440 Hz; and 230V ac, 50 to 440 Hz. Before connecting the 2175A to the ac line, check to ensure that the instrument is wired to accommodate the local line voltage. A decal on the underside of the unit defines the particular line voltage required to operate the instrument.

2-8. The rear panel ac input connector is a three-prong, U-ground connector which permits the instrument to be connected, via the power cord, to the appropriate line voltage. The offset prong on this connector is connected to the 2175A power supply, and should be connected through the power cord to a high quality earth ground.

2-9. RACK INSTALLATION

2-10. The 2175A is designed for field and bench-top use or for installation in a standard 19-inch equipment rack using an accessory rack-mounting kit. Kits are available for left, right, center or side-by-side mounting of the 2175A. Information regarding installation of the rack mounting accessories is given in Section 6 of this manual, Option and Accessory Information.

2-11. OPERATING FEATURES

2-12. The location of all 2175A controls, indicators and connectors are shown in Figure 2-1, and described in Table 2-1.

2-13. OPERATING NOTES

2-14. The following paragraphs describe various conditions which should be considered before operating the 2175A.

2-15. Option Information

2-16. Supplementary operating instructions are necessary when operating a 2175A which is equipped with one of the available options. Detailed information regarding the operation of each available option is given in Section 6 of this manual, Option and Accessory Information.

2-17. Fuse Replacement

WARNING

Disconnect the unit from line power before attempting to replace the fuse.

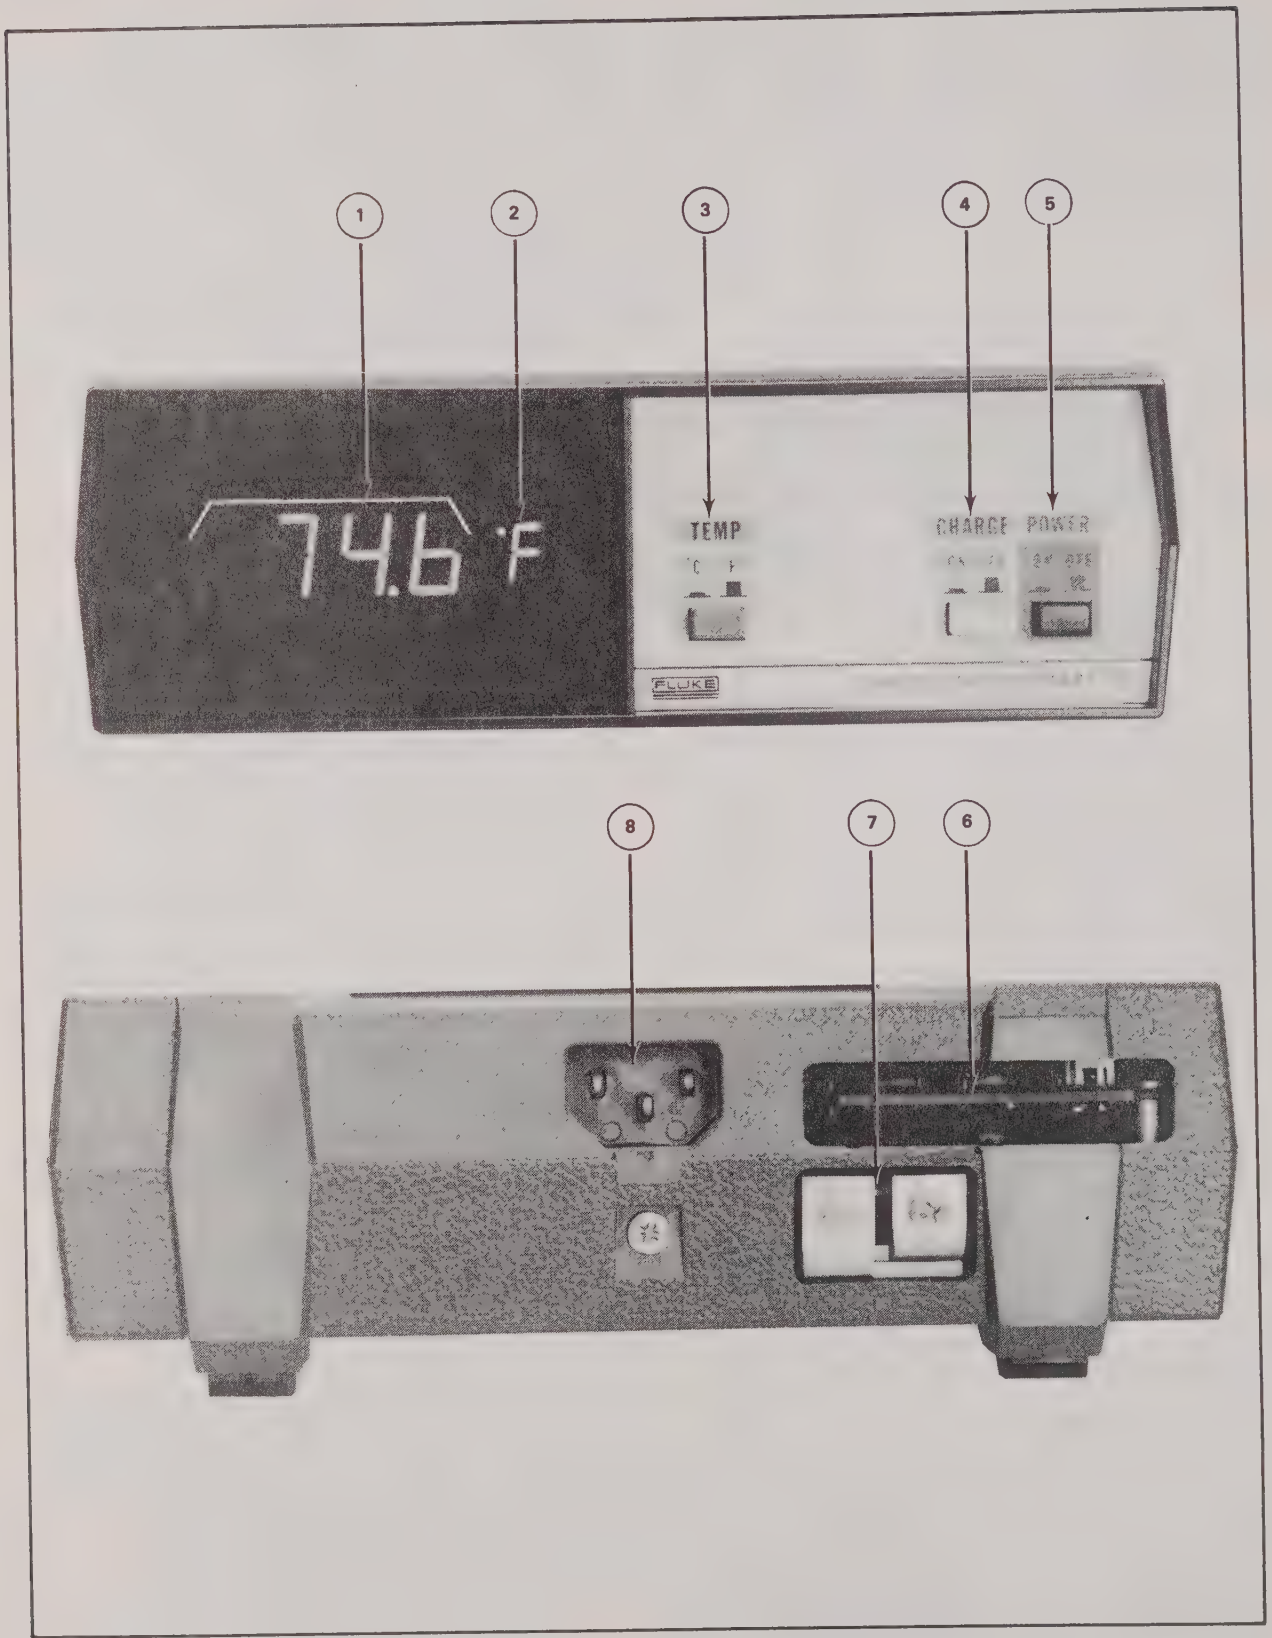

Figure 2-1. CONTROLS, INDICATORS AND CONNECTORS

Table 2-1. 2175A CONTROLS, INDICATORS AND CONNECTORS

REF. NO.	NAME	FUNCTION
1	Digital Display	Displays a four digit readout of the measured input temperature. Leading-zero suppression and a fixed decimal point are also included. A minus sign is displayed for negative temperature measurements. The absence of a polarity sign indicates a positive temperature measurement.
2	Temperature Scale Indicator	Displays the temperature scale represented by the digital display data; °C or °F.
3	TEMP Select Switch	Selects the temperature scale for the digital display. When the switch is depressed (IN), the °C scale is selected. The °F scale is selected when the switch is released (OUT).
4	CHARGE Switch	Selects the charge rate when the Battery Option (–01) is installed. When the switch is depressed (ON) the fast charge rate is enabled and the thermometer is not operational. The unit is operational when the CHARGE switch is released (OFF), and the batteries are charged at a trickle rate.
5	POWER Switch	Switches the 2175A on or off. The unit is turned on when the switch is depressed.
6	DOU, AOU I/O Port	Provides access to the input/output connector of the Digital Output Unit (Option –02) or the Analog Output Unit (Option –04) when either option is installed.
7	Thermocouple Input Connections	Provides screw-type input terminals for connecting the thermocouple to the thermometer.
8	Input Power Connector	Provides the means of connecting the instrument through the power cord to ac line power.

2-18. The ac line-input section of the 2175A power supply is fuse protected. The fuse is located on the interior of the unit near the power transformer. To access the fuse, remove the rear-panel retaining screw located beneath the ac line connector, and pull the case from the instrument. When replacement is necessary, use a MDL (Slo-blo) 1/8A fuse.

2-19. Overload and Open Thermocouple Indication

2-20. The front panel display, in addition to providing a measurement reading, is designed to serve as an overrange or open thermocouple indicator. When the measurement range of the input thermocouple is exceeded, or when the thermocouple inputs are open circuited, the display will blink. The blinking indications does not mean that the instrument is being exposed to a damaging input condition.

2-21. Thermocouple Compatibility

2-22. The 2175A is designed to operate in conjunction with a selected type of thermocouple probe. A decal on the bottom of the unit identifies the compatible thermocouple type. When necessary, the 2175A can be modified in the field to accommodate any one of the following thermocouple types: J, K, E or T. Use the following procedure to change thermocouple types:

a. Refer to Table 1-1 in Section 1 of this manual and order the type select pcb which corresponds to the desired thermocouple type. These pcb's are low-cost items and can be purchased from any one of the John Fluke Technical Service Centers (See Section 7) or from the John Fluke Mfg. Co., Inc.

b. Disconnect the 2175A from line power.

c. Remove any ribbon-cable connectors that may be attached to the rear of the 2175A.

d. Disconnect the power cord from the rear of the unit.

e. Remove the rear-panel screw located just below the power input connector.

f. Pull the 2175A front panel and pcb assembly out the front of the plastic case.

g. Unplug and remove the currently installed type select pcb from the position shown in Figure 2-2, and install the new one in its place.

NOTE

The thermocouple type is etched on the type select pcbs. When properly installed the arrows on the pcb point toward the digital display.

h. Place a piece of tape over the thermocouple type indications on the bottom-side decal, and mark the new thermocouple type on it.

i. Connect the new thermocouple type probe to the thermocouple input terminals. Observe polarity shown on bottom-side decal.

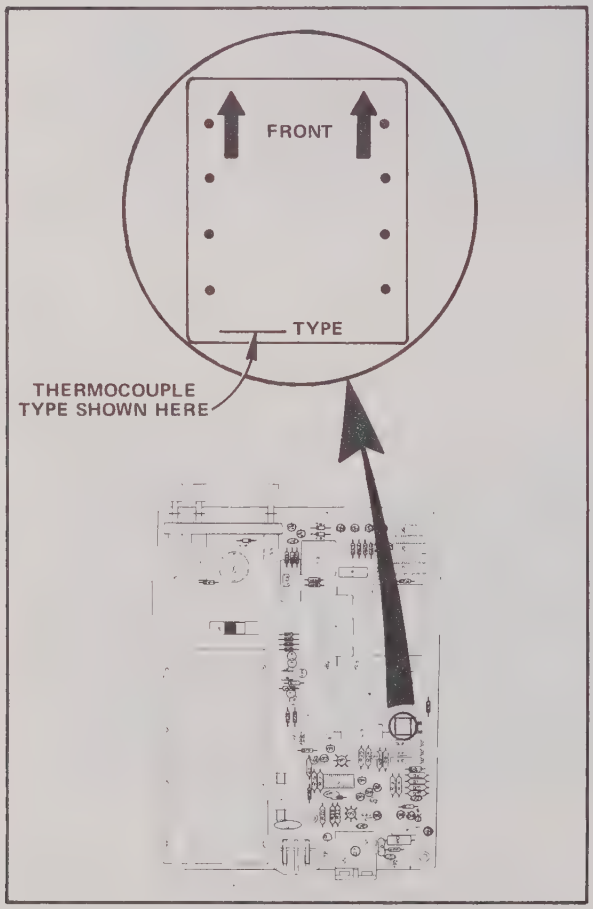

Figure 2-2. TYPE SELECT PCB, LOCATION AND INSTALLATION DETAILS

j. Connect the unit to line power, and complete the routine calibration procedure given in Section 4 (Maintenance) of this manual.

k. Install the unit in its case.

2-23. CHARGE Switch

2-24. The front panel CHARGE switch is operational only when the 2175A is equipped with the Battery Option (–01) and LINE/BATT switch on the interior of the unit is set to (BATT). (If the switch is not set to BATT, installed batteries will not provide power nor receive a charge.) When the charge function is enabled (BATT) and the unit is operating from line power, depressing the CHARGE switch causes the batteries to be charged at a fast rate. The thermometer operation is disabled for the duration of the fast charge period. When the CHARGE switch is out, the thermometer is operational and the batteries are charged at a trickle rate.

2-25. OPERATION

2-26. With reference to previous paragraphs in this section, use the following procedure to operate the 2175A:

a. Refer to the bottom decal on the unit and connect a compatible thermocouple probe to the thermocouple input terminals. Observe polarity as shown on decal.

b. Connect the unit to the appropriate line power (not necessary if the unit is equipped with a charged set of batteries) as defined on the bottom decal.

c. Energize the unit by depressing the POWER switch.

d. Set the CHARGE switch to the OFF position. See Section 6 for details concerning battery operation (Option –01).

e. Set the TEMP switch to the desired temperature scale, °C or °F.

f. Refer to Section 6 of this manual for instructions concerning the operation of the –02 and –04 Options.

g. Expose the thermocouple probe to a temperature within its specified range (See bottom decal). The probe temperature will be displayed on the front panel.

Section 3

Theory of Operation

3-1. INTRODUCTION

3-2. This section of the manual contains an overall functional description followed by a circuit analysis of the 2175A. Simplified circuit diagrams and timing diagrams are included, as necessary, to supplement the text. Detailed schematics are given in Section 8 of this manual.

3-3. OVERALL FUNCTIONAL DESCRIPTION

3-4. The Model 2175A Digital Thermometer, as shown in Figure 3-1, is a four-digit, thermocouple thermometer capable of resolving 0.2°C or 0.2°F over a temperature range of –99.8 to +999.8°C or –99.8 to 999.8°F. It features a cold-junction compensator (to eliminate the need for an ice-bath reference junction), dual-slope integration, LSI digital control logic (includes linearization programs for J, K, E and T type thermocouples), and a four-digit LED display.

3-5. In operation, the 2175A executes a continuous series of measurement cycles to update the temperature display. The measurement cycle is controlled entirely by an LSI digital IC, and includes three major subcycles; Auto-Zero period, Integrate period and Read period. Each subcycle controls the operation of the analog section of a dual-slope integrator which, in turn, generates a compare output to control the digital conversion performed by the LSI digital IC.

3-6. The configuration of the analog section of the 2175A, during each phase of the measurement cycle, is established by a combination of FET switches that are controlled by the LSI digital IC. The measurement cycle begins with the Auto-Zero period. During this period, the reference junction compensation voltage and the accumulated dc offset voltages present in the analog section are sampled and held by capacitors. These voltages are used later in the measurement cycle to cancel measurement errors introduced by offset voltages

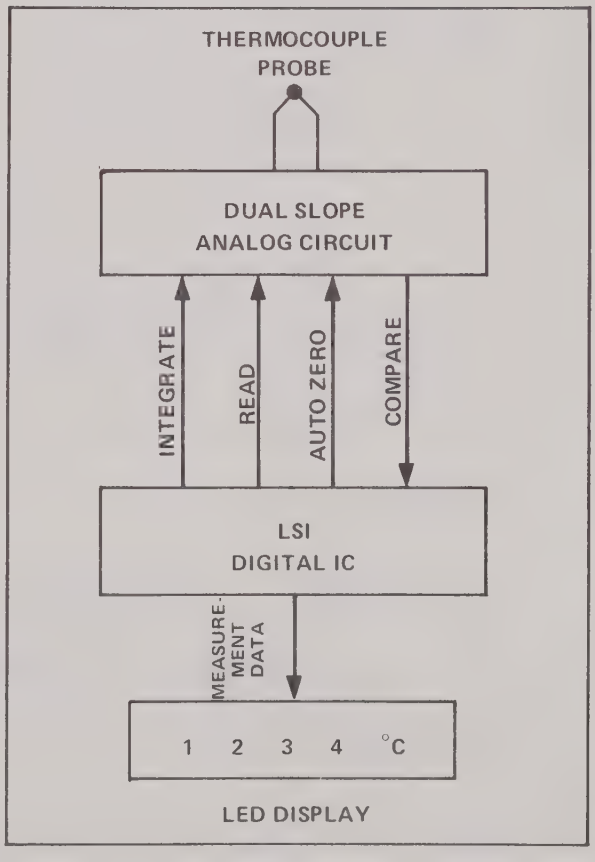

Figure 3-1. 2175A SIMPLIFIED BLOCK DIAGRAM

and reference junction voltage errors created at the input terminal connections. As a result, the final measurement is proportional to the thermocouple probe output voltage and does not include offset errors or reference junction voltage errors. During the Integrate period, the thermocouple input voltages (probe voltage and input terminal voltages) are applied to the integrator, and the algebraic sum of these volt-

ages is integrated over a 100 ms period. At the end of this period, the thermocouple input voltages are removed from the integrator and the Read period is started. A reference voltage is applied to the integrator during the Read period causing the integrator capacitor to be discharged at a linear rate. When the integrator output reaches zero, a compare signal is generated to end the Read period. The duration of the Read period is translated by the LSI digital IC to provide a digital indication proportional to the thermocouple probe temperature.

3-7. CIRCUIT ANALYSIS

3-8. Circuit analysis of the 2175A is discussed in two sections; digital and analog. The digital section is covered first, and particular attention is paid to the control it exercises on the analog section. The analysis of the analog section covers the analog measurement circuitry and the 2175A power supply.

3-9. Digital Section

3-10. The digital section of the 2175A consists of an LSI digital IC, a hex buffer, a seven-segment decoder/driver and an LED display. Its function is to convert the non-linear thermocouple probe voltage, as measured by the analog section, into a linear digital display. The display provides a direct reading of probe temperature in °C or °F.

3-11. The LSI digital IC contains all of the 2175A control logic and linearizing capability, and provides the hex buffer and seven-segment decoder with the data necessary to update the LED display. The linearization of the nonlinear input signal is accomplished by selecting one of four programs which vary the rate at which the measurement counts are accumulated. The program is selected to match a particular thermocouple type. Program selection is accomplished by a series of plug-in type-select pcb's which are available as accessories.

3-12. Measurement data is continuously strobed out of the LSI digital IC in bcd, character-serial format. At the end of each measurement cycle, an update flag is raised to signify that a new reading is available. When an overload occurs, the number of accumulated counts are stored and presented, along with a blanking pulse, as output data. The blanking pulse alternately turns the display on and off to indicate the presence of an overload.

3-13. The basic measurement cycle, as shown in Figure 3-2, comprises three subcycles; a 100 ms minimum Auto-

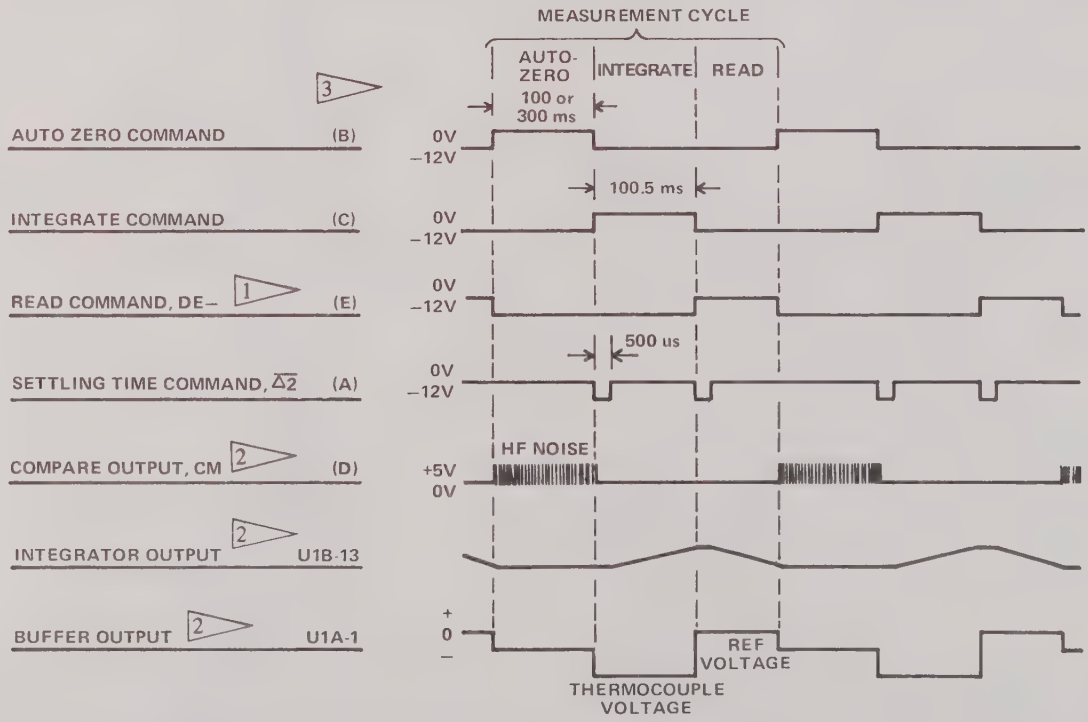
MEASUREMENT CYCLE
AUTO-ZERO
INTEGRATE
READ
100 or 300 ms
100.5 ms
500 us
AUTO ZERO COMMAND (B)
INTEGRATE COMMAND (C)
READ COMMAND, DE– 1 (E)
SETTLING TIME COMMAND, Δ2 (A)
COMPARE OUTPUT, CM 2 (D)
INTEGRATOR OUTPUT 2 U1B-13
BUFFER OUTPUT 2 U1A-1
0V
–12V
+5V
HF NOISE
REF VOLTAGE
THERMOCOUPLE VOLTAGE
1 DE– is generated for positive input voltages. Negative inputs enable the DE+ mode which, in turn, operates FET switch (F).
2 Waveform is shown for positive input votlage. It is inverted for negative inputs.
3 The letters in parenthesis represent FET switches operated by the commands. See Figure 3-3.

Figure 3-2. MEASUREMENT CYCLE WAVEFORMS

Zero period, a 100 ms Integrate period, and a variable Read period. The auto-zero period is extended to 300 ms when an overload occurs. To accommodate settling times in the analog section, a 500 us hold signal is inserted at the beginning and at the end of the Integrate period.

3-14. Analog Section

3-15. ANALOG MEASUREMENT CIRCUIT

3-16. The analog measurement circuit is shown in simplified form in Figure 3-3. It consists of a thermocouple input circuit, a reference-junction compensator, a voltage reference a Buffer Amplifier, an Integrator, a Comparator, and a combination of FET switches. The switches are shown in their open state and are closed by the measurement cycle commands generated by the LSI digital IC. Each switch is assigned a letter designation which corresponds to a measurement cycle command shown in Figure 3-2.

3-17. The Thermocouple Input circuit consists of an R-C filter and a pair of voltage protection diodes. The difference between the thermocouple probe voltage and the input terminal voltage is passed through the filter and appears at the arm of switch C.

3-18. The Reference-Junction Compensator consists of an isothermal block, a pair of screw type input terminals, and a transistor temperature sensor. The isothermal block maintains a known temperature differential between the input terminals and the temperature sensing transistor. Thermocouple voltages introduced by the dissimilar metals at the input terminals vary as the isothermal block adjusts to ambient temperature. Temperature changes are sensed by the forward-biased transistor which produces a correction voltage equivalent to the thermocouple voltage created at the input terminals. Predictable characteristics of a forward-biased P-N junction allow the Reference-Junction Compensator to function over a wide temperature range. The correction voltage is matched to the thermocouple probe type by a selected Offset Resistor which is supplied on a plug-in type select pcb. The correction voltage appears at the arm of switch B1.

3-19. The voltage reference consists of a resistor divider which is supplied by an accurate 6.4V dc reference voltage. The divider is calibrated to match the thermocouple probe type by a selected resistor on the plug-in type select pcb. Two voltages are available at the divider outputs; 0.5 x V ref, and 1.5 x V ref. These voltages appear at the arms of switches B2 and E, respectively.

3-20. The Buffer, Integrator and Comparator amplifiers combine to perform the analog functions of the Integrate, Read and Auto-Zero periods. The Buffer is used to provide integrator inputs during all three periods. The Integrator integrates the Buffer output voltage during the Integrate and Read periods, and functions, in combination with the Comparator, as a closed-loop amplifier during the Auto-Zero period.

3-21. During the first phase of each measurement cycle, the analog section goes through an Auto-Zero period. During this time, three auto-zero switches (B1, B2 and B3) are closed by the Auto Zero command from the LSI digital IC. Two of the switches (B1 and B2) charge the V ref capacitor to a level equal to the algebraic sum of the 0.5 x V ref output, plus the correction voltage generated by the Reference-Junc-

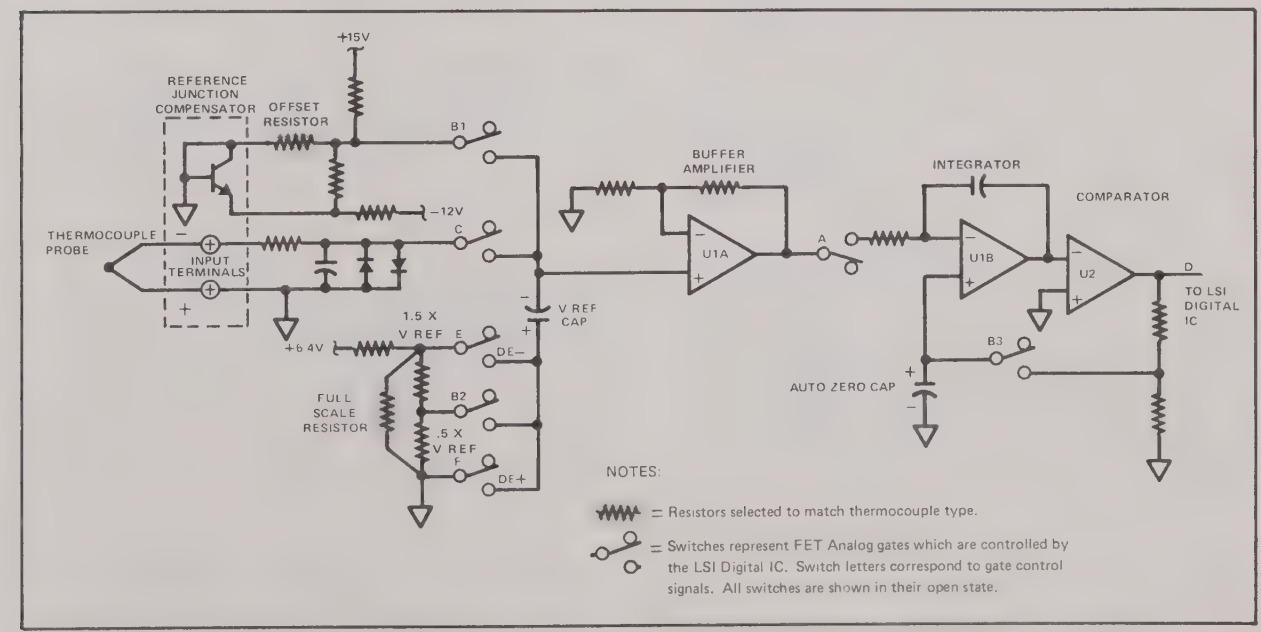

Figure 3-3. ANALOG SECTION, SIMPLIFIED CIRCUIT DIAGRAM

tion Compensator. At the same time, the correction voltage is amplified by the Buffer Amplifier and presented through switch A to the Integrator input. The third switch (B3) connects the Integrator and Comparator in a closed loop configuration and allows the Auto-Zero capacitor to charge to a value which is proportional to the Reference-Junction-Compensator correction voltage plus the offset voltages present in the Buffer, Integrator and Comparator amplifiers. At the end of the measurement cycle switches B1, B2 and B3 are opened. The V ref capacitor and the Auto-Zero capacitor retain their charge for use later in the measurement cycle.

3-22. The Integrate period starts on the leading edge of the Integrate Command from the LSI digital IC; switch A is open and switch C is closed. The thermocouple input voltage is applied through switch C to the Buffer input. After a 500 us settling period, switch A closes and the Buffer output voltage is applied to the Integrator input for 100 ms. As the integrator capacitor charges, the Integrator drives the Comparator output to either 0 or +5V dc to indicate the polarity of the thermocouple input voltage, positive or negative, respectively. The comparator output is sent to the LSI digital IC for use during the Read period. At the end of the Integrate period, the integrator capacitor is charged to a level and polarity that is proportional to the thermocouple probe voltage and switch C returns to its open state.

3-23. The Read period starts at the end of the Integrate period and one-of-two Read Modes is enabled depending upon the input polarity sensed by the comparator during the Integrate period. If a positive input is sensed, a DE– Read Mode is enabled. Similarly a DE+ Read Mode is enabled when a negative input is sensed.

3-24. If the DE– Read Mode is commanded, switch A is opened and E is closed. Switch E applies a 1.5 x V ref input to the positive side of the V ref capacitor. This voltage is algebraically added to the voltage stored in the V ref capacitor during the previous Auto-Zero period (0.5 x V ref + Reference-Junction-Compensator voltage). As a result, the input to the Buffer Amplifier is a positive voltage equal to V ref plus the Reference Junction-Compensator voltage.

3-25. If the DE+ Read Mode is commanded, switch A is opened and F is closed. Switch F grounds the positive side of the V ref capacitor and causes the Buffer amplifier input to be driven to the voltage stored in the V ref capacitor during the previous Auto-Zero period (0.5 x V ref + Reference-Junction Compensator voltage). As a result, the input to the Buffer Amplifier is a negative voltage equal to 0.5 x V ref plus the Reference-Junction-Compensator voltage.

3-26. After a 500 us settling time, switch A closes and the Buffer output voltage is applied to the Integrator input. This causes the integrator capacitor to discharge at a linear rate determined by the reference voltage. The discharge continues until the integrator output voltage reaches zero volts. the level existing prior to the integrate period. This level is sensed by the Comparator which signals the LSI digital IC to terminate the A/D conversion of measurement data.

3-27. Offset voltages present during the Integrate and Read periods are cancelled out by offset voltages that were sampled and held during the Auto-Zero period. However, the Reference-Junction-Compensator voltage (also sampled and held during Auto Zero) is added to the integrator voltage during the Integrate period. As a result, the displayed temperature is equal to the thermocouple probe temperature.

3-28. POWER SUPPLY

3-29. The 2175A power supply consists of a power transformer, fuse, power input connector, a dc-to-dc converter, battery holders, and associated regulating and charging circuits. The function of the power supply is to provide the unit with the necessary operating voltages during both battery and line operation, and to provide a means of recharging the Ni-Cad batteries, when installed. Operating voltages include: +5, +6.8, +15 and –12V dc, and 5V ac (rms). All voltages except the +5V dc and the 5V ac are regulated.

NOTE

The 5V ac output is used to power the –02 and –04 options. Since this voltage is not generated during battery operation, the –02 and –04 options are operational only when the 2175A is operated from line power.

3-30. The dc-to-dc converter is energized by a +5V dc input which is derived from either the power transformer during line operation, or the rechargeable batteries during battery operation. Conventional regulating techniques produce +6.8, +15 and –12V dc operating voltages at the dc-to-dc converter output.

3-31. When batteries are installed in the 2175A and an internal Line/Battery switch is set to BATT, the front panel CHARGE switch is enabled. During line operation, the CHARGE switch provides selection of either fast (ON) or slow (OFF) battery charge rates. The unit is operative only during slow-charge. However, during fast-charge the numeric display is blanked and the °C temperature scale character is lit. Lamp DS1 operates as a ballast in the fast charge mode.

Section 4
Maintenance

WARNING!

THESE SERVICING INSTRUCTIONS ARE FOR USE BY QUALIFIED PERSONNEL ONLY. TO AVOID ELECTRIC SHOCK, DO NOT PERFORM ANY SERVICING OTHER THAN THAT CONTAINED IN THE OPERATING INSTRUCTIONS UNLESS YOU ARE QUALIFIED TO DO SO.

4-1. INTRODUCTION

4-2. This section of the manual provides information about warranty, factory service, maintenance, performance testing, routine recalibration and recalibration after repair. The performance test is recommended when the instrument is received and later as a preventive maintenance tool or for testing after repair. The test verifies performance at several temperatures within the range of a given thermocouple type. Specifications are provided both for annual and for a more precise 90-day performance-testing cycle.

4-3. SERVICE INFORMATION

4-4. The instrument is warranted for a period of one year upon delivery to the original purchaser. The WARRANTY is located on the back of the title page located in the front of this manual.

4-5. Factory authorized calibration and service for each Fluke product is available at various world-wide locations. A complete list of these service centers is included in Section 7 of this manual. If requested, an estimate will be provided to the customer before any work is begun on instruments that are beyond the warranty period.

4-6. GENERAL MAINTENANCE

4-7. Access Information

4-8. Use the following procedure to gain access to the interior of the instrument:

a. Set the POWER switch to OFF and disconnect the ac power cord from the unit.

b. Disconnect the thermocouple probe at the input terminals.

c. Remove the phillips-head screw located in the center of the rear panel.

d. Pull the instrument out of the front of the case.

4-9. Cleaning

4-10. Clean the instrument periodically to remove dust, grease and other contamination. Use the following procedure:

CAUTION!

Do not use aromatic hydrocarbons or chlorinated solvents for cleaning. They will react with plastic materials used in manufacture of the instrument.

a. Clean the front panel and case with a soft cloth dampened with a mild solution of detergent and water.

b. Clean the surface of the pcb using clean dry air at low pressure ($\leqslant$20 psi). If grease is encountered, spray with Freon T. F. Degreaser or anhydrous alcohol and remove grime with clean dry air at low pressure.

4-11. Fuse Replacement

WARNING!

DISCONNECT THE UNIT FROM LINE POWER BEFORE ATTEMPTING FUSE REPLACEMENT.

4-12. The input power fuse is located on the interior of the unit near the ac line connector. If replacement is necessary, use an MDL (Slo-blo) 1/8A fuse.

4-13. Service Tools

4-14. No special tools are required for maintenance or repair.

4-15. PERFORMANCE TEST

4-16. Table 4-1 lists the equipment required for performance testing and recalibration. If the recommended model of test equipment is not available, a substitute that meets the minimum use specifications may be used. Table 4-2 outlines the Performance Test. A Performance Checklist at the end of this section may be reproduced or removed to provide a written record of results. The Performance Test verifies instrument performance to specifications for initial acceptance or for maintenance. (Periodic recalibration requires the calibration procedure beginning in paragraph 4-27). If the thermometer fails to meet specifications, it requires recalibration or repair. Review Table 4-2, then continue.

Table 4-1. TEST EQUIPMENT REQUIREMENTS

TEST EQUIPMENT	MINIMUM USE SPECIFICATIONS	RECOMMENDED MODEL
Thermocouple Probes	Type J, K, T, E ANSI C96.1 (Select type compatible with thermometer)	Omega TJ36 Series, Grounded Sheath
Mercury, thermometer (either °C or °F)	0.02°C Resolution 0.05°F Resolution	Princo Model ASTM-56C Princo Model ASTM-56F
Dewar Flask/Cap	1-pint capacity	Thermos
DC Voltage Calibrator	Output Voltage: 0 to 10V Accuracy: 0.002% Resolution: 10 mV	Fluke Model 343A
Voltage Divider 100:1 or Kelvin-Varley Divider (Shunt output with 1 uf capacitor)	Ratio: 0.005%	Fluke A21-5 or Fluke 720A or Fluke 750A
Variable Line-Voltage Transformer	100, 115, 230V ac, as required, ±10%	General Radio VARIAC W5HM
Decade Resistor	Accuracy: 1% Ranges: 1K, 10K and 100K	General Radio 1434

NOTE

The Performance Test should be conducted at an ambient temperature of 25.0 ± 2.0° C (77.0 ± 3.6° F).

4-17. Set-up Procedure

4-18. The following steps prepare for performance testing:

a. Remove the thermometer from its case.

b. Check the position of the line-battery switch. An instrument with no batteries should have the switch set to LINE position. An instrument containing batteries should have the switch set to the BATT position.

c. Locate the RJD switch on the main pcb (See Figure 4-1) and set it to the RJD position. (This defeats the reference-junction circuitry.)

Table 4-2. PERFORMANCE TEST DESCRIPTION

TEST	PERFORMANCE SPECIFICATIONS	TEST METHOD	BEGINNING TEXT PARAGRAPH
Setup			4-17
Overload and Open Input Test	The display flashes to indicate both over range input voltages and open input terminals.	An over range voltage is applied to the thermocouple input terminals, and the input terminals are open circuited.	4-19
Line Voltage Regulation	Satisfactory performance with any line voltage within ±10% of nominal; 100, 115 or 230V ac	The display is monitored during the accuracy test as the line voltage is varied.	4-21
Accuracy Test	Temperature Accuracy as stated in Table 4-3	Known input voltages are substituted for the thermocouple inputs. Cardinal-point checks ensure accuracy over the entire temperature range.	4-23
Internal Temperature Rise	< 8°C (14.4°F) above ambient	The thermocouple input terminals are shorted and the temperature of the reference junction is displayed.	4-25

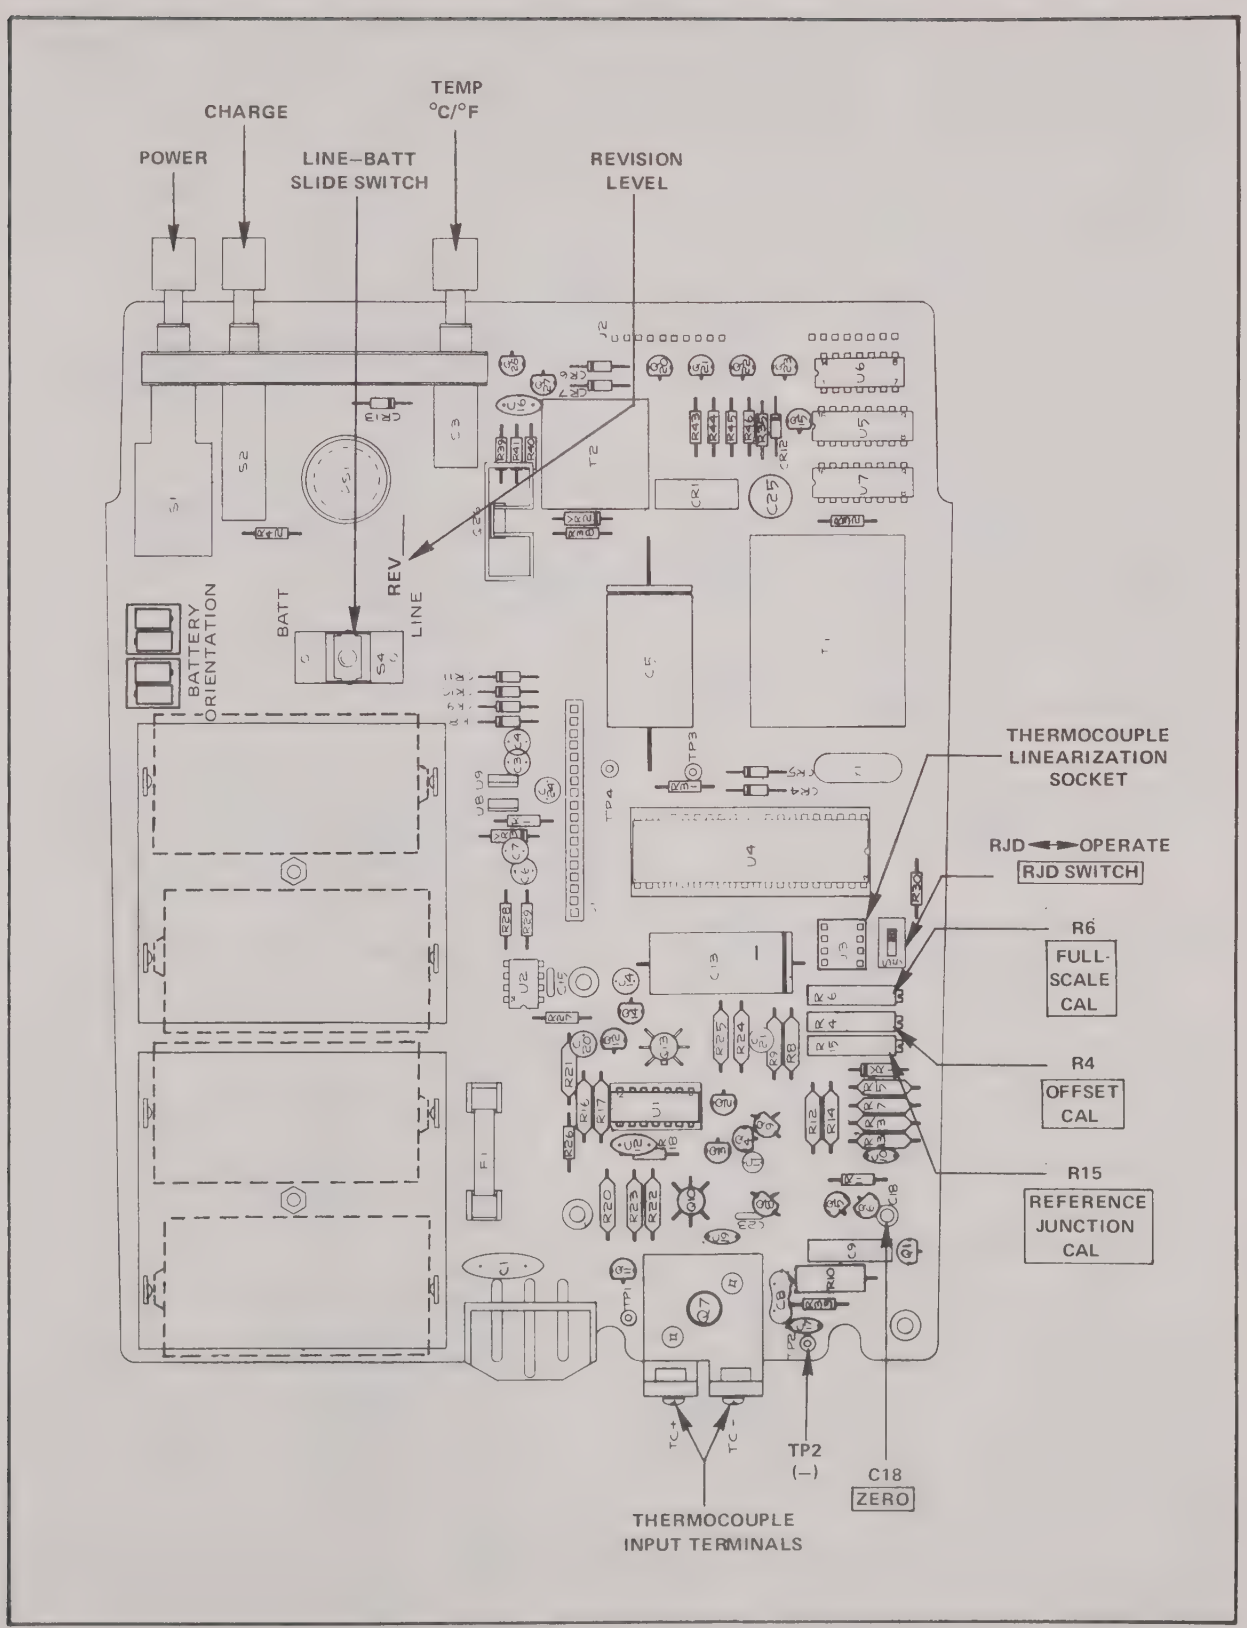

Figure 4-1. TEST POINT AND ADJUSTMENT LOCATIONS

d. Connect a voltage divider to a dc voltage calibrator as in Figure 4-2. (See Table 4-1 for specifications.)

e. Connect the voltage-divider output to the thermometer input terminals. Match polarity.

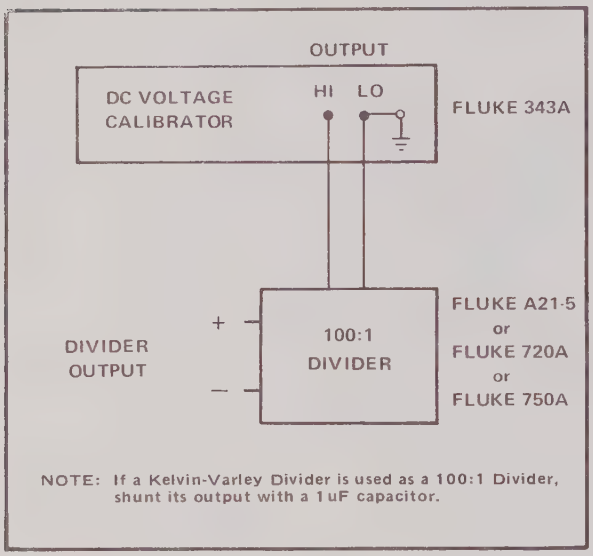

Figure 4-2. VOLTAGE DIVIDER–CALIBRATOR CONNECTION

f. Connect a variable line-power transformer to line power and adjust the output to the nominal line voltage at which the thermometer is designed to operate; 100, 115, or 230V ac.

g. Connect a power cord between the transformer output and the thermometer ac line connector.

h. Set the thermometer front-panel controls as follows:

1. POWER switch to ON.

2. TEMP switch to °F or °C.

3. CHARGE switch to OFF.

i. Set the calibrator to zero volts output, 10 volt range, and turn it on.

4-19. Overload and Open Input

4-20. The following procedure tests the thermometer overload and open-circuit detectors:

a. Set the calibrator output to 10V dc. The thermometer display should begin to flash. While the display is lit, it should read the high end of the temperature range assigned to the compatible thermocouple type:

J	=	999.8° F	or	777.8° C
K	=	999.8° F	or	999.8° C
T	=	752.0° F	or	400.0° C
E	=	999.8° F	or	999.8° C

b. Set the calibrator output to OV dc.

c. Remove the input connections at the thermometer thermocouple input terminals. The display should begin to flash and read the low end of the temperature range:

J	=	-99.8° F	or	-99.8° C
K	=	-99.8° F	or	-99.8° C
T	=	-99.8° F	or	-99.8° C
E	=	-99.8° F	or	-99.8° C

d. This completes the Overload and Open-Input test.

4-21. Line Voltage Regulation

4-22. Line voltage regulation is tested in conjunction with the accuracy test given in the following paragraphs. As the accuracy test is executed, vary the line voltage ± 10% with the variable line-power transformer to ensure the proper operation within the line-voltage limits.

4-23. Accuracy Test

4-24. The following procedure tests the accuracy of the thermometer.

a. Connect the voltage-divider leads to the thermocouple input terminals. Match polarity.

b. Refer to Table 4-3 and select the group of values that correspond to the thermocouple type used with the thermometer.

c. Sequentially, set the calibrator to obtain each of the divider output voltages listed within the selected group, and check the thermometer display against the appropriate display limits; 90-day or 1-year. Vary the ac voltage over the specified ± 10% operating range. Check to see that the thermometer is still reading within accuracy specifications.

d. Remove the voltage divider from the thermometer input.

e. Set the RJD switch to the operate position.

f. Install the thermometer in its case.

Table 4-3. TEMPERATURE ACCURACY

TYPE	DIVIDER OUTPUT (mV dc)	°F DISPLAY LIMITS 90 DAY	°F DISPLAY LIMITS 1 YEAR	DIVIDER OUTPUT (mV dc)	°C DISPLAY LIMITS 90 DAY	°C DISPLAY LIMITS 1 YEAR
J	29.263	990.8 to 993.2	990.4 to 993.6	42.640	754.9 to 756.3	754.5 to 756.7
	2.288	110.8 to 113.2	110.4 to 113.6	2.288	43.7 to 45.1	43.3 to 45.5
	−1.643	−29.6 to −26.4	−30.1 to −25.9	−2.175	−45.4 to −43.4	−45.6 to −43.2
	−3.198	−89.6 to −86.4	−90.1 to −85.9	−3.686	−78.8 to −76.8	−79 to −76.6
K	22.059	990.6 to 993.4	990.2 to 993.8	40.404	976.7 to 978.9	976.4 to 979.2
	2.709	150.6 to 153.4	150.2 to 153.8	0.884	21.1 to 23.3	20.8 to 23.6
	−1.691	−50 to −46	−50.6 to −45.4	−1.691	−45.6 to −43.2	−45.9 to −42.9
	−2.475	−90 to −86	−90.6 to −85.4	−2.848	−79 to −76.6	−79.3 to −76.3
T	20.188	731 to 733	730.5 to 733.5	19.497	377.2 to 378.4	376.9 to 378.7
	0.879	71 to 73	70.5 to 73.5	0.879	21.6 to 22.8	21.3 to 23.1
	−1.240	−29.7 to −26.3	−30.9 to −25.1	−2.009	−56.6 to −54.6	−57.2 to −54
	−2.370	−89.7 to −86.3	−90.9 to −85.1	−2.720	−78.8 to −76.8	−79.4 to −76.2
E	39.694	990.7 to 993.3	990.2 to 993.8	74.694	976.8 to 978.8	976.4 to 979.2
	2.694	110.7 to 113.3	110.2 to 113.8	2.694	43.4 to 45.5	43 to 45.8
	−1.897	−29.7 to −26.3	−31 to −25	−3.080	−56.6 to −54.6	−57.3 to −53.9
	−3.641	−89.7 to −86.3	−91 to −85	−4.196	−78.8 to −76.8	−79.5 to −76.1

g. Connect a thermocouple of the appropriate type to the thermocouple input terminals. Match polarity. J, K, T and E thermocouples have a red wire for the negative lead.

h. Place the thermocouple in a room-temperature lag bath. (See Figure 4-3 for an illustration of lag-bath construction. Two holes should be drilled in the thermos lid to provide a snug fit for the mercury thermometer and thermocouple probe.)

i. Refer to Table 4-4. Determine if the thermometer display is within the specified range of the lag-bath temperature reading.

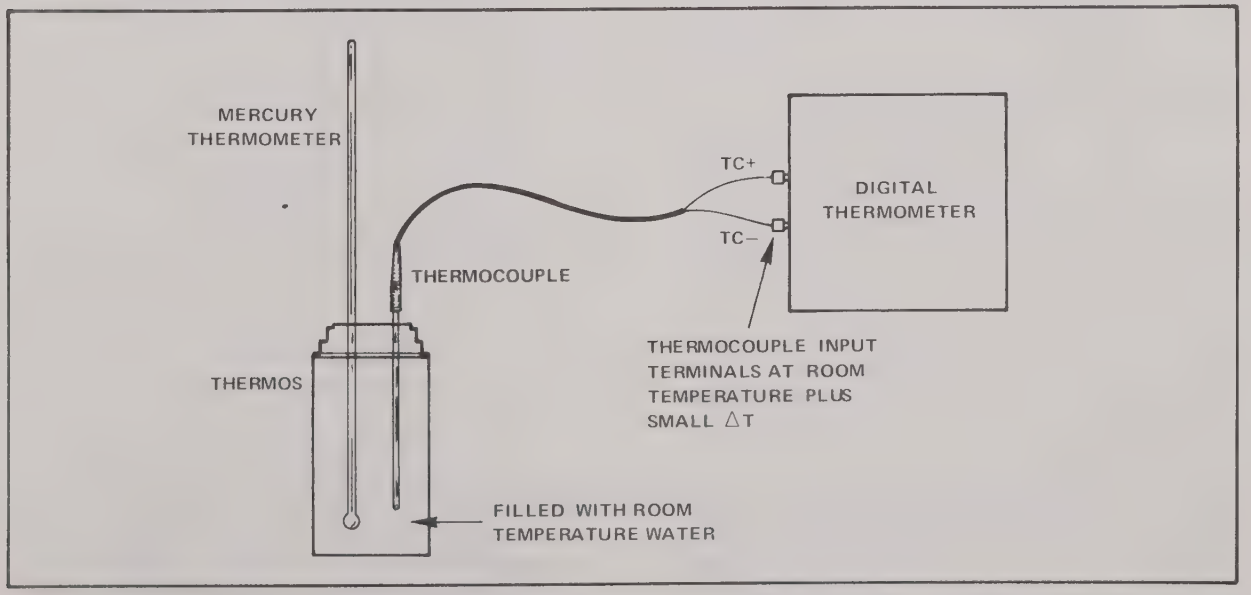

Figure 4-3. ROOM TEMPERATURE LAG BATH

NOTE

Allow sufficient time for the mercury thermometer to come to a stable lag-bath temperature reading.

Table 4-4. REFERENCE-JUNCTION ACCURACY LIMITS

TYPE THERMOCOUPLE	°F	°C
J	±1.5°	±1.5°
K	±2.0°	±1.5°
T	±1.5°	±1.5°
E	±1.5°	±1.5°
The thermometer should read within the above limits for either the 90-day or 1-year check.		

j. This completes the accuracy test portion of the Performance Test.

4-25. Internal Temperature Rise

4-26. The following procedure measures the thermometer's internal temperature as sensed by the reference junction:

a. Connect a copper wire between the thermocouple input terminals (in place of the thermocouple leads used in the preceding test).

NOTE

This procedure assumes that the thermometer has been energized for at least 30 minutes.

b. Monitor the ambient temperature (room temperature) using a mercury thermometer near the back of the digital thermometer.

c. The digital thermometer will display the temperature of the internal reference junction. This temperature should not exceed the ambient temperature by more than 8.0° C (14.4° F).

d. Remove the short from the thermocouple input terminals.

e. This completes the test for internal temperature rise.

4-27. CALIBRATION

4-28. The thermometer should be calibrated every year or every 90 days, depending on the desired accuracy. Calibration should be performed also after the thermometer has been repaired or after the thermocouple linearizer (type-select) pcb has been changed.

4-29. Calibration of either the °F or °C scale, ensures the accuracy of both scales. Either scale can be verified after calibration by executing the accuracy portion of the Performance Test.

4-30. Observe all notes and precautions to ensure accuracy of calibration and to avoid damage to the digital thermometer. Observe also that reference-junction adjustment (Paragraph 4-39) is not required for routine or periodic calibration.

4-31. Calibration Procedure

4-32. SET-UP FOR CALIBRATION

a. Complete the equipment connections shown in Figure 4-2, by doing the following:

1. Connect the 100:1 divider specified in Table 4-1.
2. Apply power to the calibrator and turn it on. Allow sufficient warm-up time to assure calibration-output-voltage accuracy.

b. Remove the thermometer from its case. See paragraph 4-7.

c. Check the position of the battery-line switch. An instrument with no batteries should have the switch set to the LINE position. An instrument with batteries installed should have the switch set to the BATT position.

d. Locate the RJD switch on the main pcb. Set it to the RJD position. (This defeats the reference-junction circuitry.)

e. Connect a short length of copper wire between the thermocouple input terminals.

f. Connect the digital thermometer and calibrator to the appropriate line voltage(s).

g. Set the thermometer front panel controls as follows:

1. POWER switch to ON.
2. TEMP switch to °F or °C.
3. CHARGE switch to OFF.

4-33. ZERO ADJUSTMENT

a. Adjust C18 to obtain a steady or flashing 0.0 or –0.0 for the Celsius scale, or to obtain a steady 32.0 for the Fahrenheit scale.

4-34. FULL SCALE ADJUSTMENT

a. Determine the thermocouple compatible with the thermometer. The decal on the bottom of the thermometer case or the markings on the plug-in linearizer (type-select) pcb indicate the thermocouple type. (See Figure 4-1.)

b. Remove the short and connect the 100:1 divider output to the thermocouple input terminals. Match polarity.

c. Refer to Table 4-5 and set the calibrator output to obtain the voltage divider output specified for the compatible thermocouple type, for the degree scale being used.

Table 4-5. FULL SCALE CALIBRATION

PROBE TYPE	°F		°C	
	DIVIDER OUTPUT (mV dc)	DISPLAY READING	DIVIDER OUTPUT (mV dc)	DISPLAY READING
J	+29.263	992.0°F	42.640	755.6°C
K	+22.059	992.0°F	40.404	977.8°C
T	+20.188	732.0°F	19.497	377.8°C
E	+39.694	992.0°F	74.694	977.8°C

d. Adjust the FULL-SCALE CAL potentiometer, R6 (Figure 4-1), to obtain the temperature display specified in Table 4-5.

4-35. OFFSET ADJUSTMENT

a. Set the RJD switch to the operate position.

b. Remove the divider leads from the thermocouple input terminals.

c. Short the thermocouple input terminals with a small piece of copper wire.

d. Remove the 100:1 divider from the calibrator output.

e. Set the calibrator to the 10V dc range.

f. Adjust the calibrator output to .5785V dc.

CAUTION!

Be sure the voltage output of the calibrator is .5785V dc before proceeding to the next step. Improper voltage could damage the digital thermometer. Do not use the divider to obtain .5785V dc because the output impedance will create an error.

g. Connect the positive lead from the calibrator to TC+, the positive thermocouple input terminal.

h. Connect the negative lead from the calibrator to Test Point 2. (TP2(–) in Figure 4-1).

i. Adjust the OFFSET CAL potentiometer, R4, for a temperature display of 25.0° C (77.0° F).

j. Remove the calibrator output from the plus input terminal and TP2(–).

k. Remove the short at the thermocouple input terminals.

l. If the thermometer is being calibrated on a routine calibration cycle, or because of thermocouple type-change, this completes calibration. Reassemble the thermometer.

m. If the thermometer is being recalibrated because of repair or if reference-junction adjustment is desired, proceed with paragraph 4-39.

4-36. REFERENCE-JUNCTION ADJUSTMENT

a. Connect a compatible thermocouple probe to the input terminals. Match polarity. J, K, T and E thermocouples have a red wire for the negative lead.

b. Place the thermocouple in a room-temperature lag bath. (See Figure 4-3 for an illustration of lag-bath construction.)

c. Use an accurate mercury thermometer to monitor the temperature of the lag-bath. (See Table 4-1.)

d. Adjust the REFERENCE-JUNCTION CAL potentiometer, R15, to obtain a display that agrees with the lag-bath temperature.

e. Remove the thermocouple and reassemble the digital thermometer.

4-37. REFERENCE-JUNCTION BIAS-RESISTOR SELECTION

4-38. If the reference-junction transistor Q7 is replaced, then the reference-junction bias resistor R14 must also be replaced. This is a selected resistor which must be matched to Q7. To select the resistor:

a. Complete the calibration paragraphs 4-32 through 4-35.

b. Connect a compatible thermocouple probe to the input terminals. Match polarity. J, K, T and E

thermocouples have a red wire for the negative lead.

c. Center the reference-junction pot R15.

d. Connect a decade resistance box that has ranges including 1K, 10K and 100K, in place of the reference-junction bias resistor R14. (See Table 4-1).

e. Place the thermocouple in a room-temperature lag bath. (See Figure 4-3 for an illustration of lag-bath construction.)

f. Use an accurate mercury thermometer to monitor the temperature of the lag bath. (See Table 4-1.)

g. Adjust the decade resistance box for the value from Table 4-6 that causes the thermometer to read closest to lag-bath temperature. This will be the value of the reference-junction bias resistor R14.

h. Disconnect the decade box and install the selected R14.

i. Adjust the reference junction potentiometer so that the thermometer reading matches the lag-bath temperature.

j. Remove the thermocouple and reassemble the digital thermometer.

k. This completes the selection of R14. This also completes the calibration of the reference junction.

Table 4-6. BIAS RESISTOR VALUES

VALUE	JOHN FLUKE PART NUMBER	VALUE	JOHN FLUKE PART NUMBER
49.9K	268821	90.9K	223537
52.3K	237248	100K	248807
54.9K	271353	110K	234708
57.6K	289116	124K	288407
60.4K	291419	140K	289439
63.4K	235382	162K	375998
68.1K	236828	191K	375923
73.2K	237222	237K	288373
78.7K	289058	309K	235283
84.5K	229492	562K	235358

4-39. CALIBRATION TECHNIQUES

4-40. Calibration of the reference junction (R15) can be performed using any type of thermocouple. Once the reference junction has been calibrated for one type of thermocouple, it will be in calibration for use with any other thermocouple type. Therefore, a calibration facility that maintains several digital thermometers which are configured for different thermocouple types, requires only one thermocouple probe and its corresponding linearizer (type-select) pcb in order to calibrate the reference junction of all of the instruments. A K-type thermocouple and linearizer pcb are recommended. The following procedure illustrates:

a. Calibrate the repaired thermometer with the K-type thermocouple and K-type linearizer pcb installed. Follow paragraphs 4-32 through 4-36. This calibrates the reference junction.

b. Change the thermometer to another type of thermocouple by changing the linearizer pcb and repeating paragraphs 4-32 through paragraph 4-35 only. These paragraphs do not require the actual thermocouple probe, but accomplish full-scale calibration for the non-K-type probe without disturbing the reference-junction calibration just set in a. above.

4-41. Thermocouple Accuracy Relating to the Reference-Junction Calibration Technique

4-42. The thermocouples specified in the list of calibration equipment meet specifications of ANSI Standard C96.1. The specifications for these probes can be as much as 4°F absolute error at or near room temperature. The first conclusion is that those probes could produce a calibration error of ± 4° F when used for calibrating the reference junction. This is an erroneous conclusion. Figure 4-3 illustrates the set-up for calibration. Figure 4-4A illustrates the reference-junction compensation circuitry and Figure 4-4B illustrates the equivalent thermocouple circuit formed by the connection of the thermocouple to the input of the instrument. Note the in Figure 4-4B, the two thermocouple junctions formed at the input of the instrument (plus thermocouple wire (+TC) to the plus input terminal and the minus. thermocuople wire (–TC) to the minus input terminal) can be represented as a single junction of +TC to –TC whose temperature is that of the input terminals of the instrument. The reference-junction circuitry senses the terminal temperature and generates a voltage that is equal to the voltage generated by the equivalent thermocouple formed at the input terminals referenced to ice point (See Figure 4-4A). For example, suppose the input terminals of the instrument and the attached probe are at the same temperature of 25° C. Since the thermocouple output voltage is proportional to the temperature between the two junctions, the

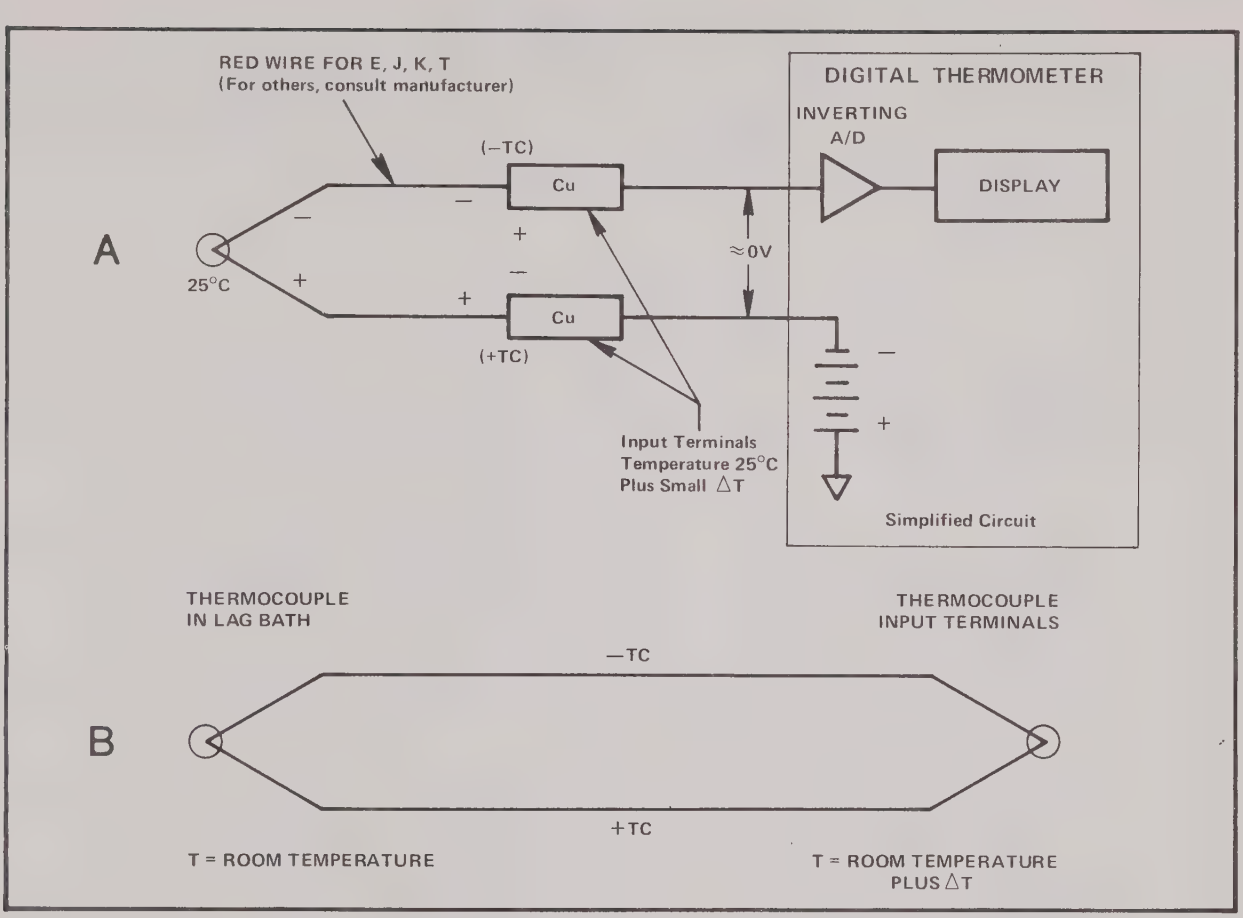

Figure 4-4. REFERENCE-JUNCTION COMPENSATION CIRCUITRY

output is zero volts. The reference-junction circuitry supplies a compensating voltage to the instrument such that the instrument will read 25° C. When calibrating the reference junction using the lag-bath technique, the reference junction is adjusted so that the instrument reads the lag-bath temperature. In using the lag-bath technique, there is only a small temperature difference, ΔT, between the thermocouple junction in the probe and the equivalent thermocouple junction formed at the input terminals of the instrument. The voltage output across the thermocouple circuit is proportional to the temperature difference, ΔT, between the two junctions. Hence, since ΔT is small, there is a small input voltage applied to the input of the instrument. This small input voltage will represent ΔT accurately to within less than .1° F. Therefore, when the reference junction is calibrated so that the instrument reads lag-bath temperature, the error introduced by the thermocouple will be less than .1° F.

4-43. Over-all Accuracy

4-44. The instrument will read very accurately around room temperature (See paragraph 4-41) but as the measured temperature increases or decreases from room temperature, the amount of thermocouple output deviation from NBS Standard 125, becomes the limiting factor in the accuracy of the instrument. If the thermocouple is in error by +4° F, at 900° F the display will be +4° F higher than if the thermocouple conformed perfectly to NBS Standard 125. Error specifications for the instrument do not include thermocouple probe inaccuracies. Those errors must be added to the instrument error in order to obtain an over-all accuracy figure.

4-45. TROUBLESHOOTING

4-46. A troubleshooting guide for the thermometer is given in Table 4-7. The guide is a simplified decision table and is recommended for use in isolating a problem to a functional circuit group. Details necessary to troubleshoot a fault in a functional circuit group can be derived from Section 3 Theory of Operation and Section 8 Schematic Diagrams.

Table 4-7. TROUBLESHOOTING GUIDE

STEP	INSTRUCTION	IF YES GO TO	IF NO GO TO	GO TO
1	Energize the unit and connect a short across the thermocouple input terminals.			2
2	Does the display light?	16	3	
3	Is the power fuse blown?	4	5	
4	Replace fuse.			2
5	Are all power supply voltages present; +5, +6.8, +15 and −12V dc?	7	22	
6	Repair power supply.			2
7	Are Strobe Out pulses present at pins 9, 10, 11 and 12 of U4? (Use logic common as reference.)	10	8	
8	Is crystal operating?	10	9	
9	Replace crystal.			2
10	Are display drivers functioning?	13	11	
11	Is output data present at pins 4,5,6 and 7 of U4?	12	13	
12	Replace display drivers as necessary.			2
13	Are $\overline{\Delta 2}$, AZ, INT, DE+ or DE−, and CM present at U4?	14	15	
14	Display PCB defective. Repair as necessary.			2
15	U4 is defective. Replace.			2
16	Does display read approximate ambient temperature?	21	17	
17	Refer to Section 3 or this manual and use a scope to check for the presence of the waveforms shown in Figure 3-2.			18
18	Are all waveforms correct?	20	19	
19	Perform the necessary repairs to the analog circuit.			17
20	Calibrate the thermometer.			21
21	End. Thermometer is functional.			
22	Are you using line power?	6	23	
23	Are batteries installed?	25	24	
24	Install and charge Ni-Cad battery pack or operate from line power.			1
25	Is Line-Battery Slide-Switch (S4) set to BATT? (See Battery Installation, Paragraph 6-19.)	26	27	
26	Recharge or replace battery pack.			1
27	Set Line-Battery slide-switch to BATT.			1

PERFORMANCE TEST CHECKLIST

Fluke Model 2175A Digital Thermometer

Serial Number _____
Tested By: _____
Date: _____

°F VERIFICATION TABLE (TEMPERATURE ACCURACY)

PROBE TYPE	NOMINAL TEMPERATURE °F	90 DAY			1 YEAR		
		MIN.	ACTUAL	MAX.	MIN.	ACTUAL	MAX.
J	992	990.8		993.2	990.4		993.6
	112	110.8		113.2	110.4		113.6
	–28	–29.6		–26.4	–30.1		–25.9
	–88	–89.6		–86.4	–90.1		–85.9
K	999	990.6		993.4	990.2		993.8
	152	150.6		153.4	150.2		153.8
	–48	–50		–46	–50.6		–45.4
	–88	–90		–86	–90.6		–85.4
T	732	731		733	730.5		733.5
	72	71		73	70.5		73.5
	–28	–29.7		–26.3	–30.9		–25.1
	–88	–89.7		–86.3	–90.9		–85.1
E	992	990.7		993.3	990.2		993.8
	112	110.7		113.3	110.2		113.8
	–28	–29.7		–26.3	–31		–25
	–88	–89.7		–86.3	–91		–85

Line Voltage Regulation _____ Passed ( ) Failed ( )
Accuracy Test _____ See Verification Tables

°F VERIFICATION TABLE (REFERENCE JUNCTION ACCURACY)

PROBE TYPE	90-Day or 1-Year Deviation Error From Room-Temperature Lag Bath	
	Maximum	Actual
J	±1.5°	
K	±2.0°	
T	±1.5°	
E	±1.5°	

PERFORMANCE TEST CHECKLIST, Cont.

°C VERIFICATION TABLE (TEMPERATURE ACCURACY)

PROBE TYPE	NOMINAL TEMPERATURE °C	90 DAY			1 YEAR		
		MIN.	ACTUAL	MAX.	MIN.	ACTUAL	MAX.
J	755.6	754.9	_____	756.3	754.5	_____	756.7
	44.4	43.7	_____	45.1	43.3	_____	45.5
	–44.4	–45.4	_____	–43.4	–45.6	_____	–43.2
	–77.8	–78.8	_____	–76.8	–79	_____	–76.6
K	977.8	976.7	_____	978.9	976.4	_____	979.2
	22.2	21.1	_____	23.3	20.8	_____	23.6
	–44.4	–45.6	_____	–43.2	–45.9	_____	–42.9
	–77.8	–79	_____	–76.6	–79.3	_____	–76.3
T	377.8	377.2	_____	378.4	376.9	_____	378.7
	22.2	21.6	_____	22.8	21.3	_____	23.1
	–55.6	–56.6	_____	–54.6	–57.2	_____	–54
	–77.8	–78.8	_____	–76.8	–79.4	_____	–76.2
E	977.8	976.8	_____	978.8	976.4	_____	979.2
	44.4	43.4	_____	45.5	43	_____	45.8
	–55.6	–56.6	_____	–54.6	–57.3	_____	–53.9
	–77.8	–78.8	_____	–76.8	–79.5	_____	–76.1

Overload

Overrange . . . . . Passed ( ) Failed ( )

Open Circuit . . . . . Passed ( ) Failed ( )

Internal Temperature Rise . . . . . <8.0°C (14.4°F) above ambient

°C VERIFICATION TABLE (REFERENCE JUNCTION ACCURACY)

PROBE TYPE	90-Day or 1-Year	
	Deviation Error From Room-Temperature Lag Bath	
	Maximum	Actual
J	±1.5°	
K	±1.5°	
T	±1.5°	
E	±1.5	

Section 5

Lists of Replaceable Parts

REFERENCE DESIGNATOR	ASSEMBLY NAME/NUMBER	PART NO.	PAGE
	Digital Thermometer, Final Assembly (2175A)	———	5-3
A1	Thermometer Assembly		
	100V (2175A-4001T-2)	434886	5-4
	115V (2175A-4001T)	425850	5-4
	230V (2175A-4001T)	425850	5-4
A1A1	Thermometer PCB Assembly (2175A-4001)	421214	5-5
A2	Display PCB Assembly (2165A-4003)	443515	5-9
A3	Type Select PCB Assembly	———	5-10

5-1. INTRODUCTION

5-2. This section contains an illustrated parts breakdown of the instrument. Components are listed alpha-numerically by assembly. Electrical components are listed by reference designation and mechanical components are listed by item number. Each listed part is shown in an accompanying illustration.

5-3. Parts lists include the following information:

a. Reference Designation or Item Number.

b. Description of each part.

c. Fluke Stock Number.

d. Federal Supply Code for Manufacturers. (See Appendix A for Code-to-Name list.)

e. Manufacturer's part Number or Type.

f. Total Quantity per assembly or component.

g. Recommended Quantity: This entry indicates the recommended number of spare parts necessary to support one to five instruments for a period of two years. This list presumes an availability of common electronic parts at the maintenance site. For maintenance for one year or more at an isolated site, it is recommended that at least one of each assembly in the instrument be stocked. In the case of optional subassemblies, plug-ins, etc. that are not always part of the instrument, or are deviations from the basic instrument mode, the REC QTY column lists the recommended quantity of the item in that particular assembly.

h. Use Code is provided to identify certain parts that have been added, deleted or modified during production of the instrument. Each part for which a use code has been assigned may be identified with a particular instrument serial number by consulting the Use Code Effectivity, paragraph 5-7.

5-4. HOW TO OBTAIN PARTS

5-5. Components may be ordered directly from the manufacturer by using the manufacturer's part number, or from the John Fluke Mfg. Co., Inc. factory or authorized representative by using the FLUKE STOCK NUMBER. In the event the part you order has been replaced by a new or improved part, the replacement will be accompanied by an explanatory note and installation instructions, if necessary.

5-6. To ensure prompt and efficient handling of your order, include the following information.

a. Quantity

b. FLUKE Stock Number

c. Description

d. Reference Designation or Item Number

e. Printed Circuit Board Part Number

f. Instrument model and Serial number

5-7. USE CODE EFFECTIVITY LIST

USE CODE	SERIAL NUMBER EFFECTIVITY
A	0123 to 50000
B	50000 and on.
C	Revision K and previous (Approx. Serial below 630,000)
D	Revision L and later (Approx. Serial 630,000 and up)

Revision Level inked on Thermometer PCB near S4 (See Figure 8-1).

Indicates MOS device which may be damaged by static discharge.

FINAL ASSEMBLY 2175A

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
	DIGITAL THERMOMETER FINAL ASSEMBLY, 2175A						
A1	Thermometer Assembly				1		
	100V ac (2175A-4001T-2)	434886	89536	434886			
	115V ac (2175A-4001T)	425850	89536	425850			
	230V ac (2175A-4001T)	425850	89536	425850			
A2	Display PCB Assembly (2165A-4003)	443515	89536	443515	1		
A3	Type Select PCB Assembly				1		
	One-of-four possible type select pcb assemblies is supplied with the unit.						
	J Type Select PCB Assembly (2160A-4016)	415653	89536	415653			
	K Type Select PCB Assembly (2160A-4017)	415661	89536	415661			
	T Type Select PCB Assembly (2160A-4018)	415927	89536	415927			
	E Type Select PCB Assembly (2160A-4019)	415935	89536	415935			
1	Adhesive	436766	89536	436766	1		
2	Case, molded plastic	427997	89536	427997	1		
3	Cord, ac line				1	1	
	100 or 115V ac	343723	89536	343723			
	230V ac	343780	89536	343780			
4	Decal, case bottom	419127	89536	419127	1		
5	Decal, front panel	419119	89536	419119	1		
6	Decal, handle	347401	89536	347401			
7	Feet, rubber	338632	89536	338632	2		
8	Handle, molded plastic	330092	89536	330092	1		
9	Lens, plastic	419085	89536	419085	1		
10	Panel, front	417485	89536	417485	1		
11	Retainer, neoprene	352484	89536	382484	2		
12	Shield	438440	89536	438440	1		
13	Washer, handle	340505	89536	340505	2		

A1 THERMOMETER ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A1	**THERMOMETER ASSEMBLY**				REF		
	100V ac (2175A-4001T-2)	434886	89536	434886			
	115V ac (2175A-4001T)	425850	89536	425850			
	230V ac (2175A-4001T)	425850	89536	425850			
A1A1	Thermometer PCB Assembly (2175A-4001)	421214	89536	421214	1		
T1	Transformer, power				1		
	100V ac (2165A-6550)	437640	89536	437640			
	115V ac (2165A-6510)	437632	89536	437632			
	230V ac (2165A-6510)	437632	89536	437632			
U4	IC, LSI digital, P-MOS ⊗	403527	70203	C-101-86	1	1	

A1A1 THERMOMETER PCB ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A1A1	**THERMOMETER PCB ASSEMBLY (2175A-4001)**	421214	89536	421214	REF		
	Figure 8-1						
C1	Cap, cer, .01 uF ±20%, 3kV	266320	56289	41C301A2	1		
C3,C4	Cap, Ta, 6.8 uF ±20%, 35V	363713	56289	196D685X0035 KA1	2		
C5	Cap, elect, 4000 uF +100/–10%, 10V	330761	25088	B41010-4700/10	1	1	
C6,C7, C14, C20, C21, C24	Cap, Ta, 10 uF ±20%, 20V	330662	56289	196D106X0020 JA1	6		
C8	Cap, mica, 100 pF ±1%, 500V	226126	71234	DM15F100F	1		
C9	Cap, mylar, 0.47 uF ±10%, 100V	369124	73445	C280MA/HA47 0K	1		
C10	Cap, disc, 100 pF ±10%, 1kV	105593	71590	DD101	1		
C11	Cap, Ta, 2.2 uF ±10%, 15V	364216	56289	196D222X9015 HA1	1		
C12	Cap, cer, .025 uF ±20%, 100V	168435	56289	C023B101H253 M	1		
C13	Cap, polypro, 0.47 uF ±10%, 50V	363085	89536	363085	1		
C15	Cap, cer, 2700 pF ±20%, 100V	362889	72982	8121-A100-W5R 272M	1		
C16	Cap, cer, .0012 uF ±10%, 500V	106732	71590	CF122	1		
C17, C19	Cap, cer, 1000pF ±10%, 500V	357806	56289	C106B102G102 K	2		
C18	Cap, var, .25 - 1.5 pF, 2kV	218206	72982	530-000	1	1	
C23	Cap, cer, 1 pF, ±0.25 pF, 100V	436477	72982	8101-A100-C0G-109G	1		
CR1	Diode, bridge rectifier	392910	89536	392910	1	1	
CR4 thru CR11	Diode, Si, 150 mA, 75V	203323	07910	1N4448	8	2	

A1A1 THERMOMETER PCB ASSEMBLY (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
CR12, CR13	Diode, Si, Rectifier	343491	04713	1N4002	2	1	
DS1	Lamp	352237	00779	85863-3	1	1	
F1	Fuse, slo-blo, 1/8A	166488	71400	MDL1-8	1	5	
J1	Connector, female, 18-pin	435024	00779	583773-8	1		
Q1 thru Q6,Q8, Q9, Q12, Q14	Xstr, J-FET, N-channel	343830	89536	343830	9	2	
Q7	Xstr, Si, NPN	329698	07263	2N2484	1	1	
Q10	Xstr, FET, dual N-channel	439703	89536	439703	1	1	
Q11, Q15	Xstr, Si, NPN	218396	04713	2N3904	1	1	
Q13	Xstr, FET, dual N-channel	379321	89536	379321	1	1	
Q20 thru Q23	Xstr, Si, NPN	381798	04713	MPS-A-13	4	1	
Q26	Xstr, Si, NPN	418459	01295	T1P-31	1	1	
Q27, Q28	Xstr, Si, NPN	272237	07263	2N4946	2	1	
R1	Res, comp, 430 ±5%, ½W	109058	01121	EB4315	1		
R3	Res, mf, 15.8k ±1%, 1/8W	293688	91637	MFF1-81582F	1		
R4, R6	Res, var, 25k ±20%, ½W	285213	71450	190PC253B	2	1	
R5	Res, mf, 261k ±1%, 1/8W	257535	91637	MFF1-82613F	1		
R7	Res, mf, 187k ±1%, 1/8W	257469	91637	MFF1-81873F	1	1	
R8	Res, mf, 2k ±0.1%, 1/8W	340174	91637	MFF1-82001B	1		
R9	Res, mf, 1k +0.1%, 1/8W	340380	91637	MFF1-81001BS	1		
R10	Res, comp, 47k +5%, 1W	150219	01121	GB4735	1		
R11, R29	Res, comp, 1M +5%, 1/4W	182204	01121	CB1055	1		
R12	Res, mf, 26.7k +1%, 1/8W	344465	91637	MFF1-82672B	2		
					1		

A1A1 THERMOMETER PCB ASSEMBLY (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R13	Res, mf, 150k ±1%, 1/8W	241083	91637	MFF1-81503F	1		
R15	Res, var, 50k ±20%, ½W	330688	71450	190PC503B	1	1	
R16, R17	Res, mf, 14.7k ±1%, 1/8W	226225	91637	MFF1-81472F	2		
R18	Res, comp, 470 ±5%, ¼W	147983	01121	CB4715	1		
R20	Res, mf, 28.7k ±1%, 1/8W	235176	91637	MFF1-82872F	1		
R21	Res, mf, 61.9k ±1%, 1/8W	237230	91637	MFF1-86192F	1		
R22	Res, mf, 19.1k ±1%, 1/8W	234963	91637	MFF1-81912F	1		
R23	Res, mf, 1k ±1%, 1/8W	168229	91637	MFF1-81001F	1		
R24, R25	Res, mf, 82.5k ±1%, 1/8W	246223	91637	MFF1-88242F	1		
R26	Res, comp, 680k ±5%, ¼W	188433	01121	CB6845	1		
R27	Res, comp, 100 ±5%, ¼W	147926	01121	CB1015	1		
R28, R33	Res, comp, 220k ±5%, ¼W	160937	01121	CB2245	2		
R30, R32	Res, comp, 20k ±5%, ¼W	221614	01121	CB2035	2		
R38	Res, comp, 68 ±5%, ¼W	147918	01121	CB6805	1		
R39	Res, comp, 2k ±5%, ¼W	202879	01121	CB2025	1		
R40	Res, comp, 22 ±5%, ¼W	147884	01121	CB2205	1		
R41	Res, comp, 330 ±5%, ¼W	147967	01121	CB3315	1		
R42	Res, comp, 9.1 ±5%, ½W	218768	01121	EB9R105	1		
R43 thru R46	Res, comp, 27k ±5%, ¼W	148148	01121	CB2735	4		
S1,S2, S3	Switch Assembly, pushbutton	428490	89536	428490	1	1	
S4	Switch, slide, 4 pdt	428615	82389	53212L	1	1	C
S4	Switch, slide, 4 pdt	453985	95146	CST-042N	1	1	D
S5	Switch, slide, dpdt	423129	95146	SLS-220-1	1	1	
T2	Xfmr, inverter	436097	89536	436097	1		
U1	IC, dual opnl ampl	404087	49956	RC4739DP	1	1	
U2	IC, opnl ampl	352195	49956	RC311DN	1	1	

A1A1 THERMOMETER PCB ASSEMBLY (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
U5	IC, TTL, bcd-to-7 segment decoder/driver	340109	01295	SN7447AN	1	1	
U6	IC, res network, 60Ω	344069	89536	344069	1	1	
U7	IC, C-MOS, Hex Buffer/Inverter ⊗	381830	02735	CD4050AE	1	1	
U8	IC, linear, voltage regulator, +15V	413187	12040	LM340T-18	1	1	
U9	IC, linear, voltage regulator, −12V	381665	04713	MC7912CP	1	1	
VR1	Diode, zener, 6.4V ±2%	393579	04713	1N4567	1	1	
VR2	Diode, zener, 6.2V	325811	07910	1N753A	1	1	
VR3	Diode, zener, 6.8V	260695	07910	1N754A	1	1	
Y1	Crystal, 400 kHz	403352	89536	403352	1		
1	Button, dark gray	419689	89536	419689	1		
2	Button, light gray	412163	89536	412163	1		
3	Button, green	419747	89536	419747	1		
4	Connector, ac line						
	Contact, ground	338640	89536	338640	1		
	Contact, voltage	338657	89536	338657	2		
	Insulator, paper	344184	89536	344184	1		
	Insulator, plastic	338624	89536	338624	1		
5	Holder Assembly, Battery						
	Contact, battery	344200	89536	344200	8		
	Holder, battery	390450	89536	390450	4		
	Hold down, battery	347427	89536	347427	2		
6	Isothermal Block						
	Insulator	415695	89536	415695	1		
	Plate, terminal, neg	415687	89536	415687	1		
	Plate, terminal, pos	415679	89536	415679	1		
7	Socket, IC, 40-pin	418988	91506	340-AG37D	1		
8	Heat Sink	428805	89536	428805	1		

A2 DISPLAY PCB ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A2	**DISPLAY PCB ASSEMBLY (2165A-4003)** **Figure 8-3**	443515	89536	443515	REF		
DS1, DS2	LED, dual 7-segment character display	419051	29083	MAN 6610	2	1	A
DS3	LED, 7-segment character display	407874	29083	MAN 4610	1	1	A
DS1 thru DS5	LED 7-segment, numeric display	418012	28480	5082-7651	5	1	B
P4	Connector, female, 16-pin	375329	00779	85863-3	1		
R1	Res, comp, 91 ±5%, 1/4W	221887	01121	CB9105	1		

A3 TYPE SELECT PCB ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A3	**TYPE SELECT PCB ASSEMBLY**				REF		
	Figure 8-5						
	J Type (2160A-4016)	415653	89536	415653			
P3	Socket, IC, 8-pin	418608	00779	583640-1	1		
R1	Res, mf, 10.7k ±1%, 1/8W	423681	91637	MFF1-81072F	1		
R2	Res, mf, 619 ±0.1%, 1/8W	423715	91637	MFF1-86190B	1		
	K Type (2160A-4017)	415661	89536	415661			
P3	Socket, IC, 8-pin	418608	00779	583640-1	1		
R1	Res, mf, 3.74k ±1%, 1/8W	260547	91637	MFF1-83741F	1		
R2	Res, mf, 481.4 ±0.1%, 1/8W	423723	91637	MFF1-8481R4B	1		
	T Type (2160A-4018)	415927	89536	415927			
P3	Socket, IC, 8-pin	418608	00779	583640-1	1		
R1	Res, mf, 3.74k ±1%, 1/8W	260547	91637	MFF1-83741F	1		
R2	Res, mf, 483.7 ±0.1%, 1/8W	423731	91637	MFF1-8483R7B	1		
	E Type (2160A-4019)	415935	89536	415935			
P3	Socket, IC, 8-pin	418608	00779	583640-1	1		
R1	Res, mf, 53.6k ±1%, 1/8W	291401	91637	MFF1-85362F	1		
R2	Res, mf, 732 ±0.1%, 1/8W	423749	91637	MFF1-87320B	1		

Section 6
Option & Accessory Information

6-1. INTRODUCTION

6-2. This section of the manual contains information concerning the Options and Accessories available for use with the Model 2175A Digital Thermometer. The first portion of this section provides a brief description of each option and accessory. The depth of detail is intended to give the prospective user an adequate first aquaintance with the features and capabilities of each. Detailed information concerning specifications, operating instructions, maintenance, list of replaceable parts and schematics is supplied separately with some options and accessories, and is designed to comprise the second portion of this section. Unique page and paragraph numbering is assigned to each of the add-on descriptions to allow separation into easily identifiable subsections. The material is prepunched (T-punched) to permit insertion without disassembling the manual. Table 6-1 lists the available options and accessories and defines the manner in which each is documented.

Table 6-1. 2175A OPTIONS, ACCESSORIES AND DOCUMENTATION SOURCES

MODEL OR OPTION NO.	DESCRIPTION	DOCUMENTATION SUPPLIED	
		WITH UNIT	HERE IN
C80	Carrying Case		●
C86	Carrying Case		●
P20J	J-Type TC Probe		●
P20K	K-Type TC Probe		●
P20T	T-Type TC Probe		●
M00-100-714	Front Panel Dust Cover		●
M00-200-611	Rack Mtg. Kit, Offset	●	
M00-200-612	Rack Mtg. Kit, Center	●	
M00-200-613	Rack Mtg. Kit, side-by-side	●	
2160A-7016	J-Type Select PCB		●
2160A-7017	K-Type Select PCB		●
2160A-7019	E-Type Select PCB		●
2160A-7018	T-Type Select PCB		●
2160A-7022	Interface Cable		●
–01	Battery Pack		●
–02	Digital Output Unit		
–04	Analog Output Unit		

- = T-punched for insertion in Section 6 of this manual.
● = Not T-punched.

6-3. CARRYING CASE (C80)

6-4. The Model C80 Carrying Case, Figure 6-1, is a soft vinyl plastic container designed for the storage and transport of the 2175A. The case provides the unit with adequate protection against normal handling and storage conditions. In addition to a shoulder strap, the C80 is equipped with a storage compartment for probes, power cord, and other compact accessories.

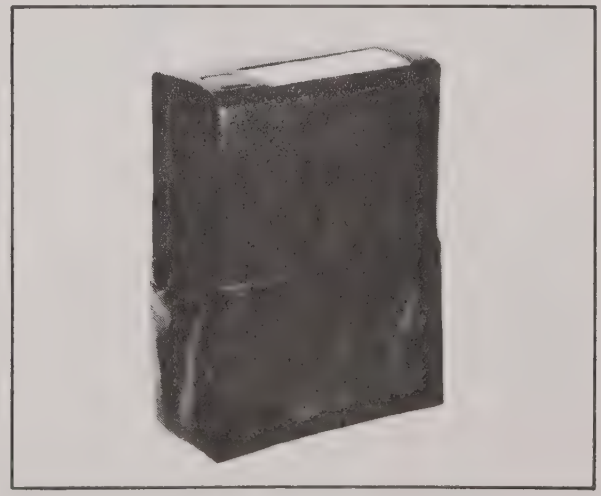

Figure 6-1. C80 CARRYING CASE

6-5. CARRYING CASE (C86)

6-6. The Model C86 Carrying Case, Figure 6-2, is a molded polyethylene container, with handle, designed for use in transporting the 2175A. This rugged case provides the unit with maximum protection against rough handling and adverse weather conditions. A separate storage compartment is provided for probes, power cord, and other compact accessories.

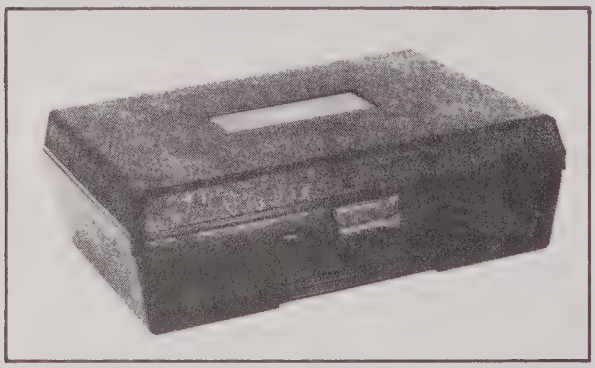

Figure 6-2. C86 CARRYING CASE

6-7. THERMOCOUPLE PROBES

6-8. Three types of thermocouple probe assemblies (J, K and T) are available from Fluke for use with the 2175A. See Table 6-1. Each thermocouple is enclosed in a 6-inch x 1/8 inch iconel sheath, and includes a heavy duty transition splice and spring. See Figure 6-3. The thermocouple junction is grounded to the sheath, and 36-inch trimmed leads are included on all units. Refer to the Tables under Specifications in Section 1 of this manual for the temperature ranges recommended for each thermocouple type.

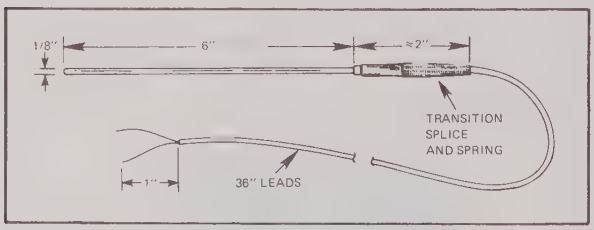

Figure 6-3. P20 SERIES PROBE

6-9. FRONT PANEL DUST COVER (M00-100-714)

6-10. The front panel dust cover is a molded plastic snap-on accessory which fits over the front panel of the 2175A. The dust cover provides protection for the front panel controls, and is useful when storing or transporting the unit.

6-11. RACK MOUNTING KITS

6-12. Three rack mounting kits are available for mounting the 2175A in a standard 19-inch equipment rack. The kits, listed in Table 6-1, provide the option of either offset mounting (left/right), center mounting or side-by-side mounting.

6-13. TYPE SELECT PCB's

6-14. A series of plug-in type select pcb's are available as accessories to allow the thermocouple compatibility of the 2175A to be changed by the user. The available pcb's are listed in Table 6-1; and the instructions necessary to interchange pcb's in the 2175A are given in Section 2 of this manual under Thermocouple Compatibility. Only one of the pcb's can be installed in the 2175A at any given time.

6-15. BATTERY PACK, OPTION –01

6-16. Battery operation of the 2175A requires the installation of four, rechargeable, D-size, Nickel-Cadmium batteries. These batteries are field installable and are available from the John Fluke Mfg. Co., Inc. as the –01 Option. A charging circuit is included in the basic 2175A to charge the batteries. The batteries receive a trickle-charge during normal operation and a fast-charge when the Charge Mode is enabled. Typically, a fully charged set of batteries will allow 8 hours of portable operation. To fully charge a set of discharged batteries, operate the unit in the ON charge mode for 14 hours at a case temperature below 25°C (77°F). (See paragraph 6-23.)

CAUTION!

The 2175A may be damaged if alkaline, zinc-carbon, or mercury batteries are charged in the unit. Use only Nickel-Cadmium batteries.

6-17. Installation

6-18. Use the following procedure for installing Ni-Cad batteries in the 2175A:

a. Disconnect line cord. Remove center retaining screw at rear of instrument case, and remove instrument from case.

b. Remove center bolt and nut from each battery holder.

c. Remove the top half of each plastic holder.

d. Orient the battery polarities according to the picture printed on the thermometer pcb (see Figure 4-2).

e. Reinstall plastic battery holders.

f. Set LINE-BATT slide-switch to BATT (see Figure 4-2).

g. Reinstall instrument in case.

6-19. Charging Ni-Cad Batteries

NOTE

Battery manufacturers recommend that Ni-Cad batteries be recharged at least every 90 days. Storage and charging temperatures below +25°C (77°F) are recommended to achieve full charge and 8 hours of portable operation.

6-20. With regard to the charging of Nickel-Cadmium batteries, there are some phenomena which should be considered. For instance, charging Ni-Cad batteries with cell case temperatures above 25°C will cause the cell's charge capacity to decrease. The decrease in capacity is linear from 100% of rated capacity at 25°C to only 60% of rated capacity at 50°C, and as low as 45% at 60°C. Cell case temperatures typically run from 5°C to 10°C above ambient temperature during charging due to heat dissipated by the charging circuit.

6-21. Charge capacity may also be affected by a cell's charging-discharging routine, due to a memory-type phenomenon. For instance, if a Ni-Cad battery pack is used in a daily routine where it is allowed to discharge by only 30% before being fully recharged again, it will eventually become a battery pack capable of delivering only 30% of its rated capacity. To return such a battery pack to its rated capacity, connect an external load which will discharge the battery completely at a rate equal to its capacity divided by 20. For example, a pack of four series-connected 1.2 volt cells having individual capacity ratings of 3.5 ampere hours should be discharged at a rate of 3.5A ÷ 20 = .175A. This requires a load resistor of 4.8V ÷ .175A = 27.5 ohms (approximate) with a power rating of at least (4.8V) (.175A) = .85W. (A 2-watt carbon composition resistor is suitable.)

6-22. Allow the battery pack to discharge for 30 hours, then charge the battery pack at twice the discharge rate for 20 hours. (In the example, the charging rate would be 0.35 amperes at 4.8 volts.) When charging is complete, discharge the pack at the capacity-divided-by-20 rate for 30 hours, then recharge at twice the discharge rate for a period of 20 hours. The battery pack should now be restored to its rated capacity.

6-23. DIGITAL OUTPUT UNIT, OPTION –02

NOTE

The Digital Output Unit is functional only when the 2175A is being operated from line power.

6-24. The Digital Output Unit (Option –02) is a field installable pcb that mounts on the interior of the 2175A and provides a digital output which is equivalent to the displayed measurement data. The digital output is positive-true, TTL compatible and is presented in bcd, character-parallel format. All displayed characters are represented at the output. Output data is solicited by an External Trigger input and valid data is ensured by Busy and $\overline{\text{Busy}}$ outputs.

6-25. External connections to the Digital Output Unit are made through a 34-pin cable which is supplied with the pcb.

6-26. ANALOG OUTPUT UNIT, OPTION –04

NOTE

The Analog Output Unit is functional only when the 2175A is being operated from line power.

6-27. The Analog Output Unit is a field installable pcb assembly which provides the 2175A with a rear-panel analog output voltage proportional to the displayed measurement data. The output voltage is electrically isolated from the 2175A and covers a voltage range of –0.4 to +4V dc. Automatic polarity sensing is provided for both °C and °F measurements to ensure that the polarity of the output voltage agrees with the displayed polarity. Since the analog output terminals are isolated from the 2175A, the output voltage is referenced to the low terminal of the external recording device (voltmeter, strip-chart recorder, etc.).

6-28. External connections to the Analog Output Unit are made through a connector and cable which is supplied with the pcb.

Section 7

General Information

7-1. This section of the manual contains generalized user information as well as supplemental information to the List of Replaceable Parts contained in Section 5.

List of Abbreviations and Symbols

A or amp	ampere
ac	alternating current
af	audio frequency
a/d	analog-to-digital
assy	assembly
AWG	american wire gauge
B	bel
bcd	binary coded decimal
°C	Celsius
cap	capacitor
ccw	counterclockwise
cer	ceramic
cermet	ceramic to metal(seal)
ckt	circuit
cm	centimeter
cmrr	common mode rejection ratio
comp	composition
cont	continue
crt	cathode-ray tube
cw	clockwise
d/a	digital-to-analog
dac	digital-to-analog converter
dB	decibel
dc	direct current
dmm	digital multimeter
dvm	digital voltmeter
elect	electrolytic
ext	external
F	farad
°F	Fahrenheit
FET	Field-effect transistor
ff	flip-flop
freq	frequency
FSN	federal stock number
g	gram
G	giga (10^9)
gd	guard
Ge	germanium
GHz	gigahertz
gmv	guaranteed minimum value
gnd	ground
H	henry
hd	heavy duty
hf	high frequency
Hz	hertz
IC	integrated circuit
if	intermediate frequency
in	inch(es)
intl	internal
I/O	input/output
k	kilo (10^3)
kHz	kilohertz
kΩ	kilohm(s)
kV	kilovolt(s)
lf	low frequency
LED	light-emitting diode
LSB	least significant bit
LSD	least significant digit
M	mega (10^6)
m	milli (10^{-3})
mA	milliampere(s)
max	maximum
mf	metal film
MHz	megahertz
min	minimum
mm	millimeter
ms	millisecond
MSB	most significant bit
MSD	most significant digit
MTBF	mean time between failures
MTTR	mean time to repair
mV	millivolt(s)
mv	multivibrator
MΩ	megohm(s)
n	nano (10^{-9})
na	not applicable
NC	normally closed
(-) or neg	negative
NO	normally open
ns	nanosecond
opnl ampl	operational amplifier
p	pico (10^{-12})
para	paragraph
pcb	printed circuit board
pF	picofarad
pn	part number
(+) or pos	positive
pot	potentiometer
p-p	peak-to-peak
ppm	parts per million
PROM	programmablle read-only memory
psi	pound-force per square inch
RAM	random-access memory
rf	radio frequency
rms	root mean square
ROM	read-only memory
s or sec	second (time)
scope	oscilloscope
SH	shield
SI	silicon
serno	serial number
sr	shift register
Ta	tantalum
tb	terminal board
tc	temperature coefficient or temperature compensating
tcxo	temperature compensated crystal oscillator
tp	test point
u or μ	micro (10^{-6})
uhf	ultra high frequency
us or μs	microsecond(s) (10^{-6})
uut	unit under test
V	volt
v	voltage
var	variable
vco	voltage controlled oscillator
vhf	very high frequency
vlf	very low frequency
W	watt(s)
ww	wire wound
xfmr	transformer
xstr	transistor
xtal	crystal
xtlo	crystal oscillator
Ω	ohm(s)
μ	micro (10^{-6})

Federal Supply Codes for Manufacturers

00213
Nytronics Comp. Group Inc.
Subsidiary of Nytronics Inc.
Formerly Sage Electronics
Rochester, New York

00327
Welwyn International, Inc.
Westlake, Ohio

00656
Aerovox Corp.
New Bedford, Massachusetts

00686
Film Capacitors, Inc.
Passaic, New Jersey

00779
AMP Inc.
Harrisburg, Pennsylvania

01121
Allen-Bradley Co.
Milwaukee, Wisconsin

01281
TRW Electronic Comp.
Semiconductor Operations
Lawndale, California

01295
Texas Instruments, Inc.
Semiconductor Group
Dallas, Texas

01537
Motorola Communications &
Electronics Inc.
Franklin Park, Illinois

01686
RCL Electronics Inc.
Manchester, New Hampshire

01730
Replaced by 73586

01884
Use 56289
Sprague Electric Co.
Dearborn Electronic Div.
Lockwood, Florida

02114
Ferroxcube Corp.
Saugerties, New York

02131
General Instrument Corp.
Harris ASW Div.
Westwood, Maine

02395
Rason Mfg. Co.
Brooklyn, New York

02533
Snelgrove, C.R. Co., Ltd.
Don Mills, Ontario, Canada
M3B 1M2

02606
Fenwal Labs
Div. of Travenal Labs.
Morton Grove, Illinois

02660
Bunker Ramo Corp., Conn Div.
Formerly Amphenol-Borg
Electric Corp.
Broadview, Illinois

02799
Areo Capacitors, Inc.
Chatsworth, California

03508
General Electric Co.
Semiconductor Products
Syracuse, New York

03614
Replaced by 71400

03651
Replaced by 44655

03797
Eldema Div.
Genisco Technology Corp.
Compton, California

03877
Transistron Electronic Corp.
Wakefield, Massachusetts

03888
KDI Pyrofilm Corp.
Whippany, New Jersey

03911
Clairex Electronics Div.
Clairex Corp.
Mt. Vernon, New York

03980
Muirhead Inc.
Mountainside, New Jersey

04009
Arrow Hart Inc.
Hartford, Connecticut

04062
Replaced by 72136

04202
Replaced by 81312

04217
Essex International Inc.
Wire & Cable Div.
Anaheim, California

04221
Aemco, Div. of
Midtex Inc.
Mankato, Minnesota

04222
AVX Ceramics Div.
AVX Corp.
Myrtle Beach, Florida

04423
Telonic Industries
Laguna Beach, California

04645
Replaced by 75376

04713
Motorola Inc. Semiconductor
Products
Phoenix, Arizona

04946
Standard Wire & Cable
Los Angeles, California

05082
Replaced by 94988

05236
Jonathan Mfg. Co.
Fullerton, California

05245
Components Corp. now
Corcom, Inc.
Chicago, Illinois

05277
Westinghouse Electric Corp.
Semiconductor Div.
Youngwood, Pennsylvania

05278
Replaced by 43543

05279
Southwest Machine &
Plastic Co.
Glendora, California

05397
Union Carbide Corp.
Materials Systems Div.
New York, New York

05571
Use 56289
Sprague Electric Co.
Pacific Div.
Los Angeles, California

05574
Viking Industries
Chatsworth, California

05704
Replaced by 16258

05820
Wakefield Engineering Inc.
Wakefield, Massachusetts

06001
General Electric Co.
Electronic Capacitor &
Battery Products Dept.
Columbia, South Carolina

06136
Replaced by 63743

06383
Panduit Corp.
Tinley Park, Illinois

06473
Bunker Ramo Corp.
Amphenol SAMS Div.
Chatsworth, California

06555
Beede Electrical Instrument Co.
Penacook, New Hampshire

06739
Electron Corp.
Littleton, Colorado

06743
Clevite Corp.
Cleveland, Ohio

06751
Components, Inc. Semcor Div.
Phoenix, Arizona

06860
Gould Automotive Div.
City of Industry, California

06961
Vernitron Corp., Piezo
Electric Div.
Formerly Clevite Corp., Piezo
Electric Div.
Bedford, Ohio

06980
Eimac Div.
Varian Associates
San Carlos, California

07047
The Ross Milton Co.
South Hampton, Pennsylvania

07115
Replaced by 14674

07138
Westinghouse Electric Corp.,
Electronic Tube Div.
Horsehead, New York

07233
TRW Electronic Components
Cinch Graphic
City of Industry, California

07256
Silicon Transistor Corp.
Div. of BBF Group Inc.
Chelmsford, Massachusetts

07261
Aumet Corp.
Culver City, California

07263
Fairchild Semiconductor
Div. of Fairchild Camera
& Instrument Corp.
Mountain View, California

07344
Bircher Co., Inc.
Rochester, New York

07597
Burndy Corp.
Tape/Cable Div.
Rochester, New York

07792
Lerma Engineering Corp.
Northampton, Massachusetts

07910
Teledyne Semiconductor
Formerly Continental Device
Hawthorne, California

07933
Use 49956
Raytheon Co.
Semiconductor Div. HQ
Mountain View, California

08225
Industro Transistor Corp.
Long Island City, New York

Federal Supply Codes for Manufacturers (cont)

08261
Spectra Strip Corp.
Garden Grove, California

08530
Reliance Mica Corp.
Brooklyn, New York

08806
General Electric Co.
Miniature Lamp Products Dept
Cleveland, Ohio

08863
Nylomatic Corp.
Norrisville, Pennsylvania

08988
Use 53085
Skottie Electronics Inc.
Archbald, Pennsylvania

09214
G.E. Co. Semi-Conductor
Products Dept.
Power Semi-Conductor
Products OPN Sec.
Auburn, New York

09353
C and K Components
Watertown, Massachusetts

09423
Scientific Components, Inc.
Santa Barbara, California

09922
Burndy Corp.
Norwalk, Connecticut

09969
Dale Electronics Inc.
Yankton, S. Dakota

10059
Barker Engineering Corp.
Formerly Amerace, Amerace
ESNA Corp.
Kenilworth, New Jersey

11236
CTS of Berne
Berne, Indiana

11237
CTS Keene Inc.
Paso Robles, California

11358
CBS Electronic Div.
Columbia Broadcasting System
Newburyport, Minnesota

11403
Best Products Co.
Chicago, Illinois

11503
Keystone Columbia Inc.
Warren, Michigan

11532
Teledyne Relays
Hawthorne, California

11711
General Instrument Corp.
Rectifier Division
Hicksville, New York

11726
Qualidyne Corp.
Santa Clara, California

12014
Chicago Rivet & Machine Co.
Bellwood, Illinois

12040
National Semiconductor Corp.
Danburry, Connecticut

12060
Diodes, Inc.
Chatsworth, California

12136
Philadelphia Handle Co.
Camden, New Jersey

12300
Potter-Brumfield Div.
AMF Canada LTD.
Guelph, Ontario, Canada

12323
Presin Co., Inc.
Shelton, Connecticut

12327
Freeway Corp. formerly
Freeway Washer & Stamping Co.
Cleveland, Ohio

12443
The Budd Co. Polychem Products
Plastic Products Div.
Bridgeport, Pennsylvania

12615
U.S. Terminals Inc.
Cincinnati, Ohio

12617
Hamlin Inc.
Lake Mills, Wisconsin

12697
Clarostat Mfg. Co.
Dover, New Hampshire

12749
James Electronics
Chicago, Illinois

12856
Micrometals
Sierra Madre, California

12954
Dickson Electronics Corp.
Scottsdale, Arizona

12969
Unitrode Corp.
Watertown, Massachusetts

13103
Thermalloy Co., Inc.
Dallas, Texas

13327
Solitron Devices Inc.
Tappan, New York

13511
Amphenol Cadre Div.
Bunker-Ramo Corp.
Los Gatos, California

13606
Use 56289
Sprague Electric Co.
Transistor Div.
Concord, New Hampshire

13839
Replaced by 23732

14099
Semtech Corp.
Newbury Park, California

14140
Edison Electronic Div.
Mc Gray-Edison Co.
Manchester, New Hampshire

14193
Cal-R-Inc. formerly
California Resistor, Corp.
Santa Monica, California

14298
American Components, Inc.
an Insilco Co.
Conshohocken, Pennsylvania

14655
Cornell-Dublier Electronics
Division of Federal Pacific
Electric Co. Govt. Control Dept.
Newark, New Jersey

14752
Electro Cube Inc.
San Gabriel, California

14869
Replaced by 96853

14936
General Instrument Corp.
Semi Conductor Products Group
Hicksville, New York

15636
Elec-Trol Inc.
Saugus, California

15801
Fenwal Electronics Inc.
Div. of Kidde Walter and Co., Inc.
Framingham, Massachusetts

15818
Teledyne Semiconductors,
formerly Amelco Semiconductor
Mountain View, California

15849
Litton Systems Inc. Useco Div.
formerly Useco Inc.
Van Nuys, California

15898
International Business
Machines Corp.
Essex Junction, Vermont

15909
Replaced by 14140

16258
Space-Lok Inc.
Burbank, California

16299
Corning Glass
Electronic Components Div.
Raleigh, North Carolina

16332
Replaced by 28478

16473
Cambridge Scientific Ind.
Div. of Chemed Corporation
Cambridge, Maryland

16742
Paramount Plastics
Fabricators, Inc.
Downey, California

16758
Delco Electronics
Div. of General Motors Corp.
Kokomo, Indiana

17001
Replaced by 71468

17069
Circuit Structures Lab.
Burbank, California

17338
High Pressure Eng. Co., Inc.
Oklahoma City, Oklahoma

17545
Atlantic Semiconductors, Inc.
Asbury Park, New Jersey

17856
Siliconix, Inc.
Santa Clara, California

17870
Replaced by 14140

18178
Vactec Inc.
Maryland Heights, Missouri

18324
Signetics Corp.
Sunnyvale, California

18612
Vishay Resistor Products Div.
Vishay Intertechnology Inc.
Malvern, Pennsylvania

18736
Voltronics Corp.
Hanover, New Jersey

18927
GTE Sylvania Inc.
Precision Material Group
Parts Division
Titusville, Pennsylvania

19451
Perine Machinery & Supply Co.
Seattle, Washington

19701
Electro-Midland Corp.
Mepco-Electra Inc.
Mineral Wells, Texas

20584
Enochs Mfg. Inc.
Indianapolis, Indiana

Federal Supply Codes for Manufacturers (cont)

20891
Self-Organizing Systems, Inc.
Dallas, Texas

21604
Bucheye Stamping Co.
Columbus, Ohio

21845
Solitron Devices Inc.
Transistor Division
Riveria Beach, Florida

22767
ITT Semiconductors
Palo Alto, California

23050
Product Comp. Corp.
Mount Vernon, New York

23732
Tracor Inc.
Rockville, Maryland

23880
Stanford Applied Engrng.
Santa Clara, California

23936
Pamotor Div., Wm. J. Purdy Co.
Burlingame, California

24248
Replaced by 94222

24355
Analog Devices Inc.
Norwood, Massachusetts

24655
General Radio
Concord, Massachusetts

24759
Lenox Fugle Electronics Inc.
South Plainfield, New Jersey

25088
Siemen Corp.
Isilen, New Jersey

25403
Amperex Electronic Corp.
Semiconductor &
Micro-Circuits Div.
Slatersville, Rhode Island

27014
National Semiconductor Corp.
Santa Clara, California

27264
Molex Products
Downers Grove, Illinois

28213
Minnesota Mining & Mfg. Co.
Consumer Products Div.
St. Paul, Minnesota

28425
Serv-/-Link formerly
Bohannan Industries
Fort Worth, Texas

28478
Deltrol Controls Div.
Deltrol Corporation
Milwaukee, Wisconsin

28480
Hewlett Packard Co.
Corporate HQ
Palo Alto, California

28520
Heyman Mfg. Co.
Kenilworth, New Jersey

29083
Monsanto, Co., Inc.
Santa Clara, California

29604
Stackpole Components Co.
Raleigh, North Carolina

30148
AB Enterprise Inc.
Ahoskie, North Carolina

30323
Illinois Tool Works, Inc.
Chicago, Illinois

31091
Optimax Inc.
Colmar, Pennsylvania

32539
Mura Corp.
Great Neck, New York

32767
Griffith Plastic Corp.
Burlingame, California

32879
Advanced Mechanical
Components
Northridge, California

32897
Erie Technological Products, Inc.
Frequency Control Div.
Carlisle, Pennsylvania

32997
Bourns Inc.
Trimpot Products Division
Riverside, California

33173
General Electric Co.
Products Dept.
Owensboro, Kentucky

34333
Silicon General
Westminister, California

34335
Advanced Micro Devices
Sunnyvale, California

34802
Electromotive Inc.
Kenilworth, New Jersey

37942
P.R. Mallory & Co., Inc.
Indianapolis, Indiana

42498
National Radio
Melrose, Massachusetts

43543
Nytronics Inc.
Transformer Co. Div.
Geneva, New York

44655
Ohmite Mfg. Co.
Skokie, Illinois

49671
RCA Corp.
New York, New York

49956
Raytheon Company
Lexington, Massachusetts

50088
Mostek Corp.
Carrollton, Texas

50579
Litronix Inc.
Cupertino, California

51605
Scientific Components Inc.
Linden, New Jersey

53021
Sangamo Electric Co.
Springfield, Illinois

54294
Cutler-Hammer Inc. formerly
Shallcross, A Cutter-Hammer Co.
Selma, North Carolina

55026
Simpson Electric Co.
Div. of Am. Gage and Mach. Co.
Elgin, Illinois

56289
Sprague Electric Co.
North Adams, Massachusetts

58474
Superior Electric Co.
Bristol, Connecticut

60399
Torin Corp. formerly
Torrington Mfg. Co.
Torrington, Connecticut

63743
Ward Leonard Electric Co., Inc.
Mount Vernon, New York

64834
West Mfg. Co.
San Francisco, California

65092
Weston Instruments Inc.
Newark, New Jersey

66150
Winslow Tele-Tronics Inc.
Eaton Town, New Jersey

70485
Atlantic India Rubber Works
Chicago, Illinois

70563
Amperite Company
Union City, New Jersey

70903
Belden Corp.
Geneva, Illinois

71002
Birnback Radio Co., Inc.
Freeport, New York

71400
Bussmann Mfg.
Div. of McGraw-Edison Co.
Saint Louis, Missouri

71450
CTS Corp.
Elkhart, Indiana

71468
ITT Cannon Electric Inc.
Santa Ana, California

71482
Clare, C.P. & Co.
Chicago, Illinois

71590
Centrelab Electronics
Div. of Globe Union Inc.
Milwaukee, Wisconsin

71707
Coto Coil Co., Inc.
Providence, Rhode Island

71744
Chicago Miniature Lamp Works
Chicago, Illinois

71785
TRW Electronics Components
Cinch Connector Operations Div.
Elk Grove Village
Chicago, Illinois

72005
Wilber B. Driver Co.
Newark, New Jersey

72092
Replaced by 06980

72136
Electro Motive Mfg. Co.
Williamantic, Connecticut

72259
Nytronics Inc.
Pelham Manor, New Jersey

72619
Dialight Div.
Amperex Electronic Corp.
Brooklyn, New York

72653
G.C. Electronics
Div. of Hydrometals, Inc.
Brooklyn, New York

72665
Replaced by 90303

72794
Dzus Fastener Co., Inc.
West Islip, New York

72928
Gulton Ind. Inc.
Gudeman Div.
Chicago, Illinois

72982
Erie Tech. Products Inc.
Erie, Pennsylvania

73138
Bechman Instrument Inc.
Helipot Division
Fullerton, California

73293
Hughes Aircraft Co.
Electron Dynamics Div.
Torrance, California

73445
Amperex Electronic Corp.
Hicksville, New York

73559
Carling Electric Inc.
West Hartford, Connecticut

73586
Circle F Industries
Trenton, New Jersey

73734
Federal Screw Products, Inc.
Chicago, Illinois

73743
Fischer Special Mfg. Co.
Cincinnati, Ohio

73899
JFD Electronics Co.
Components Corp.
Brooklyn, New York

73949
Guardian Electric Mfg. Co.
Chicago, Illinois

74199
Quan Nichols Co.
Chicago, Illinois

74217
Radio Switch Corp.
Marlboro, New Jersey

74276
Signalite Div.
General Instrument Corp.
Neptune, New Jersey

74306
Piezo Crystal Co.
Carlisle, Pennsylvania

74542
Hoyt Elect. Instr. Works
Penacook, New Hampshire

74970
Johnson E.F., Co.
Waseca, Minnesota

75042
TRW Electronics Components
IRC Fixed Resistors
Philadelphia, Pennsylvania

75376
Kurz-Kasch Inc.
Dayton, Ohio

75378
CTS Knights Inc.
Sandwich, Illinois

75382
Kulka Electric Corp.
Mount Vernon, New York

75915
Littlefuse Inc.
Des Plaines, Illinois

76854
Oak Industries Inc.
Switch Div.
Crystal Lake, Illinois

77342
AMF Inc.
Potter & Brumfield Div.
Princeton, Indiana

77638
General Instrument Corp.
Rectifier Division
Brooklyn, New York

77969
Rubbercraft Corp. of CA. LTD.
Torrance, California

78189
Shakeproof
Div. of Illinois Tool Works Inc.
Elgin, Illinois

78277
Sigma Instruments, Inc.
South Braintree, Massachusetts

78488
Stackpole Carbon Co.
Saint Marys, Pennsylvania

78553
Eaton Corp. Engineered
Fastener Div.
Tinnerman Plant
Cleveland, Ohio

79136
Waldes Kohinoor Inc.
Long Island City, New York

79497
Western Rubber Company
Goshen, Indiana

79963
Zierick Mfg. Corp.
Mt. Kisko, New York

80031
Electro-Midland Corp.
Mepco Div.
A North American Phillips Co.
Norristown, New Jersey

80145
LFE Corp., Process Control Div.
formerly API Instrument Co.
Chesterland, Ohio

80183
Use 56289
Sprague Products
North Adams, Massachusetts

80294
Bourns Inc., Instrument Div.
Riverside, California

80583
Hammarlund Mfg. Co., Inc.
Red Bank, New Jersey

80640
Arnold Stevens, Inc.
South Boston, Massachusetts

81073
Grayhill, Inc.
La Grange, Illinois

81312
Winchester Electronics
Div. of Litton Industries Inc.
Oakville, Connecticut

81483
Therm-O-Disc Inc.
Mansfield, Ohio

81483
International Rectifier Corp.
Los Angeles, California

81590
Korry Mfg. Co.
Seattle, Washington

81741
Chicago Lock Co.
Chicago, Illinois

82305
Palmer Electronics Corp.
South Gate, California

82389
Switchcraft Inc.
Chicago, Illinois

82415
North American Phillips
Controls Corp.
Frederick, Maryland

82872
Roanwell Corp.
New York, New York

82877
Rotron Inc.
Woodstock, New York

82879
ITT Royal Electric Div.
Pawtucket, Rhode Island

83003
Varo Inc.
Garland, Texas

83058
The Carr Co., United Can Div.
of TRW
Cambridge, Massachusetts

83298
Bendix Corp.
Electric Power Div.
Eatontown, New Jersey

83330
Herman H. Smith, Inc.
Brooklyn, New York

83478
Rubbercraft Corp.
of America, Inc.
West Haven, Connecticut

83594
Burroughs Corp.
Electronic Components Div.
Plainfield, New Jersey

83740
Union Carbide Corp.
Battery Products Div.
formerly Consumer Products Div.
New York, New York

84171
Arco Electronics
Great Neck, New York

84411
TRW Electronic Components
TRW Capacitors
Ogallala, Nebraska

84613
Fuse Indicator Corp.
Rockville, Maryland

84682
Essex International Inc.
Industrial Wire Div.
Peabody, Massachusetts

86577
Precision Metal Products
of Malden Inc.
Stoneham, Massachusetts

86684
Radio Corp. of America
Electronic Components Div.
Harrison, New Jersey

86928
Seastrom Mfg. Co., Inc.
Glendale, California

87034
Illuminated Products Inc.
Subsidiary of Oak Industries Inc.
Anahiem, California

88219
Gould Inc.
Industrial Div.
Trenton, New Jersey

88245
Litton Systems Inc.
Useco Div.
Van Nuys, California

88419
Cornell-Dubilier Electronic Div.
Federal Pacific Co.
Fuquay-Varian, North Carolina

88486
Plastic Wire & Cable
Jewitt City, Connecticut

88690
Replaced by 04217

89536
John Fluke Mfg. Co., Inc.
Seattle, Washington

89730
G.E. Co., Newark Lamp Works
Newark, New Jersey

Federal Supply Codes for Manufacturers (cont)

90201
Mallory Capacitor Co.
Div. of P.R. Mallory Co., Inc.
Indianapolis, Indiana

90211
Use 56365
Square D Co.
Chicago, Illinois

90215
Best Stamp & Mfg. Co.
Kansas City, Missouri

90303
Mallory Battery Co.
Div. of Mallory Co., Inc.
Tarrytown, New York

91094
Essex International Inc.
Suglex/IWP Div.
Newmarket, New Hampshire

91293
Johanson Mfg. Co.
Boonton, New Jersey

91407
Replaced by 58474

91502
Associated Machine
Santa Clara, California

91506
Augat Inc.
Attleboro, Massachusetts

91637
Dale Electronics Inc.
Columbus, Nebraska

91662
Elco Corp.
Willow Grove, Pennsylvania

91737
Use 71468
Gremar Mfg. Co., Inc.
ITT Cannon/Gremar
Santa Ana, California

91802
Industrial Devices, Inc.
Edgewater, New Jersey

91833
Keystone Electronics Corp.
New York, New York

91836
King's Electronics Co., Inc.
Tuckahoe, New York

91929
Honeywell Inc.
Micro Switch Div.
Freeport, Illinois

91934
Miller Electric Co., Inc.
Div. of Aunet
Woonsocket, Rhode Island

92194
Alpha Wire Corp.
Elizabeth, New Jersey

93332
Sylvania Electric Products
Semiconductor Products Div.
Woburn, Massachusetts

94145
Replaced by 49956

94154
Use 94988
Wagner Electric Corp.
Tung-Sol Div.
Newark, New Jersey

94222
Southco Inc. formerly
South Chester Corp.
Lester, Pennsylvania

95146
Alco Electronic Products Inc.
Lawrence, Massachusetts

95263
Leecraft Mfg. Co.
Long Island City, New York

95264
Replaced by 98278

95275
Vitramon Inc.
Bridgeport, Connecticut

95303
RCA Corp.
Receiving Tube Div.
Cincinnati, Ohio

95348
Gordo's Corp.
Bloomfield, New Jersey

95354
Methode Mfg. Corp.
Rolling Meadows, Illinois

95712
Bendix Corp.
Electrical Components Div.
Microwave Devices Plant
Franklin, Indiana

95987
Weckesser Co. Inc.
Chicago, Illinois

96733
San Fernando Electric Mfg. Co.
San Fernando, California

96853
Gulton Industries Inc.
Measurement and Controls Div.
formerly Rustrak Instruments Co.
Manchester, New Hampshire

96881
Thomson Industries, Inc.
Manhasset, New York

97540
Master Mobile Mounts, Div. of
Whitehall Electronics Corp.
Ft. Meyers, Florida

97913
Industrial Electronic
Hardware Corp.
New York, New York

97945
Penwalt Corp.
SS White Industrial Products Div.
Piscataway, New Jersey

97966
Replaced by 11358

98094
Replaced by 49956

98159
Rubber-Teck, Inc.
Gardena, California

98278
Malco A Microdot Co., Inc.
Connector & Cable Div.
Pasadena, California

98291
Sealectro Corp.
Mamaroneck, New York

98388
Royal Industries
Products Div.
San Diego, California

98743
Replaced by 12749

98925
Replaced by 14433

99120
Plastic Capacitors, Inc.
Chicago, Illinois

99217
Bell Industries Elect.
Comp. Div.
formerly Southern Elect. Div.
Burbank, California

99392
STM
Oakland, California

99515
ITT Jennings Monrovia Plant
Div. of ITT Jennings formerly
Marshall Industries Capacitor Div.
Monrovia, California

99779
Use 29587
Bunker-Ramo Corp.
Barnes Div.
Landsdowne, Pennsylvania

99800
American Precision Industries Inc.
Delevan Division
East Aurora, New York

99942
Centrelab Semiconductor
Centrelab Electronics Div. of
Globe-Union Inc.
El Monte, California

Toyo Electronics
(R-Ohm Corp.)
Irvine, California

National Connector
Minneapolis, Minnesota

U.S. SALES AREAS for all Fluke products

AL, Huntsville
John Fluke Mfg. Co., Inc.
4920 Corporate Drive
Suite J
Huntsville, AL 35805-6202
(205) 830-9671

AZ, Tempe
John Fluke Mfg. Co., Inc.
2211 S. 48th Street
Suite B
Tempe, AZ 85282
(602) 438-8314

CA, Burbank
John Fluke Mfg. Co., Inc.
2020 N. Lincoln Street
Burbank, CA 91504
(213) 849-7181

Irvine
P.O. Box 19676
Irvine, CA 92713-9676
16969 Von Karman
Suite 100
Irvine, CA 92714
(714) 863-9031

San Diego
John Fluke Mfg. Co., Inc.
4540 Kearny Villa Road
Suite 115
San Diego, CA 92123
(619) 292-7656

Santa Clara
John Fluke Mfg. Co., Inc.
2300 Walsh Ave., Bldg. K
Santa Clara, CA 95051
(408) 727-0513

CO, Denver
John Fluke Mfg. Co., Inc.
14180 E. Evans Ave.
Aurora, CO 80014
(303) 695-1000

CT, Hartford
John Fluke Mfg. Co., Inc.
Glen Lochen East
41-C New London Turnpike
Glastonbury, CT 06033
(203) 659-3541

FL, Clearwater
(813) 799-0087

Orlando
John Fluke Mfg. Co.,Inc.
940 N. Fern Creek Ave.
Orlando, FL 32803
(305) 896-4881

Tampa
(813) 251-9211

GA, Atlanta
John Fluke Mfg. Co., Inc.
2600 Delk Road
Suite 150
Marietta, GA 30067
(404) 953-4747

IL, Chicago
John Fluke Mfg. Co., Inc.
1150 W. Euclid Avenue
Palatine, IL 60067
(312) 398-0850
(312) 392-9510

IN, Indianapolis
John Fluke Mfg. Co., Inc.
8777 Purdue Road
Suite 101
Indianapolis, IN 46268
(317) 875-7870

MA, Billerica
John Fluke Mfg. Co., Inc.
900 Middlesex Turnpike
Building 8
Billerica, MA 01821
(617) 663-2400

MD, Baltimore
(301) 792-7060

Rockville
John Fluke Mfg. Co., Inc.
5640 Fishers Lane
Rockville, MD 20852
(301) 770-1570

MI, Detroit
John Fluke Mfg. Co., Inc.
33031 Schoolcraft
Livonia, MI 48150
(313) 522-9140

MN, Bloomington
John Fluke Mfg. Co., Inc.
1801 E. 79th St., Suite 9
Bloomington, MN 55420
(612) 854-5526

MO, St. Louis
John Fluke Mfg. Co., Inc.
2029 Woodland Parkway
Suite 105
St. Louis, MO 63146
(314) 993-3805

NC, Greensboro
John Fluke Mfg. Co., Inc.
1310 Beaman Place
Greensboro, NC 27408
(919) 273-1918

NJ, Paramus
John Fluke Mfg. Co., Inc.
P.O. Box 930
Paramus, NJ 07653-0930
West 75 Century Road
Paramus, NJ 07652
(201) 262-9550

NY, Rochester
John Fluke Mfg. Co., Inc.
4515 Culver Road
Rochester, NY 14622
(716) 323-1400

OH, Cleveland
John Fluke Mfg. Co., Inc.
7830 Freeway Circle
Middleburg Heights, OH 44130
(216) 234-4540

Columbus
(614) 889-5715

Dayton
John Fluke Mfg. Co., Inc.
4756 Fishburg Rd.
Dayton, OH 45424
(513) 233-2238

PA, Malvern
John Fluke Mfg. Co., Inc.
200 Lindenwood Drive
Malvern, PA 19355
(215) 647-9550

TX, Dallas
John Fluke Mfg. Co., Inc.
1801 Royal Lane
Suite 307
Dallas, TX 75229
(214) 869-0311

San Antonio
John Fluke Mfg. Co., Inc.
10417 Gulfdale
San Antonio, TX 78216
(512) 340-1011

WA, Seattle
John Fluke Mfg. Co., Inc.
5020 148th Ave. N.E.
Suite 110
Redmond, WA 98052
(206) 881-6966

Service Center Areas

CA, Burbank (213) 849-7181
CA, Santa Clara (408) 727-0513
CO, Denver (303) 695-1000
FL, Orlando (305) 896-4881
IL, Chicago (312) 392-9510
MA, Billerica (617) 663-2400
MD, Rockville (301) 770-1570
NJ, Paramus (201) 262-9550
TX, Dallas (214) 869-0311
WA, Everett (206) 356-5560

For more information on Fluke products or Sales Offices you may dial (800) 426-0361 toll-free in most of the U.S.A. From Alaska, Hawaii, or Washington phone (206) 356-5400. From Canada and other countries phone (206) 356-5500.

FLUKE®
John Fluke Mfg. Co., Inc., P.O. Box C9090, Everett, WA 98206
Fluke (Holland) B.V., P.O. Box 2269, 5600 CG, Eindhoven, The Netherlands. Phone (040) 458045, TLX 51846
Litho in U.S.A. 11/85

INTERNATIONAL SALES OFFICES

Argentina ●
Coasin S.A.
Virrey del Pino 4071 DEP E-1
1430 CAP FED
Buenos Aires, Argentina
Tel: (1) 552-5248, TLX: (390) 22284

Australia ●
Elmeasco Instruments Pty, Ltd.
P.O. Box 30
Concord, N.S.W. 2137
Australia
Tel: (2) 736-2888, TLX: (790) AA25887

Elmeasco Instruments Pty, Ltd.
P.O. Box 623
12 Maroondah Highway
Ringwood, Victoria 3134
Australia
Tel: (3) 879-2322, TLX: (790) AA36206

Elmeasco Instruments Pty, Ltd.
Professional Suites Bldg.
G.P.O. Box 2360
Brisbane 4001, Australia
Tel: (7) 369-8688, TLX: (790) AA44062

Elmeasco Instruments Pty, Ltd.
G.P.O. Box 1240
Adelaide, South Australia 5001
Tel: (8) 271-1839

Elmeasco Instruments Pty, Ltd.
P.O. Box 95
Gosnells, West Australia 6110
Australia
Tel: (9) 398-3362

Austria ■
Walter Rekirsch Elektronische
Gerate GmbH & Co.
Vertrieb KG
Obachgasse 28
1220 Vienna, Austria
Tel: (222) 235555, TLX: (847) 134759

Bahrain
Basma
P.O. Box 5701
Manama, Bahrain
Tel: 251-364; TLX: (955) 9003

Bangladesh ●
Motherland Corporation
24 Hatkhola Road, Tikatuli
Dacca-3, Bangladesh
Tel: 257249 or 255776
TLX: (950) 642022

Belgium ■
Fluke (Belgium) S.A./N.V.
6 Rue de Geneve
1140 Brussels
Belgium
Tel: (2) 2164090, TLX: (846) 26312

Bolivia ●
Coasin Bolivia S.R.L.
Casilla 7295
La Paz, Bolivia
Tel: (2) 40962, TLX: (336) 5255

Brazil ●
Hi-Tek Eletronica Ltda.
Al. Amazonas 422,
Alphaville, Barueri,
CEP 06400, Sao Paulo, Brazil
Tel: (11) 421-5477, TLX: (391) 01135589

Brunei ●
Rank O'Connor's Berhad
No. 8 Blk D
Sufri Shophouse Complex
Mile 1 Jalan Tutong
Bandar Seri Begawan
Negara Brunei Darussalam
Tel: (2) 23109 or 23557
TLX: (799) 2265 RANKOC

Canada ●
Allan Crawford Assoc., Ltd.
5835 Coopers Avenue
Mississauga, Ontario
L4Z 1Y2 Canada
Tel: (416) 890-2010, TLX: 0696 1235

Allan Crawford Assoc., Ltd.
7018 Cote de Liesse
St. Laurent, Quebec
H4T 1E7 Canada
Tel: (514) 731-8564
TLX: 05824944

Allan Crawford Assoc., Ltd.
2625 Queensview Drive
Ottawa, Ontario
K2B 8K2 Canada
Tel: (613) 596-9300, TLX: 0533600

Allan Crawford Assoc., Ltd.
Suite No. 106
4180 Lougheed Hwy.
Burnaby, British Columbia
V5C 6A7 Canada
Tel: (604) 294-1326, TLX: 0454247

Allan Crawford Assoc., Ltd.
1935 30th Avenue, N.E.
Calgary, Alberta
T2E 6Z5 Canada
Tel: (403) 230-1341, TLX: 03821186

Allan Crawford Assoc., Ltd.
800 Windmill Road
Suite 205
Dartmouth, N.S.
B3B 1L1 Canada
Tel: (902) 463-8640

Chile ●
Intronica Chile, Ltda.
Manuel Montt 024-Of. D
Casilla 16228
Santiago 9, Chile
Tel: (2) 44940, TLX: (332) 240301

China, Peoples Republic of ●
Fluke International Corp.
P.O. Box C9090 M/S 206A
Everett, WA 98206 U.S.A.
Tel: (206) 356-5511
TLX: 185103 FLUKE UT

Colombia ●
Sistemas E Instrumentacion, Ltda.
Carrera 13, No. 37-43, Of. 401
Ap. Aereo 29583
Bogota DE, Colombia
Tel: 232-4532, TLX: (396) 45787

Cyprus ■
Chris Radiovision, Ltd.
P.O. Box 1989
Nicosia, Cyprus
Tel: (21) 66121, TLX: (826) 2395

Cyprus, Northern
Ucok Buroteknik
2C & 2D Muftu Ziyai Street
Lefkosa, Northern Cyprus
Mersin 10, Turkey
Tel: (741) 357-20-71777
TLX: (821) 57267

Czechoslovakia ■
Amtest Associates Ltd.
Clarence House
31 Clarence Street
Staines, Middlesex TW18 4SY
England
Tel: (784) 63555, TLX: (851) 928855

Denmark ■
Tage Olsen A/S
Ballerup Byvej 222
2750 Ballerup
Denmark
Tel: (2) 658111, TLX: (855) 35293

Ecuador ●
Proteco Coasin Cia., Ltda.
P.O. Box 228-A
Ave. 12 de Octubre 2285
y Orellana
Quito, Ecuador
Tel: (2) 529684, TLX: (393) 2865

Proteco Coasin Cia., Ltda.
P.O. Box 9733
Ave. Principal No. 204
y Calle Segunda
Urbanizacion Miraflores
Guayaquil, Ecuador
Tel: (4) 387519

Egypt and Sudan ■
Electronic Engineering Liaison Office
P.O. Box 2891 Horreya
Heliopolis, Cairo
Egypt
Tel: (2) 695705, TLX: (927) 22782

England ■
Fluke GB, Ltd.
Colonial Way
Watford, Herts,
WD2 4TT England
Tel: (923) 40511, TLX: (851) 934583

Fiji ●
Awa Fiji
47 Forster Road
Walu Bay
Suva, Fiji
Tel: 312079, TLX: (792) FJ2347

Finland ■
Instrumentarium Elektroniiki oy
P.O. Box 64
02631 Espoo 63
Finland
Tel: (0) 5281, TLX: (857) 124426

France ■
M.B. Electronique S.A.
606, Rue Fourney
P.O. Box 31
78530 BUC, France
Tel: (3) 956-8131, TLX: (842) 695414

German Democratic Republic ■
Amtest Associates Ltd.
Clarence House, 31 Clarence St.
Staines, Middlesex TW18 4SY
United Kingdom
Tel: (784) 63555, TLX: (851) 928855

Germany, West ■
Fluke (Deutschland) GmbH
Oskar-Messter-Strasse 18
8045 Ismaning/Munich
West Germany
Tel: (89) 96050, TLX: (841) 0522472
Rapifax: 49-89-9605166

Fluke (Deutschland) GmbH
Viertriebsburo - Dusseldorf
Meineckestrasse 53, D-4000 Dusseldorf-30
West Germany
Tel: (211) 450831, TLX: (841) 17-2114233

Fluke (Deutschland) GmbH
Vertriebsburo - Hamburg
Habichthorst 42
D-2000 Hamburg 61
West Germany
Tel: (40) 5519031, TLX: (841) 02174556

Greece ■
Hellenic Scientific Representations Ltd.
11, Vrassida Street
Athens 612, Greece
Tel: (1) 711140, TLX: (863) 219330

Hong Kong ●
Schmidt & Co (H.K.), Ltd
18th Floor, Great Eagle Centre
23 Harbour Road
Wanchai, Hong Kong
Tel: (5) 8330-222
TLX: (780) 74766 or (780) 76762

Hungary ■
Amtest Associates Ltd.
Clarence House, 31 Clarence St.
Staines, Middlesex TW18 4SY
United Kingdom
Tel: (784) 63555, TLX: (851) 928855

India ●
Hinditron Services Pvt., Ltd.
69/A.L. Jagmohandas Marg
Bombay 400 006, India
Tel: (22) 8121316, 8125344, TLX: (953) 112326

Hinditron Services Pvt., Ltd.
8th Main Road
33/44A Raj Mahal Vilas Extension
Bangalore 560 080, India
Tel: (910) 33139, 367289; TLX: (953) 845741

Hinditron Services Pvt. Ltd.
5th Floor, "Castle House"
5/1A, Hungerford St.
Calcutta 700 017, India
Tel: 33-434628, TLX: 21-4153

Hinditron Services Pvt. Ltd.
204-5-6 Hemkunt Tower
98 Nehru Place
New Delhi, 110019, India
Tel: (910) 640380, TLX: (953) 3161458

Hinditron Services Pvt. Ltd.
1-1-58/1 to 1-1-58/11
Sarojini Devi Road
Secunderabad 500 003, India
Tel: (842) 821117, TLX: (953) 1556973

Indonesia ●
P.T. Dwi Tunggal Jaya Sakti
P.O. Box 4435
Wisma Harapan Bldg. 14th
Jl. Jend. Sudirman Kav. 34
Jakarta Pusat, Indonesia
Tel: (21) 584685, TLX: (796) 47308

Ireland ■
Euro Instruments & Electronics Ltd.
Euro House
Swords Road, Santry
Dublin 9, Ireland
Tel: (1) 425666, TLX: (851) 31821

Israel ■
R.D.T. Electronics Engineering Ltd.
P.O. Box 43137
Tel Aviv 61430
Israel
Tel: (3) 483211, TLX: (922) 32143

Italy ■
Sistrel S.p.A.
Via Pelizza da Volpedo 59
20092 Cinisello Balsamo
Milan, Italy
Tel: (2) 6181893, TLX: (843) 334643

Sistrel S.p.A.
Via Giuseppe Armellini No. 39
00143 Rome, Italy
Tel: (6) 591-5551, TLX: (843) 680356

Sistrel S.p.A.
Via Cinta
Parco S. Paolo 35
80126 Naples, Italy
Tel: (81) 7679700

Japan ●
John Fluke Mfg. Co., Inc.
Japan Branch
Sumitomo Higashi Shinbashi Bldg.
1-1-11 Hamamatsucho
Minato-ku, Tokyo 105, Japan
Tel: (3) 434-0181, TLX: (781) 2424331
FAX: 81-3-434-0170

John Fluke Mfg. Co., Inc.
Japan Branch
Katsushige Building
2-45 Kohraibashi
Higashi-ku, Osaka 541
Japan
Tel: (6) 229-0871

Korea, Republic of ●
Myoung Corporation
Rm #1501, Sinsong Bldg
25-4 Yeouido-Dong, Young Deung Po-ku
Seoul 150, Korea
Tel: (2) 784-9942, TLX: K24283

Kuwait ■
Al Bahar International Group
P.O. Box 26672 Safat
Kuwait, Arabian Gulf
Tel: 848601, 847598; TLX: (959) 44822

Lebanon and Jordan ■
Mabek (Electronics Division)
P.O. Box 13-5657
Beirut, Lebanon
Tel: 812523, TLX: (923) 22889

Malaysia ●
Mecomb Malaysia SND BHD
Lot 20, Jalan 225
P.O. Box 24
Petaling Jaya, Malaysia
Tel: (3) 743422, TLX: (784) MA37764

Malta ■
Fabian Enterprises
20, Msida Road
Gzira, Malta
Tel: 513283/40216, TLX: (838) 1837

Mexico ●
Industrial, S.A. (Mexel)
Diagonal No. 27
Entre Calle de Eugenia Y Ave
Colonia del Valle
C.P. 03100, Mexico
Tel: (5) 660-4323, TLX: (383) 1771038

Morocco ■
Oussama S.A.
Angle Boulevard Emile Zola et
Rue Rethel
P.O. Box 2007 Casa
Casablanca
Morocco
Tel: 24-13-38, TLX: 22730 M

Nepal ●
Associated Enterprises
GPO Box 790, Pyaphal Tole
Kathmandu, Nepal
Tel: 13868

Netherlands ■
Fluke (Holland) B.V.
P.O. Box 2269
5600 CG Eindhoven
Netherlands
Tel: (40) 458045, TLX: (844) 51846

Fluke (Nederland) B.V.
Gasthuisring 14
P.O. Box 115
5000 AC Tilburg
The Netherlands
Tel: (13) 352455, TLX: (844) 52683

New Zealand ●
Northrop Instruments & Systems, Ltd.
Information Technology Group
459 Khyber Pass Road
Private Bag, Newmarket
Auckland 1, New Zealand
Tel: (9) 501-801; TLX: (791) 21570

Northrop Instruments & Systems Ltd.
Information Technology Group
First Floor, Northrop Bldg.
189-191 Willis Street
P.O Box 2406
Wellington, New Zealand
Tel: (4) 856-658, TLX: (791) 3380

Northrop Instruments & Systems Ltd.
Information Technology Group
110 Mandeville Street
P.O. Box 8388
Christchurch, New Zealand
Tel: (3) 488-874, TLX: (791) 4801

Norway ■
Morgenstierne & Co A/S
Konghellegate 3
P.O. Box 6688, Rodelokka
Oslo 5, Norway
Tel: (2) 356110, TLX: (856) 71719

Oman ■
OHI Telecommunications
P.O. Box 889
Muscat
Sultanate of Oman
Tel: 603606, TLX: (926) 5052

Pakistan ●
International Operations (PAK), Ltd.
505 Muhammadi House
I.I. Chundrigar Road
P.O. Box 5323, Karachi, Pakistan
Tel: (21) 221127, TLX: (952) 24494

Peru ●
Importaciones y Representaciones
Electronicas S.A.
Avda. Franklin D. Roosevelt 105
Lima 1, Peru
Tel: (14) 28-8650, TLX: (394) 25663

Philippines, Republic of ●
Spark Radio & Electronics, Inc.
452 Shaw Boulevard
Mandaluyong, Metro Manila
Republic of Philippines
Tel: (2) 775192, TLX: (722 or 732) 27901

Poland ■
Amtest Associates Ltd.
Clarence House, 31 Clarence St.
Staines, Middlesex TW18 4SY
England
Tel: (784) 63555, TLX: (851) 928855

Portugal ■
Decada Espectral
Equipamentos de Electronica
Av. Bombeiros Voluntarios
Lote 102B, Miraflores/Alges
1495 Lisbon, Portugal
Tel: (1) 2103420, TLX: (832) 15515

Romania ■
Amtest Associates Ltd.
Clarence House, 31 Clarence St.
Staines, Middlesex TW18 4SY
England
Tel: (784) 63555, TLX: (851) 928855

Saudi Arabia ■
Electronic Equipment Marketing Co.
P.O. Box 3750
Riyadh, Saudi Arabia
Tel: (1) 477-1650, TLX: 201120

Singapore, Republic of ●
Rank O'Connor's (PTE) Ltd.
O'Connor House
98 Pasir Panjang Road
Singapore 0511
Republic of Singapore
Tel: 4737944, TLX: (786) RS21023

South Africa ●
Fluke S.A. (Pty) Ltd.
Wynberg Park
777 Andries Street
Wynberg, South Africa
Tel: (11) 786-3170, TLX: (960) 424328

Spain ■
ESSA
Equipos y Sistemas S.A.
C/Apolonio Morales, 13-B
Madrid 16, Spain
Tel: (1) 458-0150, TLX: (831) 42856

Sri Lanka ●
Computerlink Data Systems, Ltd.
294 Union Place
Colombo 2, Sri Lanka
Tel: (1) 28641/2, TLX: (954) 21321

Sweden ■
Teleinstrument AB
Maltesholmsvagen 138
P.O. Box 4490
162 04 Vallingby 4
Sweden
Tel: (8) 380370, TLX: (854) 15770

Switzerland ■
Traco Electronic AG
Jenatschstrasse 1
8002 Zurich
Switzerland
Tel: (1) 201-0711, TLX: (845) 815570

Syria ■
Mabek (Electronics Division)
P.O. Box 4238
Damascus, Syria

Taiwan ●
Schmidt Electronics Corp.
5th Fl, Cathay Min Sheng
Commercial Building,
344 Min Sheng East Road
Taipei 104, Taiwan R.O.C.
Tel: (2) 501-3468, TLX: (785) 11111

Thailand ●
Measuretronix Ltd.
2102/63 Ramkamhaeng Rd.
Bangkok 10240
Thailand
Tel: (2) 378-2516, TLX: (788) 82796

Tunisia ■
Selep S.A.R.L.
6, Rue de Sparte
Tunis - 1000 RP
Tunisia
Tel: (1) 248093, TLX: (934) 13030

Turkey ■
Erkman Elektronik Aletler
Ticaret Anonim Sirketi
Necatibey Cad 92/3
Karakoy, Istanbul, Turkey
Tel. (11) 4415461, TLX: (821) 24399

United Arab Emirates ■
Al-Sanani Gen. Trad. Est.
P.O. Box 7187
Abu-Dhabi, U.A.E.
Tel: (2) 821370 or 821371
TLX: (958) 23966

Haris Al-Afag, Ltd.
P.O. Box 545
Sharjah, U.A.E.
Tel: (6) 359120, TLX: (958) 68540

Uruguay ●
Coasin Uruguaya S.A.
Libertad 2529
Casilla de Correo 1400
Montevideo, Uruguay
Tel: (2) 789015, TLX: (398) UY23010

USSR
Amtest Associates Ltd.
Clarence House, 31 Clarence St.
Staines, Middlesex TW18 4SY
England
Tel: (784) 63555, TLX: (851) 928855

Venezuela ●
Coasin C.A.
Calle 9 Con Calle 4, Edif Edinurbi
Apartado de Correos NR-70.136
Los Ruices
Caracas 1070-A, Venezuela
Tel: (2) 239-0967, TLX: (395) 21027

Yugoslavia ■
Amtest Associates Ltd.
Clarence House, 31, Clarence St.
Staines, Middlesex TW18 4SY
England
Tel: (784) 63555, TLX: (851) 928855

■ **Supplied and Supported by —**
Fluke (Holland) B.V.
P.O. Box 2269
5600 CG Eindhoven
Netherlands
Tel: (040) 45805, TLX: 51846
FAX: 31-40-457515

● **Supplied and Supported by —**
Fluke International Corporation
P.O. Box C9090
Everett, WA 98206 U.S.A.
Tel: (206) 356-5500
TLX: 185103 FLUKE UT
FAX: 206-356-5116

The following countries are represented by:
Fluke (Holland) B.V.
P.O. Box 2269
5600 CG Eindhoven
Netherlands
Tel: (040) 45805, TLX: 51846
FAX: 31-40-457515

Abu Dhabi
Afghanistan
Albania
Algeria
Angola
Benin
Bornholm
Botswana
Chad
Corsica
Czechoslavakia
Dubai
Ethiopia
Guinea
Ibiza
Iceland
Iraq
Kuwait
Liberia
Libya
Luxembourg
Maderia
Mallorca
Mauritania
Menorca
Mongolia
Niger
Nigeria
Qatar
Rodhos
Russia
Sardinia
Saudia Arabia
Scotland
Senegal
Sierra Leone
Somalia
Togo
Upper Volta
Wales
Wstn Sahara
Yemen
Zaire
Zambia
Zimbabwe

FLUKE®

TECHNICAL SERVICE CENTERS

U.S.A.

CA, Burbank
John Fluke Mfg. Co., Inc.
(213) 849-7181

CA, Santa Clara
John Fluke Mfg. Co., Inc.
(408) 727-0513

CO, Denver
John Fluke Mfg. Co., Inc.
(303) 695-1000

FL, Orlando
John Fluke Mfg. Co., Inc.
(305) 896-4881

IL, Palatine
John Fluke Mfg. Co., Inc.
(312) 398-5800
(312) 392-9510

MD, Rockville
John Fluke Mfg. Co., Inc.
(301) 770-1576

NJ, Paramus
John Fluke Mfg. Co., Inc.
(201) 262-9550

TX, Dallas
John Fluke Mfg. Co., Inc.
(214) 869-0311

WA, Everett
John Fluke Mfg. Co., Inc.
(206) 356-5560

Other Countries

Argentina, Buenos Aires
Coasin S.A.
Tel: 552-5248
TLX: (390) 22284

Australia, Brisbane
Elmeasco Instruments Pty. Ltd.
Tel: 369-8688
TLX: (790) AA44062

Australia, Concord
Elmeasco Instruments Pty Ltd.
Tel: 736-2888
TLX: (790) AA25887

Australia, Ringwood
Elmeasco Instruments Pty. Ltd.
Tel: 879-2322
TLX: (790) AA36206

Austria, Vienna
Walter Rekirsch
Elektronische Gerate GmbH & Co.
Tel: 235555
TLX: (847) 134759

Belgium, Brussels
Fluke (Belgium) SA/NA
Tel: 2164090
TLX: (846) 26312

Brazil, Sao Paulo
Hi-Tek Eletronica Ltda.
Tel: 421-5477
TLX: (1391) 1135589

Canada, Burnaby, BC
Allan Crawford Associates Ltd.
Tel: (604) 294-1326
TLX: 0454247

Canada, Calgary, AB
Allan Crawford Associates Ltd.
Tel: (403) 291-3417
TLX: 03821186

Canada, Mississauga, ON
Allan Crawford Associates Ltd.
Tel: (416) 890-2010
TLX: 0696 1235

Canada, St. Laurent, PQ
Allan Crawford Associates Ltd.
Tel: (514) 731-8564
TLX: 05824944

Chile, Santiago
Intronica Chile Ltda.
Tel: 44940
TLX: (332) 240301

China, Peoples Republic of
Instrimpex - Fluke Service Center
Tel: 65-7281

Colombia, Bogota
Sistemas E Instrumentacion, Ltda.
Tel: 232-4532
TLX: (396) 45787

Denmark, Ballerup
Tage Olson A/S
Tel: 658111
TLX: (855) 35293

Ecuador, Quito
Proteco Coasin Cia., Ltda.
Tel: 526759
TLX: (393) 2865

Egypt and Sudan
Electronic Engineering Liaison Office
Tel: 695705
TLX: (927) 22782

England, Watford, Herts
Fluke (Great Britain) LTD
Tel: 40511
TLX: (851) 934583

Finland
Instrumentarium Elektronikka
Tel: 358-0-5281
TLX: (857) 124426

France
M.B. Electronique S.A.
Tel: 9568131
TLX: (842) 695414

Greece, Athens
Hellenic Scientific Representations
Tel: 7211140
TLX: (863) 219330

Hong Kong, Wanchai
Schmidt & Co (H.K.) Ltd.
Tel: 8330-222
TLX: (780) 74766

India, Bangalore
Hinditron Services Pvt. Ltd.
Tel: 33139
TLX: (953) 845741

India, Bombay
Hinditron Services Pvt. Ltd.
Tel: 8121316
TLX: (953) 112326

India, New Delhi
Hinditron Services Pvt. Ltd.
Tel: 640380
TLX: (953) 316458

Indonesia, Jakarta Pusat
P.T. Dwi Tunggal Jaya Sakti
Tel: 584685
TLX: (796) 47308

Israel, Ramat Hasharon
R.D.T. Electronics Engineering Ltd.
Tel: 483211
TLX: (922) 32143

Italy, Milan
Sistrel S.p.A.
Tel: 6181893
TLX: (843) 334643

Japan, Tokyo
John Fluke Mfg. Co., Inc.
Japan Branch
Tel: 434-0181
TLX: (781) 242-4331

Korea, Republic of
Electro-Science Korea Co.
Tel: 784-9942
TLX: MYOUNG K24283

Malaysia, Petaling Jaya
Mecomb Malaysia SDN BHD
Tel: 743422
TLX: (784) MA37764

Mexico
Industrial, S.A. (Mexel)
Diagonal No. 27
Entre Calle de Eugenia Y Ave.
Colonia del Valle
C.P. 03100, Mexico
Tel: 660-4323
TLX: (383) 1771038

Netherlands, Tilburg
Fluke (Nederland) B.V.
Tel: 352455
TLX: (844) 52683

New Zealand, Auckland
McLean Information Technology, Ltd.
Tel: 501-801, 501-219
TLX: (791) 21570

Norway, Oslo
Morgenstierne & Co. A/S
Tel: 356110
TLX: (856) 71719

Pakistan, Karachi
International Operations (PAK), Ltd.
Tel: 221127, 239052
TLX: (952) 24494

Peru, Lima
Importaciones Y Representaciones
Electronicas S.A.
Tel: 288650
TLX: (394) 25663

Philippines, Republic of
Spark Radio & Electronics Corp.
Tel: 775192
TLX: (722) 27901

Portugal, Lisbon
Decada Espectral Equipamentos
de Electronica, Lda.
Tel: 2103420
TLX: (832) 15515

Republic of Singapore, Singapore
Rank O'Connor's (PTE) Limited
Tel: 4737944
TLX: (786) RS21023

Republic of South Africa
Fluke S.A. (Pty) Ltd.
Tel: 786-3170
TLX: (960) 424328

Spain, Madrid
Equipos y Sistemas S.A.
Tel: 458-0150
TLX: (831) 42856

Sweden, Vallingby
Teleinstrument AB
Tel: 380370
TLX: (854) 15770

Switzerland, Zurich
Traco Electronic AG
Tel: 2010711
TLX: (845) 815570

Taiwan, Taipei
Schmidt Electronics Corp.
Tel: 5013468
TLX: (785) 11111

Thailand, Bangkok
Measuretronix Ltd.
Tel: 378-2516
TLX: (788) 82796

Turkey, Istanbul
Erkman Elektronik Aletler
Tel: 4415461
TLX: (821) 24399

Uruguay, Montevideo
Coasin Uruguaya S.A.
Tel: 789015
TLX: (398) UY23010

Venezuela, Caracas
Coasin C.A.
Tel: 239-0967
TLX: (395) 21027

West Germany, Ismaning/Munich
Fluke (Deutschland) GmbH
Tel: 96050
TLX: (841) 0522472

FLUKE®
John Fluke Mfg. Co., Inc., P.O. Box C9090, Everett, WA 98206
Fluke (Holland) B.V., P.O. Box 2269, 5600 CG, Eindhoven, The Netherlands. Phone (040) 458045, TLX 51846
Litho in U.S.A. 11/85

Section 8
Schematic Diagrams

FIGURE NO.	NAME	DRAWING NO.	PAGE
8-1	A1A1 Thermometer PCB Assembly Component Location . .	2175A-1601	8-2
8-2	A1A1 Thermometer PCB Assembly Schematic	2175A-1001	8-3
8-3	A2 Display PCB Assembly Component Location	2165A-1603	8-4
8-4	A2 Display PCB Assembly Schematic	2165A-1003	8-5
8-5	A3 Type Select PCB Assembly Component Location	2160A-1612	8-6
8-6	A3 Type Select PCB Assembly Schematic	2160A-1012	8-6

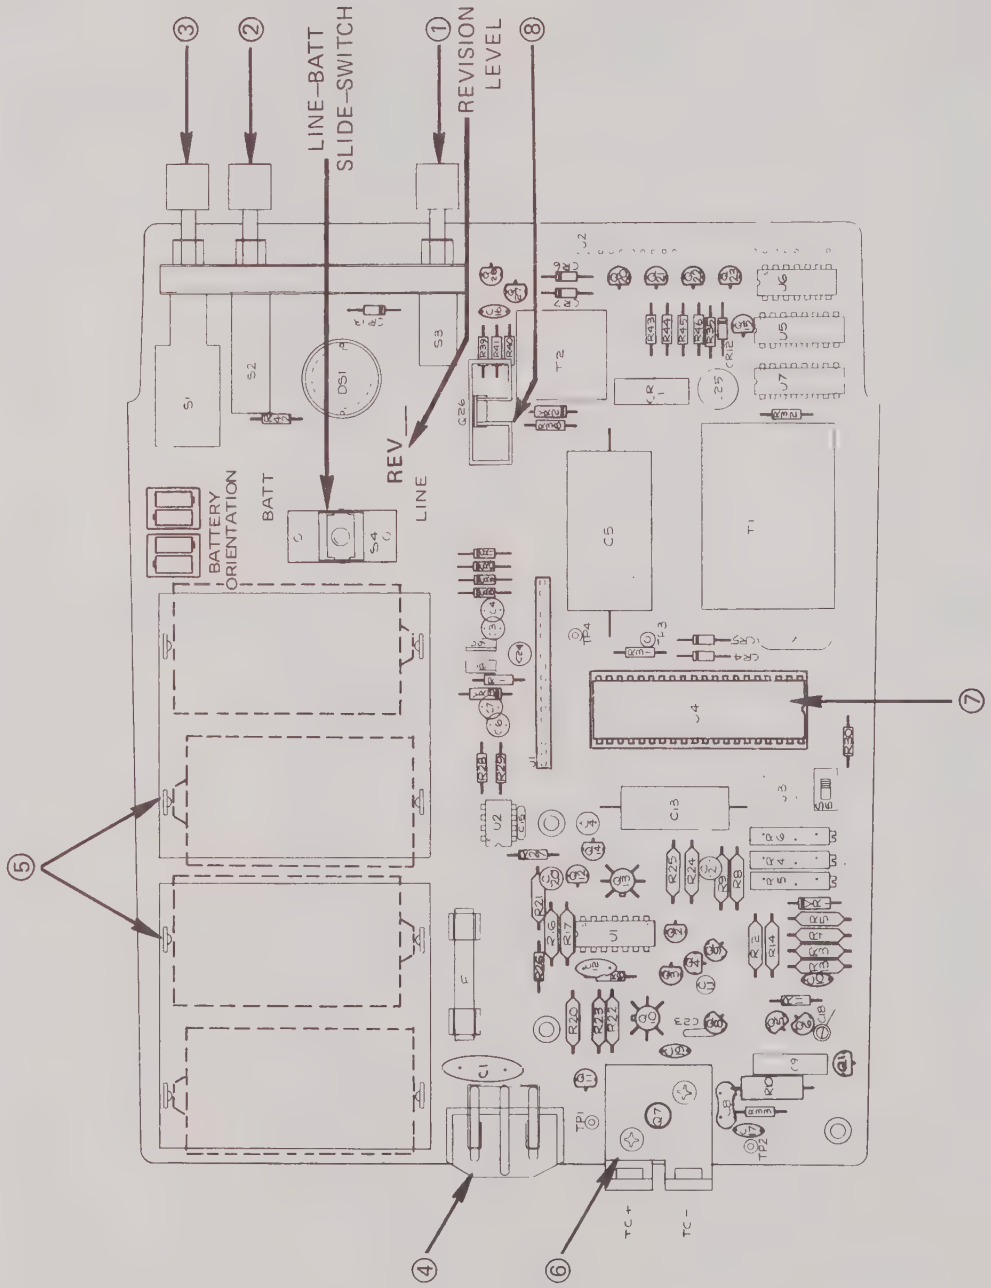

Figure 8-1. A1A1 THERMOMETER PCB ASSEMBLY COMPONENT LOCATION (2175A-1601)

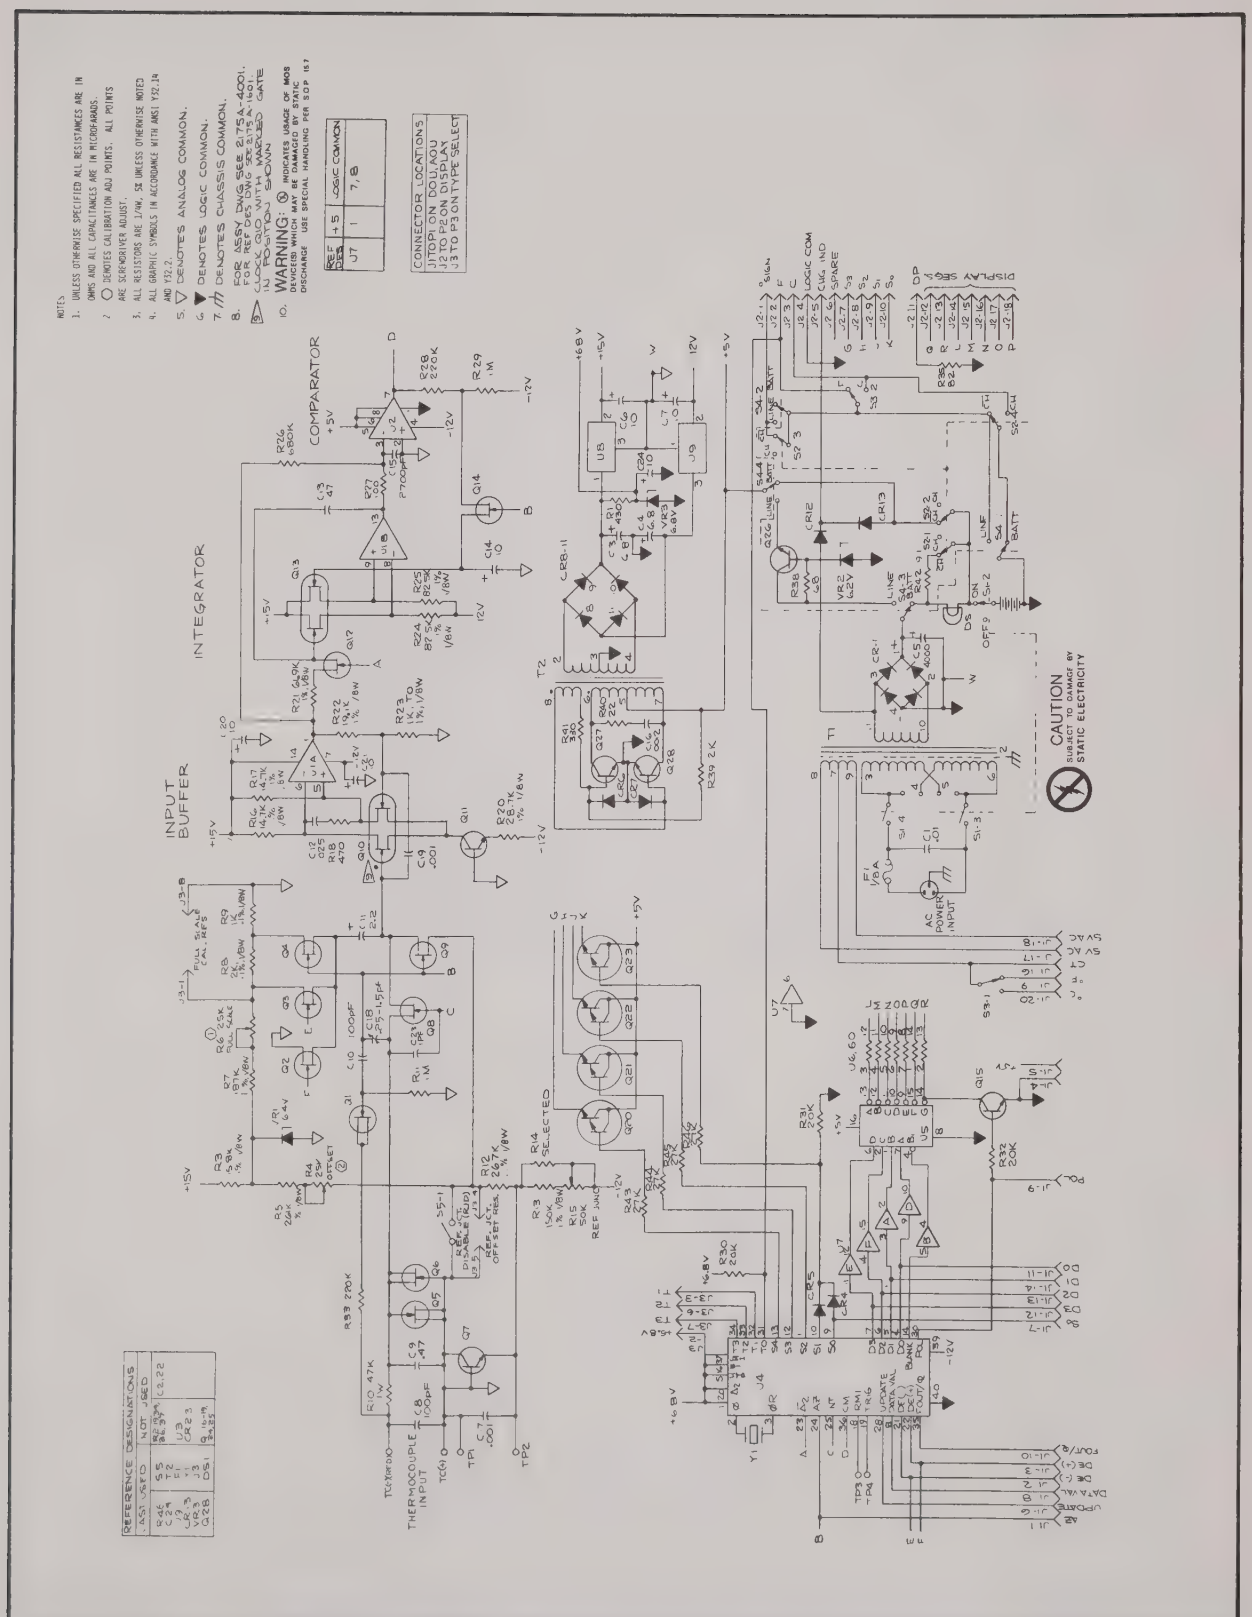
NOTES:
1. UNLESS OTHERWISE SPECIFIED ALL RESISTANCES ARE IN OHMS AND ALL CAPACITANCES ARE IN MICROFARADS.
2. ○ DENOTES CALIBRATION ADJ POINTS. ALL POINTS ARE SCREWDRIVER ADJUST.
3. ALL RESISTORS ARE 1/4W, 5% UNLESS OTHERWISE NOTED
4. ALL GRAPHIC SYMBOLS IN ACCORDANCE WITH ANSI Y32.14 AND Y32.2.
5. ▽ DENOTES ANALOG COMMON.
6. ▼ DENOTES LOGIC COMMON.
7. /// DENOTES CHASSIS COMMON.
8. FOR ASSY DWG SEE 2175A-4001. FOR REF DES DWG SEE 2175A-1401.
9. LOGIC SHOWN WITH MARKED GATE IN POSITION SHOWN
10. WARNING: ⑩ INDICATES USAGE OF MOS DEVICES WHICH MAY BE DAMAGED BY STATIC DISCHARGE USE SPECIAL HANDLING PER SOP 157
SEE DWG +5 LOGIC COMMON
J7 1 7,8
CONNECTOR LOCATIONS
J1 TO P1 ON DOU/AOU
J2 TO P2 ON DISPLAY
J3 TO P3 ON TYPE SELECT
REFERENCE DESIGNATIONS
ASSIGNED NOT USED
R46 S5 R2,39 C2,22
C24 T2 E1
L1 U3 CR2,3
VR3 J3
Q28 DS1 S4,5,6
INPUT BUFFER
INTEGRATOR
COMPARATOR
THERMOCOUPLE INPUT
TC(+)
TC(-)
TP1
TP2
REF JCT OFFSET ADJ
REF JCT SENSE ADJ
SELECTED
REF JUNC
DISPLAY SEG'S
DISPLAY DIGITS
LOGIC COM
SPARE
LINE
BATT
ON
OFF
AC POWER INPUT
CAUTION
SUBJECT TO DAMAGE BY STATIC ELECTRICITY

Figure 8-2. A1A1 THERMOMETER PCB ASSEMBLY SCHEMATIC (2175A-1001)

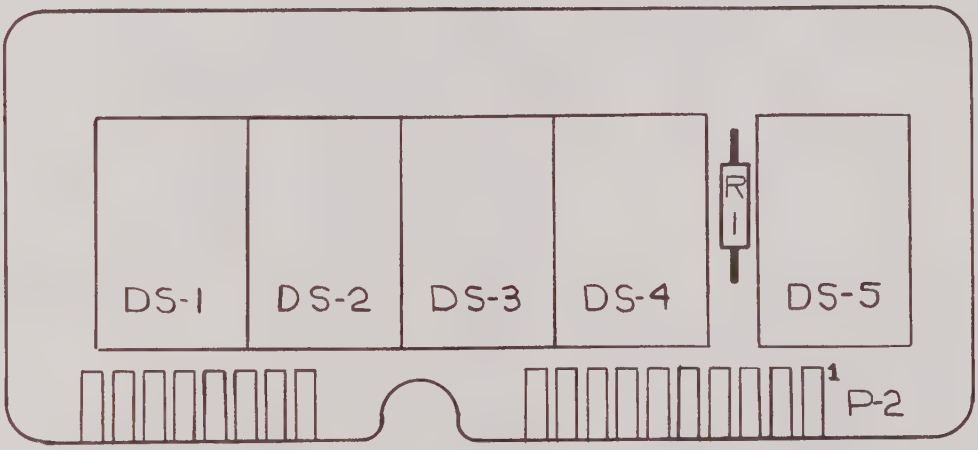

Figure 8-3. A2 DISPLAY PCB ASSEMBLY COMPONENT LOCATION (2165A-1603)

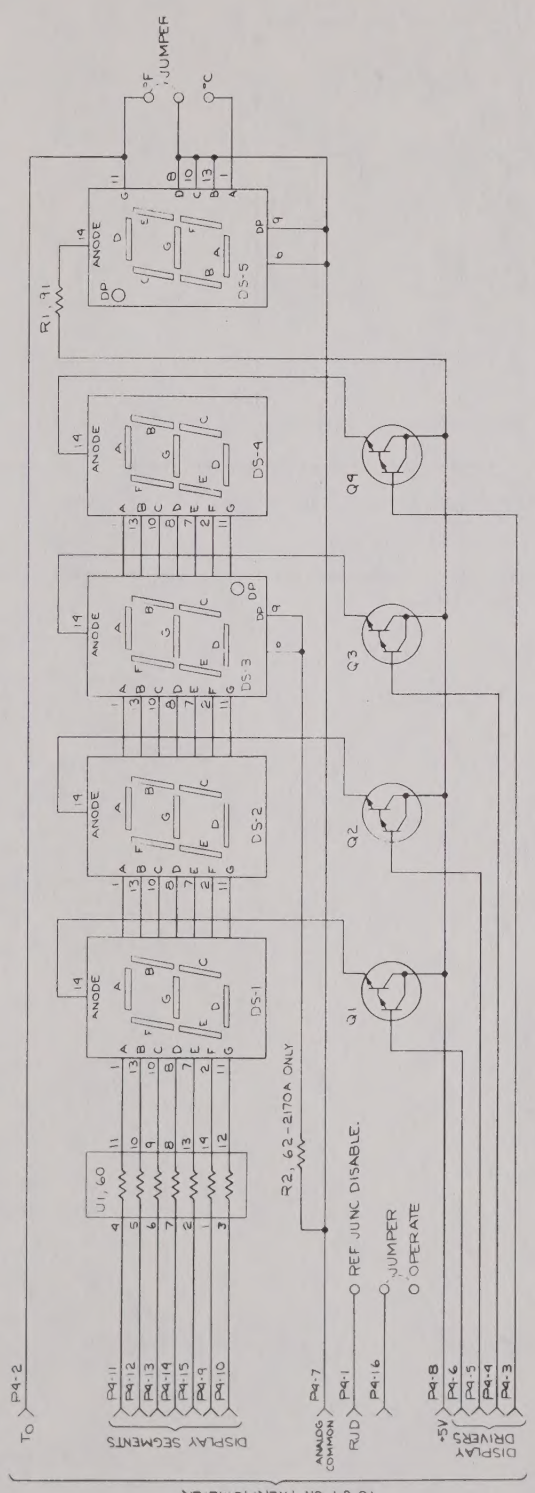

NOTES:
1. UNLESS OTHERWISE SPECIFIED ALL RESISTANCES ARE IN OHMS AND ALL CAPACITANCES ARE IN MICROFARADS.
2. ○ DENOTES CALIBRATION ADJ POINTS. ALL POINTS ARE SCREWDRIVER ADJUST.
3. ALL RESISTORS ARE 1/4W, 5% UNLESS OTHERWISE NOTED.
4. ALL GRAPHIC SYMBOLS IN ACCORDANCE WITH ANSI Y32.14 AND Y32.2.

Figure 8-4. A2 DISPLAY PCB ASSEMBLY SCHEMATIC (2165A-1003)

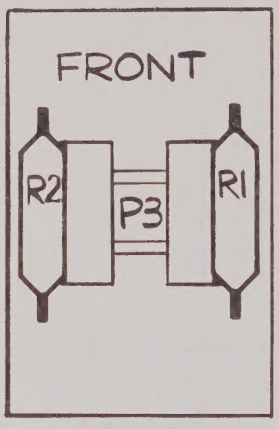

Figure 8-5. A3 TYPE SELECT PCB ASSEMBLY COMPONENT LOCATION (2160A-1612)

TYPE	R1	R2
R	324Ω	69.5Ω
S	324Ω	70.0Ω
B	143Ω	JUMPER
C	590Ω	164.3Ω
J	10.7K	619Ω
K	3.74K	481.4Ω
T	3.74K	483.7Ω
E	53.6K	732Ω

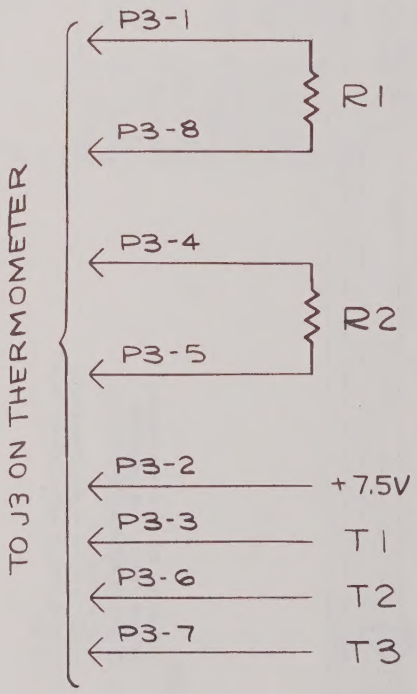

TYPE	T1	T2	T3
R	1	1	1
S	1	1	0
B	1	0	1
C	1	0	0
J	0	1	1
K	0	1	0
T	0	0	1
E	0	0	0

1 = +7.5V
0 = OPEN

Figure 8-6. A3 TYPE SELECT PCB ASSEMBLY SCHEMATIC (2160A-1012)